

# INSTRUMENTS AND INDICATORS

The indicators and warning lights are located within and below the instruments. Their functions are described in the tables on the following pages.


## USA model:

Odometer and tripmeter read in miles.

## Canadian model:

Odometer and tripmeter read in kilometers.

- (1) Tripmeter
- (2) Speedometer
- (3) Odometer
- (4) Tachometer
- (5) Tachometer red zone
- (6) Coolant temperature gauge
- (7) Side stand indicator
- (8) Oil pressure warning light
- (9) Turn signal indicator
- (10) Neutral indicator
- (11) High beam indicator
- (12) Tripmeter reset knob

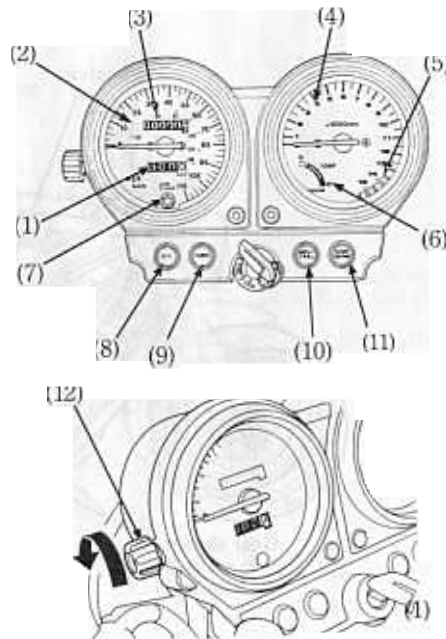

(Ref.No.)	Description	Function
(1)	Tripmeter	Shows mileage per trip
(2)	Speedometer	Shows riding speed.
(3)	Odometer	Shows accumulated mileage.
(4)	Tachometer	Shows engine rpm.
(5)	Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>CAUTION:</b></p> <p>* The red zone indicates the maximum limits of engine speed and running the engine in the red zone may adversely affect its service life.</p>
(6)	Coolant temperature gauge	Shows coolant temperature (See page 15).
(7)	Side stand indicator	<p>Lights when the side stand is put down.</p> <p>Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 76 ) is activated.</p>