

High Air Temperature

35°C (95°F) or above

1. Do not use the choke.
2. Open the throttle slightly.
3. Start the engine.

Low Air Temperature

10°C (50°F) or below

1. Follow steps 1 – 2 under “Normal Air Temperature.”
2. Warm up the engine by opening and closing the throttle slightly.
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever is at Fully OFF (B).

CAUTION:

- * **Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.**
- * **Extended use of the choke may impair piston and cylinder wall lubrication.**

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the engine stop switch OFF and push the choke lever forward to Fully OFF (B). Open the throttle fully and crank the engine several times. Wait 10 seconds, then turn the engine stop switch ON and follow the “High Air Temperature” Starting Procedure (page 42).