

# Part Number Index

Part Number	Grid	Page	Part Number	Grid	Page	Part Number	Grid	Page
83700-323-020E	E6	85	90033-323-000	C8	41	90310-KA3-711	F9	115
83700-323-020KB	E6	85	90034-323-000	C8	41		G3	127
83700-323-020LV	E6	85	90043-323-000	B2	5		G8	137
83700-323-020TC	E6	85	90044-323-000	B2	5	90315-504-000	E6	85
83700-323-020TB	E6	85	90081-246-000	B6	13	90321-315-670	D2	53
84101-323-671	F2	101	90084-323-000	C12	49	90327-968-000	D2	53
84101-374-670	F2	101	90107-323-000	E10	93	90354-268-000	F2	101
84701-341-670XW	F6	109	90104-323-000	G2	125	90355-369-000	D2	53
	F9	115	90108-283-000	E10	93	90425-300-000	B2	5
84705-310-000	E6	85	90108-323-000	G2	125	90433-283-000	C5	35
84706-286-000	G2	125	90111-562-000	D3	55	90442-035-000	B6	13
84706-341-000	F6	109	90114-268-020	O3	55	90451-216-000	C5	35
	F9	115	90114-300-000	G8	137	90451-286-000	C5	35
84706-378-000	F9	115	90114-310-000	D2	53	90451-292-000	B2	5
87121-300-030	E6	85	90116-283-010	D8	65	90452-323-000	B2	5
87121-323-000	E6	85	90116-333-721	O8	65	90453-286-003	C5	35
87122-300-030	E6	85	90119-300-006	F2	101	90454-200-000	C5	35
87122-323-000	E6	85	90121-300-000	F2	101	90455-374-000	B9	19
87124-374-000	E6	85	90121-390-000	F2	101	90456-323-000	C5	35
87311-516-000	E6	85	90121-426-000	F2	101	90457-500-000	C5	35
87311-634-600	E6	85	90122-300-020	E2	77	90458-292-000	C5	35
87504-028-670	F2	101	90123-300-000	D8	65	90458-323-010	B9	19
87505-374-710	F2	101	90125-223-000	E2	77	90459-323-010	B9	19
87506-374-670	G2	125	90127-323-000	F2	101	90460-323-010	B9	19
87507-374-670	F2	101	90133-286-000	F2	101	90461-286-000	C5	35
87507-374-671	F2	101	90143-300-000	G8	137	90462-323-000	C5	35
87512-371-670	F2	101	90145-300-010	G8	137	90471-333-000	B9	19
87560-323-670A	E6	85	90154-341-670	F6	109	90474-704-000	D2	53
87560-323-670B	E6	85	90154-374-670	F9	115	90481-250-000	B6	13
87560-323-671ZA	E6	85	90155-369-000	D2	53	90485-001-000	B2	5
87560-375-680A	E6	85	90162-283-000	F6	109	90485-035-000	B2	5
87560-375-680ZA	E6	85		F9	115		C12	49
88100-333-004	D2	53	90162-292-000	F6	109	90501-310-000	D2	53
88100-333-610	D2	53		F9	115	90501-374-003	G2	125
88100-371-980	D2	53	90165-323-000	G8	137	90503-283-000	D8	65
88110-333-611	D2	53	90192-377-671	F9	115	90512-300-000	E6	85
88120-333-004	D2	53	90206-250-000	B6	13		F1	101
88120-333-610	D2	53	90236-300-000	B2	5	90513-323-000	F2	101
88120-333-611	D2	53		E10	93	90514-323-000	E10	93
89010-323-010	G2	125	90304-323-670	D8	65	90514-374-700	G2	125
89010-390-000	G2	125	90305-300-000	E2	77	90514-700-000	E7	87
89101-ME5-670	G2	125	90305-333-000	E2	77	90518-921-010	D2	53
89101-300-010	G2	125	90306-268-000	E2	77	90522-300-010	G8	137
89216-323-000	G2	125	90306-425-670	E2	77	90523-292-000	E2	77
			90309-315-000	F2	101	90524-030-000	F2	101
			90309-357-000	G8	137	90524-323-000	E2	77
			90310-KA3-711	B3	7	90526-268-000	E2	77
				B7	15	90532-323-000	C1	27
				B10	21	90543-273-000	D8	65
				C3	55	90544-283-000	D8	65
				E7	87	90545-300-000	G8	137
				E11	95	90545-323-700	D6	13
				F3	103	90555-700-000	C5	35
				F6	109	90581-310-000	F6	109

[9]

# Part Number Index

Part Number	Grid	Page	Part Number	Grid	Page	Part Number	Grid	Page
90581-310-000	F9	115	91259-VMO-000	B10	21	92000-06016-1A	D9	67
90581-701-000	E7	87	91259-300-000	B8	137		E7	87
	F3	103	91259-333-000	G8	137		F3	103
	G2	125	91261-323-000	E2	77	92000-06020	D9	67
90581-831-650	E7	87	91262-323-000	E7	77		E2	77
	F3	103	91301-200-000	B2	5		G2	125
	G2	125	91301-268-020	C1	27	92000-06025	D9	67
90582-703-000	G2	125	91301-323-000	B2	5		E7	87
90602-259-010	C5	35	91301-426-000	B2	5		G3	127
90652-GMB-650	B2	5	91301-426-010	E2	5	92000-06028	F3	103
90753-283-000	E2	77	91301-704-000	B10	21		G8	137
90841-001-000	G2	125	91302-001-020	B3	7	92000-06040	B7	7
90899-323-610	F3	103	91302-026-000	C8	41		E7	87
91001-MMB-911	C5	35	91302-250-010	C1	27	92000-06040-0A	B3	7
91001-116-008	C5	35	91302-300-000	E2	77		E7	87
91001-436-003	C5	35	91304-286-000	B3	7	92000-06045	B3	7
91002-K14-991	C5	35	91305-323-000	B7	15	92000-06045-0A	B3	7
91002-283-000	C5	35	91306-703-000	C6	37	92000-06050	B3	7
91002-283-003	C5	35	91309-035-000	B3	7	92000-08028-0A	E10	93
91002-286-000	C5	35	91309-306-000	C1	27	92000-08040-0A	E10	93
91002-323-000	C5	35	91309-425-003	C1	27		F3	103
91008-374-003	C5	35	91310-426-000	B3	7		G3	127
91022-374-003	C5	35	91312-MG7-003	C1	27	92000-08065-0A	G3	127
91101-377-000	C5	35	91314-MA6-005	B3	7	92000-08100-0A	G3	127
91103-259-000	C6	37	91316-300-005	C8	41	92000-10025-0B	D6	61
91103-374-003	C6	37	91318-ME5-003	B7	15	92000-10035-0A	D9	67
91201-283-005	C6	37	91318-300-013	B3	7		E11	95
91201-292-003	C6	37	91319-300-000	C8	41	92000-10040-0A	E11	95
91201-300-003	B6	13	91319-323-000	B3	7	92020-06020	C6	37
91201-323-005	B6	13	91354-702-000	B10	21	92020-06022	B10	21
91202-216-000	C6	37	92000-05014-0A	G2	125	92022-06022	B10	21
91202-216-003	C6	37	92000-05020-0B	F6	109	92100-06015-0A	C1	27
91202-302-000	C6	37		F9	115		C6	37
91202-302-010	C6	37	92000-05025-0A	F9	115		D9	67
91202-426-003	C6	37	92000-06010	D9	67		E7	87
91204-286-003	B9	19	92000-06012	C6	37		F3	103
91204-286-005	B9	19		E7	87	92101-05025-0A	F9	115
91205-HB2-771	C6	37		F3	103	92101-06010-0A	D9	67
91205-HB2-772	C6	37		G2	125	92101-06012	C6	37
91205-035-303	C6	37	92000-06012-02	C1	27		E7	87
91205-283-010	C6	37	92000-06014	C6	37		F3	103
91205-283-015	C6	37		F3	103		G2	125
91206-333-003	B9	19	92000-06016	C1	27	92101-06012-0A	C6	37
91207-374-000	C6	37		C6	37		E7	87
91211-286-003	B2	5		D9	67		F3	103
91252-300-003	E2	77		E7	87		G2	125
91255-KMB-003	D8	65		F3	103	92101-06012-0B	C1	27
91255-MB6-013	D8	65	92000-06016-0A	C1	27	92101-06014-0A	C6	37
91255-300-023	D8	65		C6	37		F3	103
91255-300-033	D8	65		D9	67	92101-06016-0A	C1	27
91255-323-013	D8	65		E7	87		C6	37
91255-344-003	D9	67		F3	103		D9	67
91255-434-013	D9	67	92000-06016-1A	C1	27		E7	87
91256-096-651	B2	5		C6	37		F3	103

# Part Number Index

Part Number	Grid	Page	Part Number	Grid	Page	Part Number	Grid	Page
92101-06020-0A	B9	67	93482-06025	B8	137	93600-06016-0G	E7	87
	E2	77	93482-06025-00	B8	137	93600-06018	C6	37
	G2	125	93500-03006-0A	E7	87	93700-03025-0B	F6	109
92101-06025-0A	B9	67		F9	115	93700-03015-0A	E2	77
	E7	87	93500-03008-0A	B9	67	93700-03016-0A	E2	77
	G3	127	93500-03008-0H	F9	115	93700-03020-0B	B9	67
92101-06028-0A	F3	103	93500-03010-0A	C10	45	93700-06010-02	B3	7
	G8	137	93500-03012-3B	B6	61	93700-06025-0B	F6	109
92101-06040-0A	B3	7	93500-04012-0A	C10	45		F9	115
	E7	87	93500-04020-0A	E7	87	93700-06025-02	F6	109
92101-06045-0A	B3	7	93500-04055-4J	F0	109		F9	115
92101-08028-0A	E10	93		F9	115	93700-06032	B10	21
92101-08040-0A	E11	95	93500-05006-0A	B3	7	93700-06032-0B	B10	21
	F3	103	93500-05008-0A	F6	109	93700-06032-02	B10	21
	G3	127	93500-05012-0A	B10	21	93901-25080	E7	87
92101-08100-0A	B3	7		C10	45	93901-25310	C8	41
92101-10025-0B	B6	61	93500-05016-0A	C10	45	93901-26110	C8	41
92101-10040-0A	E11	95	93500-05016-0B	B6	61	94000-06000-0S	B3	7
92200-06016-0A	C1	27	93500-05016-0G	E11	95		B7	15
	C6	37	93500-05020-0A	B3	7		B10	21
	D9	67		G3	127		D3	55
	E7	87	93500-05025-0A	B3	55		E7	87
	F3	103	93500-05032-0A	B3	55		E11	95
			93500-06012	C1	27		F3	103
92200-06025	B8	137		C11	47		F6	109
92200-06025-0A	B8	137		C1	27		F9	115
92200-06032	C6	37	93500-06012-0A	C1	27		G3	127
92200-06035-0A	B8	137		C11	47		G8	137
92200-10050-0A	G3	127	93500-06012-00	C1	27		G3	127
92200-10080-0A	G3	127		C11	47	94001-05000-0S	C11	47
92201-06025-0A	B8	137	93500-06016	B3	7		D9	67
92600-08080-0B	F3	103		C1	27	9401-06000-0S	B4	9
92700-08050-3B	B9	67	93500-06020	B3	7		B7	15
92700-08050-30	D9	67		C1	27		B10	21
92800-12000	C8	41	93500-06025	B3	7		D3	55
92900-08028-3B	D9	67	93500-06028	C1	27		E7	87
93000-06028	E11	95	93500-06028-0A	C1	27		F3	103
93000-06028-0A	E11	95	93500-06032	B10	21		F6	109
93000-06028-0B	F6	109		C1	27		F10	117
93000-06028-02	F6	109		E7	87		G3	127
93000-06035-0B	F9	115	93500-06032-0A	B10	21		D3	55
93000-06035-02	F9	115		C1	27		E7	87
93000-08050-0A	G3	127		E7	87	94001-06000-0S	B4	9
93000-08055-0A	G3	127	93500-06035	C1	27		B7	15
93000-08056-0B	D2	53	93500-06035-0A	C1	27		B10	21
93000-08074-0B	D2	53	93500-06040	B3	7		D3	55
93000-08080-0B	F3	103	93500-06040-0A	B3	7		G3	127
93000-10032-0A	F3	103	93500-06055	C1	27		E11	95
93100-06028-0B	F6	109	93500-06055-0A	C1	27		F6	109
93100-08040-0B	D2	53	93500-06065	C1	27		F7	111
93100-10032-0A	F3	103	93500-06075	B10	21		F10	117
93101-06028-0B	F6	109	93500-06080	B10	21		G3	127
93101-06035-0B	F9	115	93500-06080-0A	B10	21		G8	137
93101-08040-0B	D5	55	93600-06016	C11	47	94001-06008-0S	B4	9
93200-08032-0A	G3	127	93600-06016-0A	C11	47		B7	15

# Part Number Index

Part Number	Grid	Page	Part Number	Grid	Page	Part Number	Grid	Page
94001-06008-0S	B10	21	94050-08000	B2	5	94102-08000	B4	129
	D3	55		E10	93	94102-10000	D10	69
	E7	87	94050-08000-0S	B2	5		E11	95
	E11	95		E10	93			69
	F3	103	94101-03000	D9	67	94103-06800	E7	87
	F7	111	94101-05000	B10	21	94108-18000	G8	137
	F10	117		G3	127	94109-12000	C8	41
	G3	127	94101-06000	B4	9	94111-03000	C11	47
	G8	137		B10	21	94111-05000	C11	47
94001-06070	D6	61		C1	27		D3	55
94001-06070-0S	D6	61		D9	67		D6	61
94001-06200-0S	B4	9		E7	87		D10	69
	B7	15		E11	95		G4	129
	B10	21		F3	103	94111-06000	C2	29
	D3	55		F7	111		E8	89
	E7	87		F10	117		E11	95
	E11	95		G3	127		G4	129
	F3	103		G9	139		G9	139
	F7	111	94101-06080	B4	9	94111-06700	D6	61
	F10	117		B10	21	94111-08000	D6	61
	G3	127		C1	27		D10	69
	G8	137		D9	67		E11	95
94001-08000-0S	D6	61		E8	89		G4	129
	E11	95		E11	95		G9	139
	F3	103		F4	105	94111-10000	D6	61
	G3	127		F7	111		E11	95
	G8	137		F10	117		F4	105
94001-08020-0S	D3	55		G3	127		F7	111
94001-10000-0S	E11	95		G9	139		G4	129
	F7	111	94101-06200	C2	29	94111-12000	F10	117
94001-12000-0S	F10	117	94101-06700	D6	61		G4	129
94002-06000-0S	G3	127	94101-06800	B4	9	94201-16150	E11	95
	G9	139		B10	21	94201-16220	G9	139
94002-08000-0S	F3	103		C2	29	94201-16250	E11	95
94002-10000-0S	D2	101		D9	67	94201-20150	B10	21
94021-06020	D6	61		E8	89	94201-20180	F4	105
94030-06000	B4	9		E11	95	94201-20200	F4	105
	F6	109		F4	105	94201-20220	F4	105
	F10	117		F7	111	94201-20250	F4	105
	D3	55		F10	117	94201-20320	F4	105
	E7	87		G3	127	94201-20350	F4	105
	E11	95		G9	139	94201-25200	E2	77
	F3	103	94101-08000	D9	67	94201-25250	E2	77
	F7	111		E11	95		E11	95
	F10	117		F4	105	94201-25300	E2	77
	G3	127		G4	129		E12	97
	G8	137		G9	139	94201-29220	F4	105
94030-08000	D9	67	94101-08200	D6	61	94201-40300	E2	77
94030-10000	E2	77		F4	105	94251-05000	D6	61
	E11	95		F7	111	94251-06000	F8	89
	G3	127		F10	117	94251-08000	F4	105
94030-12000	G3	127	94101-10200	D6	61		B10	21
94050-06000	F10	117		F4	105		C8	41
	G3	127	94101-12001	G4	129	94301-12180	B4	9

## Part Number Index

Part Number	Grid	Page	Part Number	Grid	Page	Part Number	Grid	Page
94302-06100	.....C9	43	95020-11500	.....D8	65	99003-20000	.....G4	129
94302-10160	.....B4	9	95020-61630	.....G4	129	99003-30000	.....G4	129
	.....C9	43	95700-06022-00	.....B7	15	99003-40000	.....G4	129
94303-08140	.....C6	37	95700-06032-00	.....B4	9	99003-50000	.....G4	129
94310-12000	.....C6	37		.....C9	43	99005-02000	.....G4	129
94310-18000	.....C7	39	95700-06040-00	.....C12	49	99006-12000	.....G4	129
94310-20000	.....C7	39	95700-06040-00	.....C12	49	99006-26000	.....G5	131
94310-25150	.....B10	21	95700-06050-00	.....C10	21	99007-45000	.....G5	131
94310-30000	.....C7	39	95700-06055-00	.....B12	29	99008-02000	.....G2	125
94521-48000	.....D10	69		.....C2	29	99124-076-0380	.....C11	47
94601-15000	.....B7	15		.....C12	49	99202-601-1000	.....C11	47
94608-40000	.....C2	29	95700-06065-00	.....B4	9			
	.....C9	43	95700-06100-00	.....C12	49			
94608-50000	.....D10	69	95700-06105-00	.....C12	49			
95001-35330-40	.....C11	47	95700-08100-00	.....C12	49			
95001-55170-40	.....E8	89	95700-10035	.....D9	67			
95001-55180-40	.....E8	89	95700-10035-00	.....D9	67			
95001-55260-40	.....E8	89	95701-06022-00	.....B7	15			
95001-55280-40	.....E8	89	95701-06032-00	.....C9	43			
95001-55300-40	.....E8	89		.....C9	43			
95002-02070	.....C11	47	95701-06040-00	.....C12	49			
95002-02100	.....E8	89	95701-06050-00	.....C12	49			
95002-70000	.....C9	43	95701-06055-00	.....B11	23			
95005-12420-20	.....B2	5	95701-06055-00	.....C12	49			
95010-16000	.....D1	51		.....C2	29			
	.....G8	137	95701-06065-00	.....B4	9			
95010-16001	.....D1	51	95701-06100-00	.....C12	49			
	.....G8	137	95701-08100-00	.....C12	49			
95011-31000	.....E12	97	95701-10035-00	.....D9	67			
95011-40000	.....G4	129	96100-62050	.....C7	39			
95011-50000	.....G4	129	96100-62050-00	.....C7	39			
95011-62000	.....E12	97	96100-62050-10	.....C7	39			
95012-17000	.....G4	129	96140-63020	.....E2	77			
95012-17001	.....G4	129	96140-63040-10	.....E2	77			
95014-19000	.....F4	105	96140-63050-10	.....E2	77			
95014-41000	.....D10	69	96201-30000	.....F4	105			
95014-61100	.....G4	129	96201-30001	.....F4	105			
95014-61200	.....G4	129	96201-80000	.....F4	105			
95014-71701	.....E12	97	96211-08000	.....D10	69			
95014-71702	.....E12	97	96211-10000	.....G4	129			
95014-72401	.....E12	97	97B11-69245-10	.....E1	75			
95014-72402	.....E12	97	97A31-69246-10	.....E1	75			
95014-73100	.....E12	97	98069-57711	.....B4	9			
95014-73300	.....E12	97	98065-57717	.....B4	9			
95015-25200	.....C3	31	98069-57723	.....B4	9			
95015-32000	.....E12	97	98200-10500	.....G4	129			
95015-42000	.....E12	97	98200-10700	.....G4	129			
95015-52000	.....E12	97	98200-11500	.....G4	129			
95015-62000	.....E12	97	98203-22250	.....F11	119			
95015-72100	.....E12	97	99001-10120	.....G4	129			
95015-82000	.....E12	97	99001-14170	.....G4	129			
95015-83000	.....E12	97	99002-13500	.....G4	129			
95015-91000	.....E12	97	99003-10000	.....G4	129			

## Part Number Index

Part Number	Grid	Page	Part Number	Grid	Page	Part Number	Grid	Page

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
(A)				BATTERY ASSY.	F11	119	16
ADJUSTER K. CHAIN	F4	105	65	BEAM UNIT, SEALED	D4	57	11
ADJUSTER RR SHOCK SPRING	F1	99	22	BEARING A. CONNECTING ROD	B5	11	8
ADJUSTER SPRING	F1	99	22	BEARING A. CRANKSHAFT	B5	11	10
ADJUSTER THROTTLE GRIP	D1	51	16	BEARING B. CONNECTING ROD	B5	11	8
ADVANCER ASSY. SPARK	B9	19	24	BEARING B. CRANKSHAFT	B5	11	10
ARM ASSY. KICK STARTER	F11	119	3	BEARING C. CONNECTING ROD	B5	11	8
	F11	119	2	BEARING C. CRANKSHAFT	B5	11	10
ARM COMP. KICK STARTER	F11	119	3	BEARING COMP. OIL PUMP	C4	33	43
	F11	119	2	BEARING D. CONNECTING ROD	B5	11	8
ARM COMP. L. STEP	E10	93	30	BEARING D. CRANKSHAFT	B6	13	10
ARM COMP. R. STEP	E10	93	27	BEARING BALL, 1600S	C5	35	75
ARM SET A. LINK	C10	45	8	BEARING BALL, 520SHS	C5	35	73
ARM SET B. LINK	C10	45	13	BEARING BALL, 6302U	E2	77	58
ARM RR. BRAKE	D12	73	25	BEARING NEEDLE, 20MM	C3	31	23
ARM RR. BRAKE STOPPER	F1	99	8	BEARING NEEDLE, 20MM	C5	35	76
ARM VALVE ROCKER	B6	13	14	BEARING NEEDLE, 25X29X17	C5	35	74
AXLE FR. WHEEL	D12	73	26	BEARING RADIAL BALL, 6205	C7	39	95
AXLE RR. WHEEL	D11	71	6	BEARING RADIAL BALL, 63-22	C5	35	71
(B)				BEARING RADIAL BALL, 6304U	E2	77	59
BAG, SERVICE BOOK	F5	83	62	BEARING RADIAL BALL, 6305	C5	35	71
BAG, TOOL	E2	125	65	BEARING RADIAL BALL, 6305U	E2	77	60
BAG, TOOL, 20X4MM	E2	125	65	BEARING RADIAL BALL, 6322	C5	35	71
BALANCER, WHEEL	D12	73	29	BEARING SPECIAL BALL, 520S	C5	35	72
BALL, STEEL, #10	G4	129	108	RODY SET, VALVE	E3	79	4
BALL, STEEL, #8	D10	69	62	BOLT A. CYLINDER STUD	C8	41	19
BAND A. AIR CLEANER CONNECTING TUBE	E3	75	18	BOLT B. CYLINDER STUD	C8	41	20
BAND A. CABLE	G4	129	105	BOLT T. WASHER, 6X25	G8	137	45
BAND A2. CABLE	G4	129	106	BOLT BRAKE PEDAL ADJUSTING	E10	93	38
BAND B. AIR CLEANER CONNECTING TUBE	B2	5	24	BOLT CABLE ADJ.	D2	53	23
BAND CLEANER	B2	5	24	BOLT CALIPER ADJ.	G7	135	14
BAND F. BATTERY	G4	129	104	BOLT CALIPER ADJUSTING	G6	133	14
BAND H. BATTERY	G4	129	104	BOLT CALIPER SETTING	D9	67	44
BAND MUFFLER CONNECTING	E9	91	13	BOLT CAP, 6X80	F3	73	53
BAR ASSY. SEAT LOCK	E5	83	57	BOLT CHAIN ADJ.	F3	101	36
BAR ASSY. SIDE STAND	E10	93	22	BOLT CONNECTING ROD	B5	11	6
BAR R. HANDLE	G4	129	120	BOLT DRAIN PLUG, 1/2MM	C8	41	24
BAR B. PILLION STEP	E12	97	68	BOLT FLANGE	D9	67	47
BAR COMP. L. STEP	E10	93	29	BOLT FLANGE, 10X35	D12	49	4
BAR COMP. R. STEP	E10	93	26	BOLT FLANGE, 6X100	C12	49	8
BAR PILLION FOOTPEG	E10	93	37	BOLT FLANGE, 6X105	D7	15	40
BAR SEAT HINGE	E5	83	49	BOLT FLANGE, 6X22	B4	9	57
BAR, SIDE STAND	E10	93	21	BOLT FLANGE, 6X32	C9	43	33
BASE COMP. TAILLIGHT	F5	107	21	BOLT FLANGE, 6X40	C12	49	4
	F8	113	19	BOLT FLANGE, 6X50	C12	49	6
BASE FR. REFLEX REFLECTOR	D7	63	2	BOLT FLANGE, 6X53	B10	21	48
BASE LAMP SOCKET	D1	51	8		C2	29	43
BASE R. FR. TURN SIGNAL	F8	113	2		C12	49	7
BASE TURN SIGNAL	F5	107	3	BOLT FLANGE, 6X65	B4	9	58
	F5	107	2	BOLT FLANGE, 7X54	D2	53	33
				BOLT FLANGE, 6X100	C12	49	10
				BOLT FLANGE, 6X145	C12	49	1

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
BOLT, FLANGE, 6X36	D3	55	35	BOLT, HEX, 6X100	C12	49	2
BOLT, FR. FENDER SETTING	F6	109	36		G3	127	80
	F9	115	34	BOLT, HEX, 6X28	E10	93	42
BOLT, FR. FORK	D8	65	37	BOLT, HEX, 6X32	G3	127	85
BOLT, FR. TURN SIGNAL MOUNT	F6	109	35	BOLT, HEX, 6X35	G8	137	44
	F9	115	33	BOLT, HEX, 6X40	D2	53	35
BOLT, HANDLEBAR CONTROL LEVER PIVOT	D2	53	28		E10	93	43
	G8	137	36		F3	103	52
BOLT, HANDLEBAR LEVER PIVOT	D2	53	28		G3	127	78
BOLT, HEX KNOCK, 7X12	B6	13	31	BOLT, HEX, 6X50	G3	127	83
BOLT, HEX, 6X28	F6	109	39	BOLT, HEX, 6X55	G3	127	84
BOLT, HEX, 10X25	D6	61	32	BOLT, HEX, 6X56	G2	125	33
BOLT, HEX, 10X32	F3	103	54	BOLT, HEX, 6X55S	G3	127	79
BOLT, HEX, 10X35	D9	67	47	BOLT, HEX, 6X74	D2	53	34
	E11	95	44	BOLT, HEX, 6X80	F4	103	53
BOLT, HEX, 10X40	E11	95	45	BOLT, INSTRUMENT SETTING 6MM	D4	57	18
BOLT, HEX, 10X50	G3	127	81	BOLT, KICK ARM	F11	119	4
BOLT, HEX, 10X80	G3	127	82	BOLT, OIL	G8	137	37
BOLT, HEX, 5X14	G2	125	74	BOLT, OIL FILTER CENTER	C8	41	15
BOLT, HEX, 5X20	F6	109	38	BOLT, RR. BRAKE STOPPER ARM	F2	101	39
	F9	115	37		F2	101	39
BOLT, HEX, 5X25	F9	115	37	BOLT, RR. ENGINE HANGER LOWER	G2	125	67
BOLT, HEX, 6X10	D9	67	43	BOLT, RR. ENGINE UPPER	G2	125	68
BOLT, HEX, 6X12	C1	27	29	BOLT, RR. SWINGARM PIVOT	F2	101	37
	C6	37	84	BOLT, SOCKET, 8MM	D8	65	36
	E7	87	79	BOLT, STUD, 10X48MM	E2	77	43
	F3	103	48	BOLT, STUD, 6X32	B2	5	26
BOLT, HEX, 6X14	G2	125	75	BOLT, STUD, 6X40	B2	5	27
	C6	37	85	BOLT, STUD, 6X50	D9	67	48
	F3	103	49	BOLT, TAILLIGHT SETTING	F6	109	36
BOLT, HEX, 6X16	C1	27	30		F9	115	34
	C6	37	86	BOLT, THROTTLE GRIP ADJUSTING	D2	53	21
	D9	67	44	BOLT, UBS, 10X32	C1	27	24
	E7	87	80	BOLT, 8X102	E2	77	42
BOLT, HEX, 6X20	F3	103	50	BOOT, FR. SHOCK	D7	63	21
	C6	37	87	BOOT, MASTER CYLINDER	G7	135	30
	D9	67	45	BOX ASSY. FUSE	F12	121	26
	E2	77	53	BOX ASSY. SPEEDOMETER GEAR	E2	77	40
	G2	125	76	BOX, BATTERY	G1	123	47
BOLT, HEX, 6X22	B10	21	36	BRACKET A. L. MUFFLER	E9	91	10
BOLT, HEX, 6X25	D9	67	46	BRACKET A. R. MUFFLER	E9	91	6
	E7	87	81	BRACKET B. IGNITION COIL	F11	119	11
	G3	127	77	BRACKET B. L. MUFFLER	E9	91	9
	G8	137	43	BRACKET B. PILLION STEP	E12	97	69
BOLT, HEX, 6X28	E11	95	46	BRACKET B. R. MUFFLER	E9	91	5
	F3	103	51	BRACKET, RR. ENGINE HANGER	G1	123	51
	F6	109	39	BRACKET, IGNITION COIL	F11	119	10
	G8	137	42	BRACKET, L. PILLION FOOTPEG	E10	93	35
BOLT, HEX, 6X32	C6	37	88	BRACKET, MAIN SWITCH	G1	123	55
BOLT, HEX, 6X35	F9	115	38	BRACKET, NUMBER PLATE	F6	109	33
BOLT, HEX, 6X40	B3	7	43		F9	115	31
	E7	87	82	BRACKET, R. PILLION FOOTPEG	E10	93	34
BOLT, HEX, 6X45	B3	7	44	BRACKET, RR. ENGINE HANGER	G1	123	52
BOLT, HEX, 6X50	B3	7	45	BRAKE PAD KIT	G9	139	N1

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
BRAKE SHOE KIT	E2	77	N1	CAP ASSY. C. NOISE SUPPRESSOR	F11	119	13
BRIDGE, FORK TOP	D2	53	24	CAP ASSY. NOISE SUPPRESSOR	F11	119	13
BRUSH SET, CARBON	B12	25	16		F11	119	12
BULB, DASH	D1	51	4	CAP B. OIL PATH	C8	41	10
	D4	57	12	CAP COMP. FUEL TANK	E4	81	34
BULB, STOP & TAILLIGHT	F6	109	29	CAP BLEEDER SCREW	G7	135	24
	F9	115	27	CAP CONTROL LEVER	D1	51	19
BULB, TAILLIGHT	F6	109	30		G8	137	35
	F9	115	28	CAP DUST SEAL	F1	99	15
BULB, TURN SIGNAL	F6	109	29	CAP KICK ARM	F11	119	5
	F9	115	28	CAP OIL CUP	G7	135	26
BULB, 12V23 TW 1034	F6	109	29	CAP OIL PATH	B12	25	11
	F9	115	27	CAP STARTING CLUTCH ROLLER SPRING	C4	33	50
BUMPER, RR	F2	101	32	CAP, TACHOMETER	B2	5	19
BUSH, R HANDLEBAR CONTROL LEVER	G7	135	11	CAP VALVE ADJ.	B1	3	16
BUSH, RR SWINGARM PIVOT	F1	99	11	CARBURETOR ASSY.	C10	45	16
BUSH, RR SWINGARM PIVOT THRUST	F1	99	12	CARBURETOR ASSY. A	C10	45	17
BUSH, SWINGARM PIVOT	F1	99	11	CARBURETOR ASSY. B	C10	45	18
BUZZER ASSY., TURN SIGNAL	G1	123	43	CARBURETOR ASSY. C	C10	45	19
				CARBURETOR ASSY. D	C10	45	20
(C)				CASE, AIR CLEANER ELEMENT SEAL	E3	79	20
				CASE, DRIVE CHAIN	F1	99	2
CABLE A, SUB	F12	121	22	CASE, HEADLIGHT	D6	61	27
CABLE ASSY., SPEEDOMETER	D5	59	25	CASE, L. FR. FORK LOWER	D7	63	17
	D5	59	26	CASE, OIL FILTER	C8	41	11
CABLE ASSY., TACHOMETER	D5	59	24	CASE, R. FORK BOTTOM	D7	63	12
	D5	59	23	CASE, RR DAMPER UPPER	F1	99	21
CABLE, COMP. A. THROTTLE	D1	51	1	CENTER COMP. CLUTCH	B8	17	6
CABLE, COMP. B. THROTTLE	D1	51	2	CENTER, GEARSHIFT DRUM	C4	33	32
CABLE, COMP. CLUTCH	D1	51	3	CHAIN, CAM	B6	13	13
CABLE, COMP. SPEEDOMETER	D5	59	26	CHAIN DRIVE	F1	99	5
CABLE, COMP. TAILLIGHT	F5	107	22	CHAIN, PRIMARY DRIVE	C3	31	10
	F8	113	20	CHAMBER COMP. AIR CLEANER	E3	79	19
CABLE, BATTERY GROUND	F12	121	33	CHAMBER SET A. FLOAT	C10	45	6
CABLE, SPEEDOMETER INNER	D6	61	26	CHAMBER SET B. FLOAT	C10	45	9
CABLE, STARTER BATTERY	F12	121	30	CIRCLIP, EXTERNAL 12MM	C6	37	91
CABLE, STOPLIGHT SUB	F6	109	26	CIRCLIP, EXTERNAL 18MM	C7	39	92
	F9	115	24	CIRCLIP, EXTERNAL 20MM	G7	39	93
CABLE, TACHOMETER INNER	D5	59	24	CIRCLIP, EXTERNAL 25MM	B10	21	47
CABLE, TAILLIGHT GROUND	F6	109	25		C5	35	70
	F8	113	23	CIRCLIP, EXTERNAL 30MM	C7	39	94
CABLE, TAILLIGHT SUB	F6	109	24	CIRCLIP, INTERNAL 48MM	D10	69	59
	F8	113	22	CLAMP, CABLE	G6	133	1
CALIPER A	G6	133	5	CLAMP, TACHOMETER CABLE	G2	125	57
CALIPER ASSY.	G6	133	4	CLIP A. FUEL TANK MOULDING	E5	83	41
CALIPER ASSY.	G6	133	4	CLIP B. FUEL TANK MOULDING	E5	83	42
CALIPER B	G6	133	6	CLIP, BREATHER TUBE	B2	5	20
CAM, CLUTCH LIFTER	B9	19	15		E3	79	1
CAM, RR BRAKE	D12	73	22	CLIP, CABLE HARNESS	F12	121	29
CAMSHAFT	B6	13	11	CLIP, COIL WIRE	B2	5	25
CAP A, LEVER	D1	51	19	CLIP, FR BRAKE CABLE	D1	51	12
	G8	137	35	CLIP, GEARSHIFT FORK GUIDE	C4	33	29
CAP ASSY. A. NOISE SUPPRESSOR	F11	119	12	CLIP, OIL DRAIN	B2	5	20
				CLIP, PISTON PIN 15MM	B7	15	39

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
CLIP, TUBE, B10	E8	89	94	COVER, AIR CLEANER ELEMENT	E3	79	27
CLIP, TUBE, B7	C11	47	33	COVER, BATTERY TERMINAL	F12	121	32
CLIP, TUBE, C11	C9	43	32	COVER, BUZZER	G1	123	44
COIL ASSY., IGNITION	F11	119	7	COVER, CABLE HARNESS CONNECTOR	F12	121	25
COIL COMP., FIELD	B12	25	14		F12	121	24
COIL, L. IGNITION	F11	119	9	COVER, CYLINDER HEAD	B1	3	10
COIL, R. IGNITION	F11	119	8	COVER, CYLINDER HEAD SIDE	B1	3	13
COLLAR A, RR FENDER	F6	109	32	COVER, FUSE BOX	F12	121	27
	F9	115	30	COVER, GEAR ROX RETAINER	E1	75	34
COLLAR A, 6.3MM	G6	129	107	COVER, L. FR. FORK UPPER	D7	63	20
COLLAR B, RR AXLE DISTANCE	D11	71	14	COVER, L. SIDE	E6	85	68
COLLAR, BATTERY BOX	G1	123	50	COVER, R. FR. FORK UPPER	D7	63	19
COLLAR, CHAIN CASE	D7	63	4	COVER, R. SIDE	E5	83	67
	F1	99	3	COVER, STARTING MOTOR TERMINAL	F12	121	31
COLLAR, EX. JOINT	E9	91	2	CRANKCASE SET	C8	41	1
COLLAR, RR AXLE DISTANCE	E1	75	32	CRANKSHAFT COMP.	B5	11	9
COLLAR, FR. WHEEL SIDE	D12	73	27	CUP, FUEL STRAINER	E3	79	5
COLLAR, GEARSHIFT DRUM STOPPER	C4	33	36	CYLINDER ASSY., MASTER	D7	135	25
COLLAR, HEADLIGHT CASE	D6	61	28	CYLINDER COMP.	B1	3	3
COLLAR, HEADLIGHT SETTING	D6	61	30	CYLINDER SET, MASTER	G7	135	33
COLLAR, INSTRUMENT SETTING	D5	59	20				
COLLAR, L. ENGINE UPPER	G1	123	54	(D)			
COLLAR, LICENSE PLATE BRACKET	F6	109	34	DAMPER A, RR	D11	71	4
	F9	115	32	DAMPER ASSY., RR	F1	99	20
COLLAR, NUMBER BRACKET SETTING	G2	125	62	DAMPER B, RR	D11	71	5
COLLAR, O-RING	B12	25	10	DAMPER COMP., RR	F1	99	20
COLLAR, R. ENGINE LOWER SIDE	G1	123	53	DAMPER, CAM CHAIN TENSIONER	B6	13	19
COLLAR, RR AXLE DISTANCE	D11	71	13	DIA*HRAGM	G7	135	28
COLLAR, RR BRAKE PANEL SIDE	D11	71	8	DISK B. CLUTCH FRICTION	B8	17	8
COLLAR, RR FENDER	E6	85	69	DISK COMP., FR. BRAKE	E2	77	61
COLLAR, RR SWINGARM CENTER	F1	99	14		G7	135	16
COLLAR, RR WHEEL SIDE	D11	71	7	DISK, CLUTCH FRICTION	B8	17	7
COLLAR, SEAT	E5	83	59	DRIVER 1, PLJIS SCREW	G4	129	115
COLLAR, SEAT LOCK BAR	E5	83	59	DRIVER 2, PLUS SCREW	G4	129	116
COLLAR, STAND RUBBER SETTING	E10	93	24	DRIVER 3, MINUS SCREW	G4	129	117
COLLAR, TAILLIGHT UNIT	F9	115	32	DRUM ASSY., GEARSHIFT	C4	33	30
COLLAR, 22X136	C3	31	6	DRUM, GEARSHIFT	C4	33	31
COLLAR, 25MM	B8	17	5	DUST SEAL, BRAKE CAM	E2	77	41
CONDENSER COMP.	B9	19	26	DUST SEAL, STEERING HEAD	D7	63	23
CONTROL LEVER, R. HANDLEBAR	G8	137	34	DUST SEAL, 22X30X8	E2	77	49
CORD COMP., PILOT LAMP	D1	51	11				
COTTER, LEVER	B6	13	29				
COTTER, VALVE IN	B6	13	29				
COUNTERSHAFT COMP., TRANSMISSION	C3	31	12	(E)			
COVER A, ALTERNATOR	B12	25	3	ELEMENT	E3	79	29
COVER B, ALTERNATOR	B12	25	4	ELEMENT, AIR CLEANER	E3	79	15
COVER COMP., BREATHER	B1	3	11	ELEMENT, OIL ELEMENT	C8	41	12
COVER COMP., DISK	G7	135	21	ELEMENT, OIL FILTER	C8	41	12
COVER COMP., HANDLEBAR LOCK CASE	D8	65	28	EMBLEM, L. FUEL TANK	E6	85	71
COVER COMP., L. CRANKCASE	B12	25	1	EMBLEM, H. FUEL TANK	E6	85	70
COVER COMP., POINTS	B9	19	27	EMBLEM, L. FUEL TANK	E6	85	71
COVER COMP., R. CRANKCASE	B8	17	1				
COVER COMP., STARTING MOTOR	B12	25	19				
COVER, AIR CLEANER	E3	79	21				

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
EMBLEM, R. FUEL TANK	E6	85	70	GASKET, TAILLIGHT LENS	F8	113	21
EMBLEM, SIDE COVER	E6	85	71	GASKET, TURN SIGNAL LENS	F5	107	8
	E6	85	72	GASKET, VALVE	F8	113	5
(F)				GASKET, VALVE BODY	E3	79	14
FELT, OIL	B9	19	22	GASKET, VALVE BODY	E3	79	13
FENDER ASSY. B. RR	F2	101	31	GAUGE, OIL LEVEL	B8	17	3
FENDER B. ASSY. RR	F2	101	31	GEAR, COUNTERSHAFT FOURTH	C3	31	17
FENDER COMP. A. RR	F2	101	29	GEAR, COUNTERSHAFT LOW	C3	31	18
FENDER COMP. FR	D8	65	32	GEAR, COUNTERSHAFT SECOND	C3	31	15
FITTING, GREASE	F4	105	66	GEAR, COUNTERSHAFT THIRD	C3	31	18
FITTING, GREASE, A-45	F4	105	66	GEAR, COUNTERSHAFT TOP	C3	31	17
FITTING, GREASE, B-76	F4	105	67	GEAR, MAIN SHAFT SECOND & THIRD	C3	31	20
FLANGE, FINAL DRIVE	D11	71	12	GEAR, MAINSHAFT FOURTH	C3	31	16
FLAP, FINE	D12	73	18	GEAR, MAINSHAFT TOP	C3	31	19
	E2	77	39	GEAR, PRIMARY DRIVE	C3	31	5
FLASHER	G1	123	41	GEAR, STARTER REDUCTION	C4	33	44
FLOAT SET	C10	45	4	GEAR, STARTING CLUTCH	C4	33	46
FORK ASSY. L. FR	D7	63	16	GEAR, TACHOMETER	B1	3	18
FORK ASSY. R. FR	D7	63	8	GRIP	G4	129	119
FORK, CENTER GEARSHIFT	C4	33	25	GRIP, L. HANDLEBAR	D1	51	18
FORK, L. GEARSHIFT	C4	33	26	GRIP, R. HANDLEBAR	D1	51	17
FORK, R. GEARSHIFT	C4	33	24	GROMMET, A. AIR CLEANER CASE	E3	79	17
FRAME COMP.	G1	123	46	GROMMET, AIR CLEANER CASE	E5	83	66
FUEL LATCH ASSEMBLY, FUEL FILLER CAP	E5	83	45	GROMMET, BRAKE HOSE	G7	135	22
FUSE A	G4	129	111	GROMMET, CABLE	D7	63	5
	G4	129	110		F1	99	1
	G4	129	109		F2	101	30
FUSE, GROMMET	F12	121	28	GROMMET, METER PLATE	D4	57	17
(G)				GUIDE A. OIL	C8	41	2
GARNISH, L. SEAT MOUNTING	E5	83	56	GUIDE B. OIL	C8	41	3
GARNISH, R. SEAT MOUNTING	E5	83	55	GUIDE, BREATHER	G2	125	70
GASKET B. TAILLIGHT BASE	F6	109	27	GUIDE, CAM CHAIN	B6	13	21
	F9	115	25	GUIDE, EX. VALVE	B1	3	2
GASKET SET	C10	45	1	GUIDE, IN. VALVE	B1	3	1
GASKET, ALTERNATOR COVER	B12	25	6	(H)			
GASKET, BREATHER COVER	B1	3	12	HANDLE, EYE WRENCH, 120MM	G4	129	121
GASKET, CYLINDER	B1	3	4	HANDLEBAR	D1	51	13
GASKET, CYLINDER HEAD	B1	3	9	HARNES, WIRE	F12	121	21
GASKET, CYLINDER HEAD COVER	B1	3	17	HARNES, SUB WIRE	F12	121	23
GASKET, EX. PIPE	E9	91	4	HARNES, WIRE	F12	121	21
GASKET, FR. FORK DRAIN VALVE	E8	65	40	HEAD, COMP. CYLINDER	B1	3	5
GASKET, FUEL FILLER CAP	E4	81	36	HEADLIGHT ASSY	D4	57	1
GASKET, FUEL STRAINER CUP	E3	79	10	HINGE, SEAT	E5	83	51
GASKET, OIL PAN	C8	41	6	HOLDER SET A. ADJ.	C10	45	11
GASKET, POINT COVER	B9	19	28	HOLDER SET B. ADJ.	C10	45	12
GASKET, R. CRANKCASE COVER	B8	17	2	HOLDER 1C. FR. FORK AXLE	D10	69	61
GASKET, STARTING MOTOR COVER	B12	25	20	HOLDER, CALIPER	G6	133	12
GASKET, TAILLIGHT LENS	F6	109	23	HOLDER, FR. TURN SIGNAL SOCKET	F5	107	6

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
HOLDER, FR. TURN SIGNAL SOCKET	F8	113	6	LOOK COMP., HANDLEBAR	G2	125	58
HOLDER, MASTER CYLINDER	G7	135	27				
HOLDER, UPPER	D1	51	14				
HORN ASSY.	G1	123	40	(I)			
HOSE A. FR. BRAKE	G7	135	17	MAINSHAFT COMP. TRANSMISSION	C3	31	11
HOSE ASSY. A. FR. BRAKE	G7	135	17	MANFOLD A. IN.	B1	3	7
HOSE B. FR. BRAKE	G7	135	18	MANFOLD B. IN.	B1	3	8
HUB COMP. RR WHEEL	D11	71	10	MARK, BATTERY CAUTION	G2	125	63
HUB, FR. WHEEL	D12	73	28	MARK, DRIVE CAUTION	E6	85	74
HUB, PRIMARY DRIVE SPROCKET	C3	31	9	MARK, TIRE CAUTION	F2	101	34
(J)				MIRROR, L.	D2	53	27
INSULATOR, CARBURETOR	B2	5	23	MIRROR, R.	D2	53	26
(K)				MOTOR ASSY., STARTING	B12	25	15
JET, SECONDARY MAIN	C11	47	35	MOULDING SET, FUEL TANK	E4	81	37
JET, SLOW	C11	47	34	MOULDING, FUEL TANK MIDDLE	E4	81	40
JOINT, BRAKE ARM	E12	97	65	MOULDING, L. FUEL TANK	E4	81	39
JOINT, CALIPER HOLDER	G6	133	7	MOULDING, L. TANK MIDDLE	E5	83	44
JOINT, DRIVE CHAIN	F1	99	6	MOULDING, R. FUEL TANK	E4	81	38
JOINT, EX. PIPE	E9	91	1	MOULDING, R. TANK MIDDLE	E5	83	43
JOINT, THREE WAY	G7	135	19	MUFFLER COMP. 1. EX.	E9	91	4
JOINT, UPPER	F1	99	19	MUFFLER COMP. 2. EX.	E9	91	7
(L)				MUFFLER COMP. 3. EX.	E9	91	8
LABEL, ACCESSORIES & LOADING CAUTION	F2	101	35	MUFFLER COMP. 4. EX.	E9	91	11
LABEL, DRIVE CAUTION	E6	85	74	(N)			
LABEL, MUFFLER CAUTION	F2	101	33	NEEDLE SET, JET	C10	45	3
LENS, FR. TURN SIGNAL	F5	107	5	NET COMP., TOOL TRAY	E5	83	65
	F8	113	3	NUT, B. BRAKE ROD ADJ.	E12	97	66
LENS, TAILLIGHT	F5	107	20	NUT, AXLE, 12MM	E2	77	44
	F8	113	18	NUT, CAP, 6MM	D6	61	37
LEVER COMP., CLUTCH	B8	17	13	NUT, CONNECTING ROD	B5	11	7
LEVER COMP., CLUTCH ADJUSTING	B9	19	16	NUT, EMBLEM CLAMP	E6	85	73
LEVER COMP., L. HANDLE	D1	51	20	NUT, FIXING	D2	53	29
LEVER COMP., R. HANDLEBAR	G7	135	34	NUT, FLANGE, 6MM	F10	117	42
LEVER, TIRE	G3	129	118	NUT, FLANGE, 7MM	G3	127	87
LEVER, VALVE	E3	79	7	NUT, FLANGE, 8MM	D2	53	30
LID, SEAT	E5	83	63		B2	5	28
LID, SEAT LOWER	E5	83	61		E10	93	40
LOCK ASSY., SEAT	E5	83	60	NUT, FR. AXLE	E2	77	44
	G2	125	59	NUT, HEADLIGHT BEAM ADJ.	D4	57	5
LOCK COMP., HANDLEBAR	D8	65	30	NUT, HEX., 10MM	E2	77	55
					E11	95	51
					E11	95	50
					F2	101	26
					F7	111	45
					G3	127	90
					F10	117	43
					G3	127	91
					C11	47	29
					D9	67	51
					B3	7	53

### Description Index

Description	Grd	Page	Ref. No.	Description	Grd	Page	Ref. No.
NUT HEX 6MM	B7	15	38	O-RING 6MM	B10	21	34
	B10	21	42	O-RING 8X3	B3	7	41
	D3	55	38	O-RING 80X1.4	B12	25	18
	D6	61	35	O-RING 61.8X2.0	B3	7	39
	E7	87	88	O-RING 79X2.6	E2	77	50
	E11	95	48	O-RING 89X4.5	C8	41	22
	F3	103	55	O-RING 9.5X1.7	B8	137	41
	F6	109	44	O-RING 92X2	E2	77	51
	F9	115	42	OIL SEAL 10X1.6X4.5	B9	19	33
	G3	127	87	OIL SEAL 12X2.5X4.5	C6	37	79
	G3	127	89	OIL SEAL 13.5X2.4X5	C6	37	80
	G8	137	46	OIL SEAL 14X2.6X5	C6	37	80
	G9	139	48	OIL SEAL 18X2.9X7	B9	19	32
NUT HEX 8MM	D3	55	39	OIL SEAL 30X4.7X8	B6	13	35
	D6	61	36	OIL SEAL 30X4.5X8	B6	13	36
	D9	67	52	OIL SEAL 33X5.7X7	C6	37	81
	E11	95	49	OIL SEAL 34X5.5X9	E2	77	48
	F3	103	57	OIL SEAL 34X8	C6	37	82
	F3	103	56	OIL SEAL 35X4.8X11	B8	65	42
	G3	127	88	OIL SEAL 4.8X1.45X4	B2	5	35
NUT LOCK 10MM	G8	137	47	OPEN END WRENCH 10X12	G4	129	112
NUT LOCK 14MM	F2	101	26	OPEN END WRENCH 14X17	G4	129	64
NUT RR ORNAMENT CLAMP	F2	101	41	OPEN END WRENCH PIN 45MM	G5	131	123
NUT RR SHOCK ABSORBER UPPER	E6	85	73	QUOTER COMP. CLUTCH	B8	17	41
NUT RR WHEEL AXLE	F2	101	40	QUOTER STARTING CLUTCH	C4	33	48
NUT SPEED 3MM	E2	77	45				
NUT STEERING STEM	D8	65	38				
NUT TAPPET ADJ	B6	13	32				
NUT UNIT HOLDER	D4	57	8				
				PAD COMP A	G6	133	8
				PAD COMP B	G6	133	9
				PAD SET BRAKE	G6	139	N1
				PAIN OIL	C8	41	5
				PANEL COMP RR BRAKE	D12	73	19
				PEDAL BRAKE	E9	91	15
				PEDAL GEAR CHANGE	F11	119	1
				PIECE AIR CLEANER JOINT	E4	81	32
				PIECE FENDER MOUNT	D8	65	33
				PIECE OIL LOCK	D7	63	14
				PIN A DOWEL 8X14	B10	21	46
				PIN B DOWEL 10X16	C8	41	28
				PIN B BRAKE ROD JOINT	E12	97	67
				PIN B DOWEL 10X16	B4	9	56
				PIN C DOWEL 8X10	C9	43	30
				PIN B FUEL FILLER CAP	E4	81	35
				PIN B PILLION FOOTPEG	E12	97	70
				PIN C DOWEL 8X14	C6	37	90
				PIN C PILLION FOOTPEG	E12	97	13
				PIN CALPER HOLDER	G6	133	13
				PIN COTTER 1.6X1.5	E11	95	58
				PIN COTTER 1.6X2.2	G9	139	64
				PIN COTTER 1.6X2.5	E11	95	58
				PIN COTTER 2.0X1.5	B10	21	45

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
PIN. COTTER 20X18	F4	105	63	PLATE. POINT'S SHIFT	B9	19	23
PIN. COTTER 20X20	F4	105	63	PLATE. RATCHET GUIDE	C5	35	56
PIN. COTTER 20X22	F4	105	63	PLATE. SEAL	B9	19	30
PIN. COTTER 20X25	F4	105	63	PLATE. SEAT LOCK MOUNT	E5	83	48
PIN. COTTER 20X32	F4	105	63	PLATE. SPEEDOMETER UNDER	D4	57	16
PIN. COTTER 20X35	F4	105	63	PLATE. SPROCKET SIDE	D11	71	2
PIN. COTTER 25MM	E2	77	56	PLATE. TACHOMETER UNDER	D5	59	27
	E11	95	59	PLATE. TURN SIGNAL BUZZER	G1	123	4
PIN. COTTER 40X30	E2	77	57	PLATE. TACHOMETER UNDER	G4	129	114
PIN. DOWEL 12X18	B4	9	55	PLATE. TURN SIGNAL BUZZER	G1	123	4
PIN. GEARSHIFT DRUM	C4	33	34	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. GEARSHIFT FORK GUIDE	C4	33	34	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. LOCK 5MM	D6	61	65	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. LOCK 6MM	E8	89	91	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. LOCK 8MM	F4	105	64	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. OIL PUMP KNOCK	C6	37	78	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. PISTON	B5	11	4	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. RETURN SPRING	C5	35	58	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. SPRING SET "NS"	C8	41	18	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. STEP BAR JOINT	E10	93	25	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIN. VALVE ROCKER ARM SHAFT COTTER	B6	13	17	PLATE. TURN SIGNAL BUZZER	G4	129	114
PISTON KICK STARTER	C4	33	51	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIPE COMP. BOTTOM	D7	63	13	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIPE. FR. BRAKE	G7	135	20	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIPE. FR. FORK	D7	63	10	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIPE. MAIN STAND PIVOT	E10	93	20	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIPE. THROTTLE GRIP	D1	51	15	PLATE. TURN SIGNAL BUZZER	G4	129	114
PIPE. TRANSMISSION OIL	C8	41	9	PLATE. TURN SIGNAL BUZZER	G4	129	114
PISTON	B5	11	3	PLATE. TURN SIGNAL BUZZER	G4	129	114
PISTON COMP.	G6	133	10	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE A. CYLINDER HEAD SIDE COVER				PLATE. TURN SIGNAL BUZZER	G4	129	114
SETTING	B1	3	14	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE B. CYLINDER HEAD SIDE COVER				PLATE. TURN SIGNAL BUZZER	G4	129	114
SETTING	B1	3	15	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE COMP. CLUTCH LIFTER	B8	17	11	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE SET. STAY	C10	45	14	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. AIR CLEANER	L3	79	25	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. REARING SETTING	C3	31	4	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. CLUTCH SETTING	C4	33	33	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. BRAKE INDICATOR	D12	73	23	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. CLUTCH	B8	17	9	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. CLUTCH LIFTER	B8	17	11	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. CLUTCH PRESSURE	B8	17	10	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. CONTROL LEVER BUSH SETTING	G7	135	32	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. DIAPHRAGM	G7	135	29	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. DRIVE CHAIN CASE	F1	99	4	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. DRIVE SPROCKET FIXING	C3	31	22	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. DRUM STOPPER CAM	C4	33	37	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. ELECTRIC BASE	G1	123	48	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. FUEL VALVE LEVER SETTING	D12	73	12	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. MAIN STAND SPRING	E10	93	19	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. METER SET	D4	57	13	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. METER SETTING	D4	57	13	PLATE. TURN SIGNAL BUZZER	G4	129	114
PLATE. POINT BASE	B9	19	19	PLATE. TURN SIGNAL BUZZER	G4	129	114
				PLATE. TURN SIGNAL BUZZER	G4	129	114

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
ROD CLUTCH LIFTER	B9	19	17	SCREW OVAL 5X15	E2	77	54
ROD RR BRAKE	E9	91	14	SCREW OVA. 5X16	E2	77	54
ROLLER 102X115	C5	35	77	SCREW OVAL 3X20	D9	67	50
ROTOR COMP	B12	25	12	SCREW OVAL 6X10	B3	7	52
ROTOR NEUTRAL SWITCH	B12	25	23	SCREW OVAL 6X25	F6	109	43
RUBBER A RR FENDER	G2	125	60		F9	115	41
RUBBER A SEAT SETTING	E5	83	52	SCREW OVAL 6X32	B10	21	41
RUBBER A STOP STOPPER	E12	97	61	SCREW PAN 3X10	C10	45	23
RUBBER B FR FORK COVER	D7	63	22	SCREW PAN 3X6	E7	87	83
RUBBER B KICK STARTER	G4	129	103		F9	115	39
RUBBER BATTERY BOX	G1	123	49	SCREW PAN 3X8	D9	67	49
RUBBER BATTERY BOX	G2	125	61		F9	115	39
RUBBER CHAIN CASE SETTING	D7	63	3	SCREW PAN 4X12	C10	45	24
RUBBER DAMPER	C3	31	8	SCREW PAN 4X20	E7	87	84
RUBBER FR FORK UPPER COVER	B7	63	18	SCREW PAN 4X25	F9	115	35
RUBBER FUEL TANK FR	E5	87	46	SCREW PAN 4X55	F6	109	40
RUBBER FUEL TANK RR	E5	83	47		F9	115	40
RUBBER JOINT	F2	101	27	SCREW PAN 5X12	B10	21	37
RUBBER KICK STARTER	G4	129	103		C10	45	25
RUBBER METER SETTING	D5	59	21	SCREW PAN 5X16	C10	45	26
RUBBER PILLION FOOTPEG	E10	93	33		D6	61	34
RUBBER REGULATOR CUSHION	F9	115	25		E11	95	47
	F11	119	15	SCREW PAN 5X20	B3	7	47
RUBBER RR FENDER CUSHION	F6	109	31		G3	127	86
RUBBER RR SWINGARM LOWER	F9	115	29	SCREW PAN 5X25	D3	55	36
RUBBER RR TURN SIGNAL MOUNT	F3	107	14	SCREW PAN 5X8	B3	7	46
RUBBER RR TURN SIGNAL SETTING	F8	113	12	SCREW PAN 5X8	F6	109	41
RUBBER SEALING	B3	7	41	SCREW PAN 6X12	C1	27	31
RUBBER SEAT LOCK BAR RUBBER	E5	83	58		C11	47	27
RUBBER SEAT SETTING	E5	83	54	SCREW PAN 6X16	B3	7	48
	E5	83	53		C1	27	32
RUBBER SHIFT PEDAL	G4	129	102	SCREW PAN 6X20	B3	7	49
RUBBER SPEEDOMETER	D4	57	15		C1	27	33
RUBBER STAND	E10	93	23	SCREW PAN 6X25	B3	7	50
RUBBER STEP	E10	93	32	SCREW PAN 6X28	C1	27	34
	E12	97	60	SCREW PAN 6X32	B10	21	38
RUBBER STOPPER	F2	101	28		C1	27	35
RUBBER STOPPER ARM CUSHION	F1	99	9		E7	87	85
RUBBER TURN SIGNAL CUSHION	F5	107	7	SCREW PAN 6X35	C1	27	36
				SCREW PAN 6X40	B3	7	51
				SCREW PAN 6X51	C1	27	37
				SCREW PAN 6X65	C1	27	38
				SCREW PAN 6X75	B10	21	39
				SCREW PAN 6X80	B10	21	40
SAFETY UNIT STARTING	F12	121	20	SCREW RIVET 15X5	G2	125	73
SCREEN FUEL STRAINER	E3	79	9	SCREW SIDE STAND PIVOT	E10	93	10
SCREEN OIL STRAINER	D8	41	7	SCREW TAPPET ADJ	B6	13	30
SCREEN SET A	C10	45	7		C8	41	25
SCREEN SET B	C10	45	10	SCREW TAPPING 5X16	E7	87	87
SCREEN BEAM ADJ	D4	57	3	SCREW TAPPING 5X8	C8	41	26
SCREEN FLAT 6X16	C11	47	28	SCREW TAPPING 6X12	D4	57	7
	E7	87	86	SCREW 3X12	D6	61	33
SCREW FLAT 6X18	C6	37	89	SCREW 6X25	F6	109	43
SCREW OVAL 3X25	F6	109	42				

(S)

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
SCREW 6X25	F9	115	41	SPRING CLUTCH	B8	17	12
SEAL ELEMENT COVER	E3	79	28	SPRING CLUTCH LEVER	B8	17	14
SEAL PISTON	G6	133	11	SPRING FR FORK	D7	63	9
SEAL VALVE STEM	B5	11	1	SPRING FR FORK REBOUND	D7	63	11
SEAT ASSY	E5	83	50	SPRING GEARSHIFT ARM	C4	33	41
SEAT OIL FILTER SPRING	C8	41	13	SPRING GEARSHIFT RETURN	C4	33	42
SEAT RR SHOCK SPRING	F2	101	25	SPRING HANDLEBAR LOCK	D8	65	31
SEAT RR SHOCK SPRING LOWER	F2	101	24	SPRING HEADLIGHT BEAM ADJ	D4	57	4
SEAT VALVE SPRING INNER	B6	13	28	SPRING KICK STARTER	C5	35	57
SEAT VALVE SPRING OUTER	B6	13	27	SPRING KICK STARTER RATCHET	C5	35	54
SET RING 520	C3	31	2	SPRING KICK STARTER STOPPER	F11	119	6
SHAFT COMP. PRIMARY	C3	31	3	SPRING L STEP RETURN	E10	93	31
SHAFT COMP. RR BRAKE PIVOT	E10	93	17	SPRING LAMP SOCKET SETTING	D1	51	10
SHAFT GEARSHIFT FORK	C1	33	28	SPRING OIL FILTER ELEMENT SETTING	C8	41	14
SHAFT STARTER REDUCTION GEAR	C4	33	45	SPRING R FOOTPEG RETURN	E10	93	28
SHAFT VALVE ROCKER ARM	B6	13	16	SPRING RELIEF VALVE	B12	25	29
	B6	13	15	SPRING RR BRAKE SHOE	D12	73	24
SHOCK ABSORBER ASSY. RR	F1	99	17	SPRING RR SHOCK	F1	99	18
SHOE COMP. RR BRAKE	D12	73	21	SPRING SHIFT DRUM STOPPER	C4	33	38
SUPPLER TENSIONER	B6	13	20	SPRING STARTER CLUTCH ROLLER	C4	33	40
SOCKET COMP. HEADLIGHT	D4	57	9	SPRING STARTER PINION SETTING	C4	33	52
SOCKET COMP. L FR TURN SIGNAL	F5	107	10	SPRING STOP SWITCH	G1	123	37
	F8	113	8	SPRING THROTTLE ADJUSTING	D2	53	22
SOCKET COMP. L RR TURN SIGNAL	F5	107	18	SPRING VALVE INNER	B6	13	25
	F8	113	16	SPRING VALVE LEVER	E3	79	11
SOCKET COMP. R FR TURN SIGNAL	F8	113	4	SPRING VALVE OUTER	B6	13	24
SOCKET COMP. R RR TURN SIGNAL	F5	107	16	SPROCKET CAM	B6	13	12
	F8	113	11	SPROCKET DRIVE	C3	31	21
SOCKET PILOT LAMP	D1	51	9	SPROCKET FINAL DRIVEN	D11	71	1
SOCKET R FR TURN SIGNAL	F5	107	4	SPROCKET PRIMARY DRIVEN	C3	31	7
SOCKET TURN SIGNAL	F5	107	6	STAND COMP. MAIN	E10	93	18
SPACER FORK TOP BRIDGE	D2	53	25	STATOR COMP	B12	25	13
SPACER 0.1MM	B9	19	30	STATOR NEUTRAL SWITCH	B12	25	22
SPACER 0.3MM	B9	19	30	STAY A FR FENDER	D8	65	34
SPACER 0.5MM	B9	19	30	STAY B FR FENDER	D8	65	35
SPACER 25MM	C4	33	47	STAY AIR CLEANER	E3	79	22
SPEEDOMETER ASSY	D1	57	14	STAY AIR CLEANER RR	E3	79	24
SPINDLE COMP. GEARSHIFT	C4	33	40	STAY DIODE	F12	121	19
SPINDLE KICK STARTER	C5	35	55	STAY R RR TURN SIGNAL	F5	107	15
SPOKE A FR	E1	75	30		F8	113	13
SPOKE A RR	D11	71	9	STEAD COMP. STEERING	D7	63	24
SPOKE B FR	E1	75	31	STOPPER COMP. SHIFT DRUM	C4	33	35
SPOKE B RR	D11	71	11	STOPPER COMP. SHIFT DRUM NEUTRAL	C4	33	39
SPOKE BS 8X2025	E1	75	31	STOPPER CHAIN ADJUSTER	F1	99	13
SPOKE BS 8X203	E1	75	30	STOPPER L FR TURN SIGNAL	F5	107	13
SPRING A BRAKE ROD	E12	97	64		F8	113	14
SPRING C SIDE STAND	E12	97	63	STOPPER R RR TURN SIGNAL	F8	113	10
SPRING G MAIN STAND	E12	97	62		F8	113	10
SPRING AIR CLEANER ELEMENT	E3	79	16	STOPPER SPRING SEAT	F1	99	23
SPRING BRAKE PEDAL	E9	71	16	STRAINER SET	E3	79	6
SPRING BRAKE ROD	E12	97	64	STRAINER OIL	C8	41	8
SPRING CALIPER ADJ	G7	135	15	SUB WIRE FR STOP SWITCH	G6	133	2
SPRING CARBON BRUSH	B12	25	17	SUSPENSION MAGNETIC SWITCH	G1	123	39
SPRING CHECK VALVE	C8	41	17	SUSPENSION TURN SIGNAL RELAY	G1	123	42



## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
SWINGARM ASSY. RR	F1	99	10	TURN SIGNAL ASSY. R. FR	F5	107	1
SWINGARM COMP. RR	F1	99	10		F5	107	11
SWITCH ASSY. CLUTCH LEVER	D1	51	7		F8	113	7
SWITCH ASSY. COMBINATION	F12	121	35		F8	113	1
SWITCH ASSY. LIGHTING KILL	D1	51	6	TURN SIGNAL ASSY. R. RR	F5	107	17
SWITCH ASSY. OIL PRESSURE	B12	25	21		F5	107	11
SWITCH ASSY. RR. STOP	G1	123	36	TURN SIGNAL R. RR	F5	107	11
SWITCH ASSY. STARTER KILL	D1	51	6		F8	113	9
SWITCH ASSY. STARTER MAGNETIC	G1	123	36				
SWITCH ASSY. STOP	G1	123	36				
SWITCH ASSY. TURN SIGNAL	D1	51	5	(V)			
SWITCH ASSY. TURN SIGNAL HORN	D1	51	5				
SWITCH KIT. MAIN	F12	121	34	VALVE ASSY. FUEL	E3	79	2
SWITCH SET. COMBINATION	F12	121	34		E3	79	3
SWITCH STOP	G6	133	3	VALVE SET. FLOAT	C10	45	2
				VALVE BLEEDER	G7	135	23
(T)				VALVE CHECK	C8	41	16
				VALVE EX	B6	13	23
TACHOMETER ASSY.	D4	57	19	VALVE IN	B6	13	22
TAILLIGHT UNIT	F5	107	19	VALVE OIL CONTROL	B1	3	6
	F8	113	17	VALVE RELIEF	B12	25	8
TANK ASSY. FUEL	E4	81	33	VALVE THROTTLE	C10	45	21
TENSIONER CAM CHAIN	B6	13	18				
THREAD COMP. STEERING HEAD UPPER	D8	65	29	(W)			
TIRE. FR	E1	75	37				
TIRE. RR	D11	71	16	WASHER A. HANDLE HOLDER SETTING	F2	101	44
TIRE. RR WHEEL	D11	71	16	WASHER A. THRUST. 25MM	C5	35	61
TOOL SET	G2	125	64	WASHER A. 65MM	B6	13	34
TRAY TOOL	C10	45	5	WASHER AB. TONGUED	G8	137	39
TUBE ASSY. BREATHING	E5	83	64	WASHER B. THRUST. 25MM	C5	35	67
TUBE ASSY. DRAIN	E3	79	26	WASHER B. THRUST. 25MM	D12	73	20
TUBE ASSY. OVER FLOW	E3	79	31	WASHER BATTERY BREATHING TUBE GUIDE	E10	93	41
TUBE SET. BREATHING	C10	45	22	WASHER BRAKE ANCHOR PIN	D12	73	20
	B2	5	22	WASHER DRAIN PLUG. 12MM	C8	41	27
	B2	5	21	WASHER ELEMENT SETTING	E3	79	23
TUBE SET. PROTECT	C10	45	15	WASHER FOOTPEG	E12	97	72
TUBE. BREATHING	B2	5	21	WASHER HE/ DUGHT CASE	D6	61	29
TUBE. FUEL 5.3X280	E8	89	93	WASHER LOCK. 25MM	C5	35	68
TUBE. MUFFLER CONNECTING	E9	91	12	WASHER OIL BOLT	G8	137	40
TUBE. TIRE	D11	71	17	WASHER PELLION STEP	E10	93	34
	E1	75	38	WASHER PLAIN. 10MM	D6	61	40
TUBE. 12X420	B2	5	21		D10	69	56
TUBE. 3.5X130	C11	47	32		E11	95	54
TUBE. 5.3X170	E8	89	92		F4	105	61
TUBE. 5.3X180	E8	89	92		G9	139	51
TUBE. 5.3X260	E8	89	93	WASHER PLAIN. 12MM	G4	129	95
TUBE. 5.3X280	E8	89	93	WASHER PLAIN. 3MM	D9	67	53
TUBE. 5.3X300	E8	89	93	WASHER PLAIN. 5MM	B10	21	43
TURN SIGNAL ASSY. L. FR	F5	107	17		G3	127	92
	F5	107	9	WASHER PLAIN. 6MM	B4	9	54
	F8	113	7		B10	21	44
TURN SIGNAL ASSY. L. RR	F5	107	11		C1	27	39
	F8	113	15		C2	29	40

## Description Index

Description	Grid	Page	Ref. No.	Description	Grid	Page	Ref. No.
WASHER. PLAIN. 6MM	D6	61	38	WASHER THRUST. 11MM	B2	5	29
	D9	67	54	WASHER THRUST. 14MM	B2	5	34
	E7	87	89		C12	49	3
	E7	87	77	WASHER THRUST. 20MM	C5	35	66
	E11	95	52		C5	35	60
	F3	103	58	WASHER THRUST. 22MM	C5	35	64
	F7	111	46	WASHER THRUST. 25MM	B9	19	29
	F10	117	44		C5	35	69
	G3	127	93	WASHER THRUST. 5MM	B2	5	31
	G9	139	49	WASHER THRUST. 6.5MM	B2	5	33
WASHER. PLAIN. 8MM	D2	53	32	WASHER THRUST. 7MM	B2	5	30
	D6	61	39	WASHER TONGUED. 10MM	E2	77	47
	D9	67	55	WASHER TONGUED. 6MM	C1	27	25
	E11	95	53	WASHER TONGUED. 9MM	G8	137	39
	F4	105	60	WASHER. 10MM	B9	19	31
	F4	105	59	WASHER. 15MM	C5	35	63
	F7	111	47	WASHER. 18.5X34	E2	77	46
	F10	117	45	WASHER. 18MM	C5	35	62
	G4	129	96		E7	87	78
	G4	129	94		F3	103	46
	G9	139	50		G2	125	71
WASHER. RR. SWINGARM PIVOT BOLT	F2	101	45	WASHER. 20MM	F6	109	37
WASHER. SEALING. 6MM	B6	13	33		F9	115	36
WASHER. SPECIAL	B9	19	25	WASHER. 25X33	G2	125	69
WASHER. SPECIAL. 8MM	D8	65	41	WASHER. 6.5X18	D6	61	31
WASHER. SPRING. 12MM	F10	117	46	WASHER. 6X17	B2	5	32
	G4	129	101	WASHER. 6X20	E6	85	76
WASHER. SPRING. 3MM	C11	47	30		F2	101	42
WASHER. SPRING. 5MM	C11	47	31	WASHER. 6X9	F2	101	43
	D3	55	40	WASHER. 7X12	J2	53	31
	D6	61	41	WASHER. 8MM	G2	125	72
	D10	69	57	WRENCH. EYE. 26MM	G5	131	122
	G4	129	97	WRENCH. SPARK PLUG	G2	125	66
WASHER. SPRING. 6MM	C2	29	41				
	C5	35	59				
	D6	61	42				
	E8	89	90				
	E11	95	55				
	G4	129	98				
	G9	139	52				
WASHER. SPRING. 8MM	D6	61	43				
	D6	61	44				
	D10	69	58				
	E11	95	57				
	E11	95	56				
	F4	105	62				
	F7	111	48				
	G4	129	99				
	G4	129	100				
	G9	139	53				
WASHER. STEERING HEAD DUST SEAL	D8	65	27				
WASHER. STEERING STEM	D8	65	39				
WASHER. TANK COLLAR LOCKING	E7	87	77				
WASHER. THRUST	C5	35	65				