


Frame

Table of Contents

Exploded View14-2
Seats14-5
Front Seat Removal14-5
Front Seat Installation...	.14-5
Rear Seat Removal14-5
Rear Seat Installation....	.14-5
Side Covers14-6
Side Cover Removal14-6
Fairings14-6
Upper Fairing Removal.	.14-6
Lower Fairing Removal	.14-6


14-2 FRAME

Exploded View

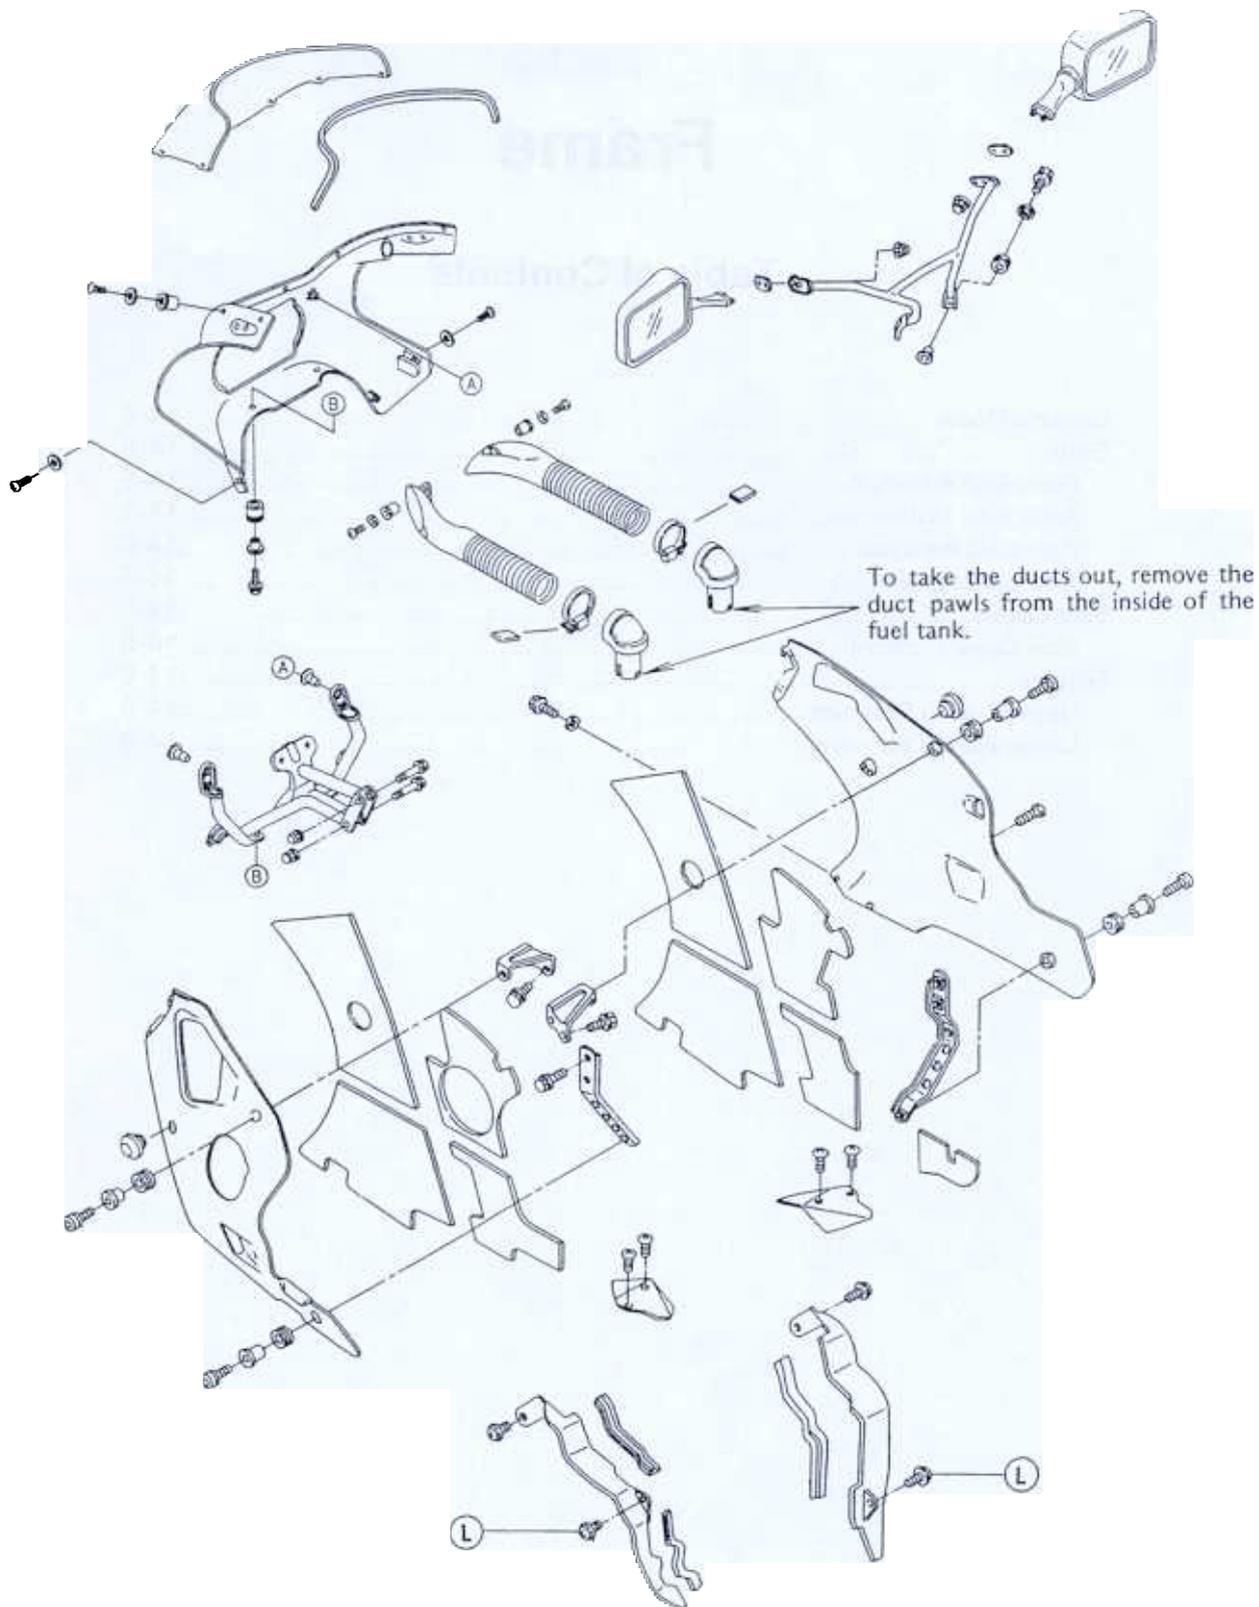


- L** Apply a non-permanent locking agent to the threads.

FRAME

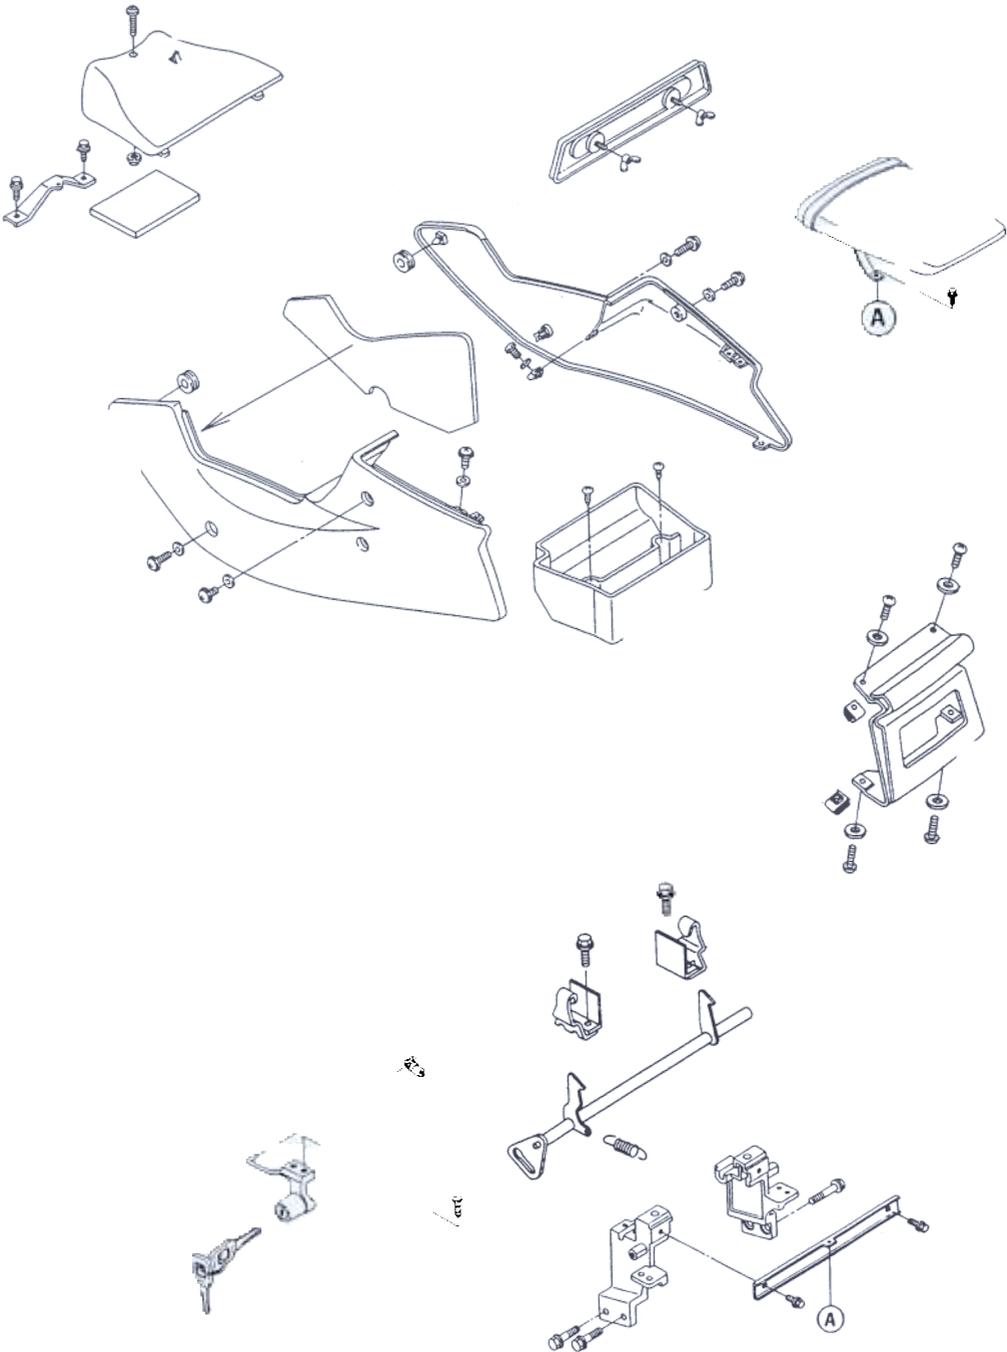

4-4 RAM

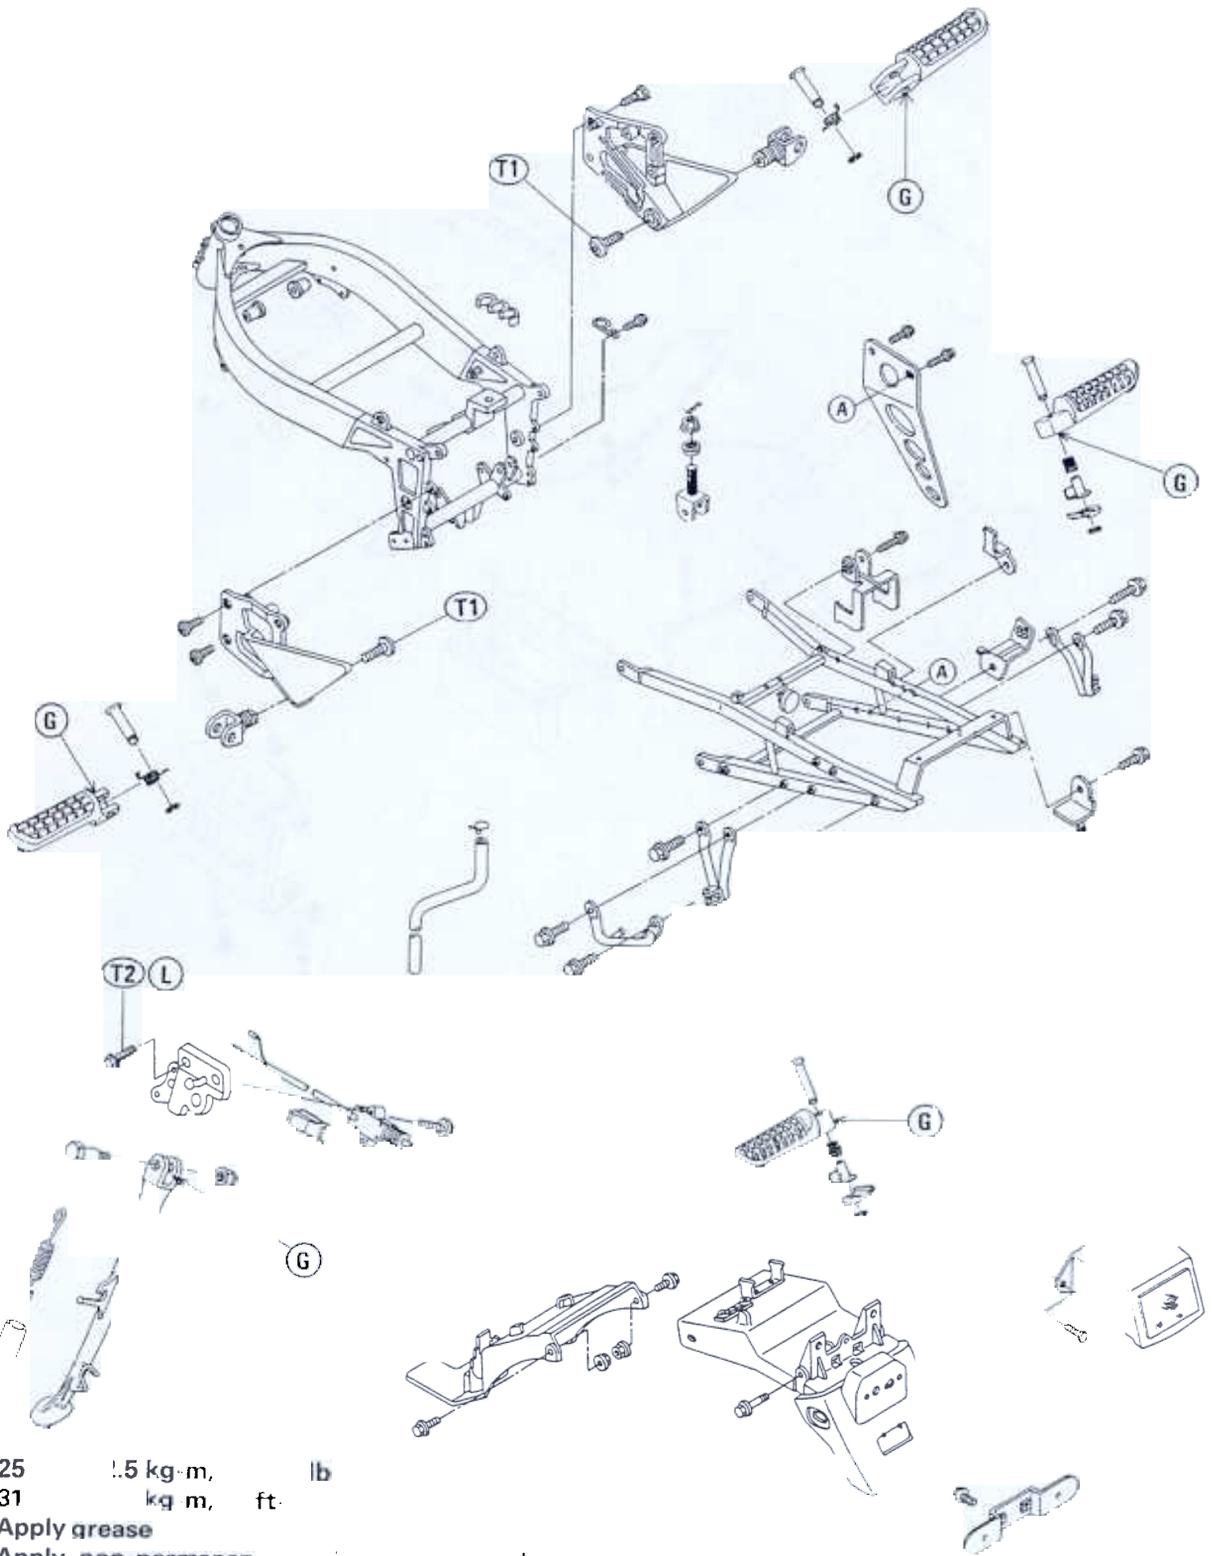


T1 25 1.5 kg-m, lb
 T2: 31 kg m, ft.

Apply grease
 Apply non-permanen ing the
 threads

Seats

Front Seat Removal


- Remove the front seat mounting bolt, move it upward and slide it forward.

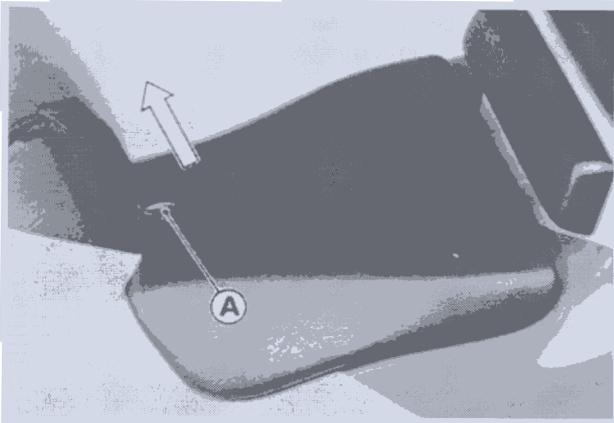

A. Mounting Bolt

Front Seat Installation

- Slip the hooks of the front seat under the brace on the frame.

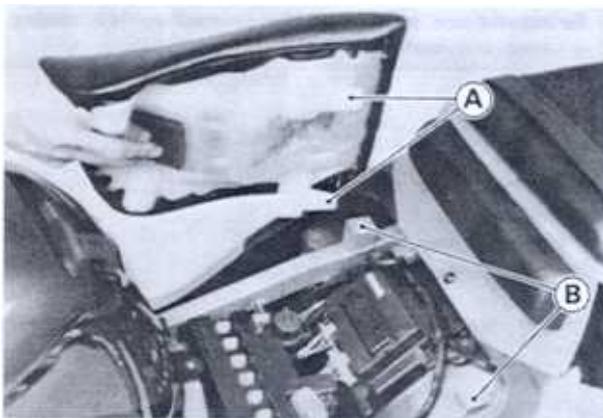


A. Hooks

B. Brace

Rear Seat Removal

- Insert the ignition switch key into the seat lock.
- Turn the key to the right, and pull up on the front of the seat and pull it forward.

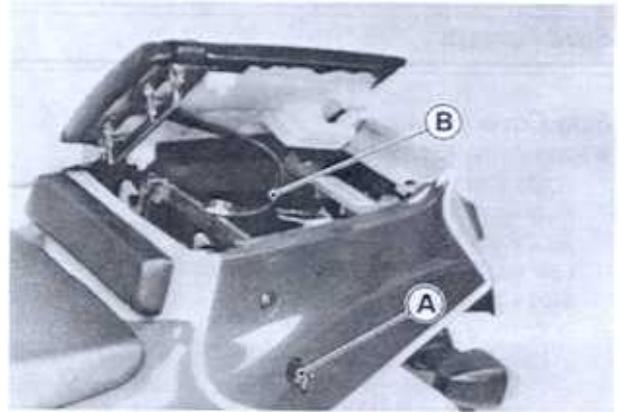


A. Seat Lock

B. Seat Mounting Belt

Rear Seat Installation

- Install the seat mounting belt.
- Slip the hooks of the rear seat under the brace on the frame and put the stoppers of the seat into the holes in the frames.

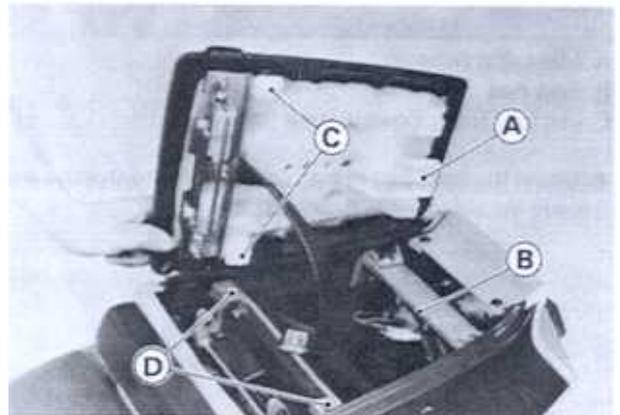

A. Hook

B. Brace

C. Stoppers

D. Holes


- Push down the front part of the seat until the lock clicks.

14-6 FRAME

Side Covers

Side Cover Removal

- Remove the following.
 - Front Seat
 - Rear Seat
 - Seat Pad
 - Left and Right Cover Clamp Screws
 - Side Cover Mounting Screws

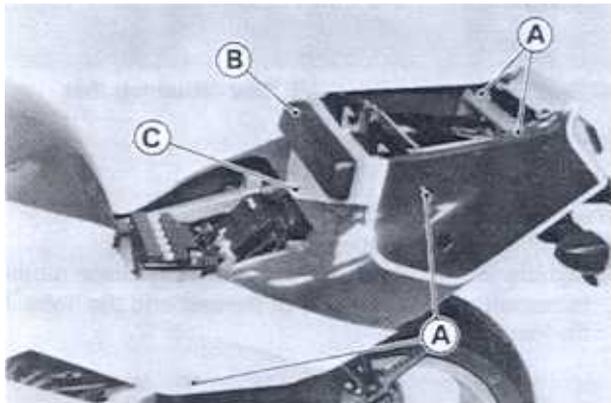


- A. Mounting Screws
- B. Seat Pad
- C. Left and Right Cover Clamp Screws

- Spread the front part of side covers of the both sides and move the side covers backward.

Fairings

Upper Fairing Removal

- Remove the following in the order listed.
 - Rear View Mirror Nuts
 - Upper Fairing Mounting Bolts and Screws
 - Air Duct Clamps (Loosen)
 - Turn Signal Connectors

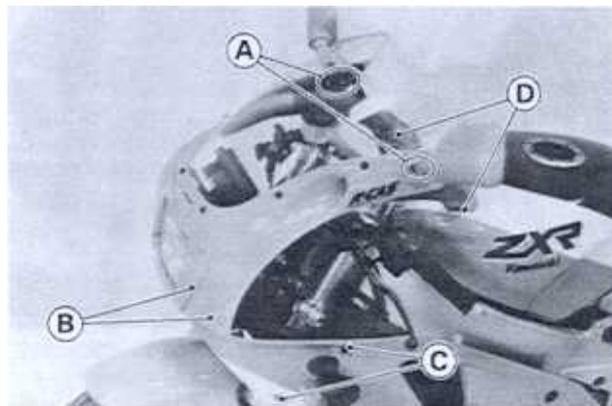

- A. Rear View Mirror Nuts
- B. Fairing Mounting Bolts
- C. Fairing Mounting Screws
- D. Air Duct Clamps

CAUTION

Be careful not to scratch the painted surface during removal or installation.

Lower Fairing Removal

- Remove the following.
 - Lower Fairing Mounting Bolts
 - Upper Fairing Mounting Screws



- A. Mounting Bolts
- B. Mounting Screws
- C. Clamp Bolts (Do not remove.)

NOTE

○ *Remove the lower fairings as assembly.*