


CAM PULSE GENERATOR


REMOVAL/INSTALLATION

Remove the air cleaner housing (page 5-66).

Disconnect the cam pulse generator 2P (Natural) connector.

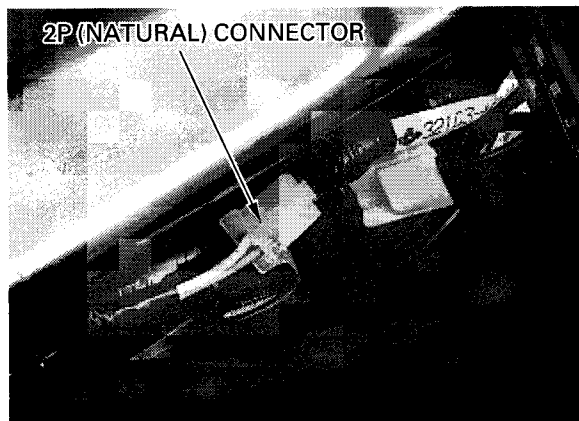


Remove the bolt and cam pulse generator from the cylinder head.

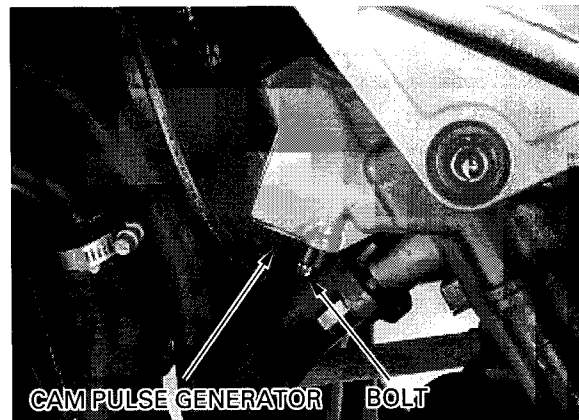

FUEL SYSTEM (Programmed Fuel Injection)

Install the new O-ring onto the cam pulse generator. Install the cam pulse generator into the cylinder head.

Install and tighten the mounting bolt securely.

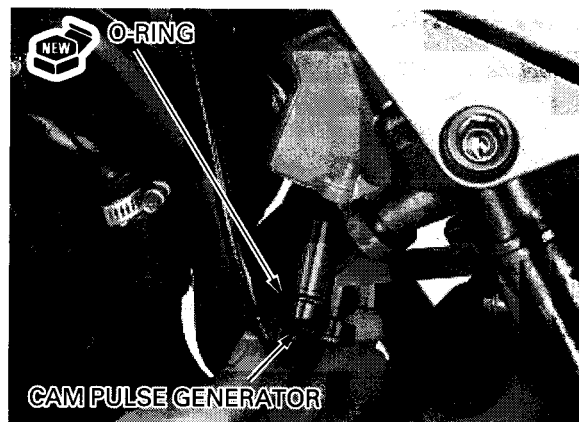

Route the cam pulse generator wire properly, connect the 2P (Natural) connector.

Install the removed parts in the reverse order of removal.

