

ECT SENSOR


Replace the ECT sensor while the engine is cold.

REMOVAL/INSTALLATION

Drain the coolant from the system (page 6-5).
Open and support the front end of fuel tank (page 3-4).

Disconnect the ECT sensor connector from the sensor.

Remove the ECT sensor and sealing washer.

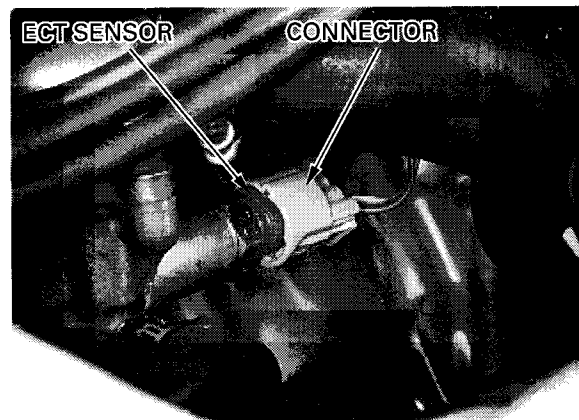

Always replace a sealing washer with a new one.

Install the new sealing washer and ECT sensor.
Tighten the ECT sensor to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m , 17 lbf·ft)

Connect the ECT sensor connector.

Fill the cooling system with recommended coolant (page 6-5).

