

Component key – RD350 LC II model

- | | |
|---------------------------------|--|
| 1 Engine stop switch | 22 Horn switch |
| 2 Lighting switch | 23 Turn signal switch |
| 3 Front brake lamp switch | 24 Headlamp dip switch |
| 4 Temperature gauge sender unit | 25 Headlamp pass switch |
| 5 Frame earth point | 26 Horn |
| 6 Ignition coil | 27 Front left-hand turn signal |
| 7 Servomotor | 28 Ignition switch |
| 8 Turn signal relay | 29 Parking lamp |
| 9 Rear brake lamp switch | 30 Headlamp |
| 10 Turn signal cancelling unit | 31 Instrument light |
| 11 Battery | 32 Instrument light |
| 12 Control unit | 33 Instrument light |
| 13 Oil level sender unit | 34 Temperature gauge |
| 14 Rear right-hand turn signal | 35 Reed switch |
| 15 Tail/stop lamp | 36 Neutral lamp |
| 16 Rear left-hand turn signal | 37 Oil level warning lamp |
| 17 Fuses | 38 High beam indicator |
| 18 Neutral indicator switch | 39 Left-hand turn signal warning lamp |
| 19 Alternator | 40 Right-hand turn signal warning lamp |
| 20 CDI unit | 41 Front right-hand turn signal |
| 21 Regulator/rectifier | 42 Horn |

Component key – RD350 N and F models


- | | |
|---------------------------------|---------------------------------|
| 1 Engine stop switch | 20 Regulator/rectifier unit |
| 2 Lighting switch | 21 Horn switch |
| 3 Front brake lamp switch | 22 Turn signal switch |
| 4 Temperature gauge sender unit | 23 Headlamp dip switch |
| 5 Ignition coil | 24 Headlamp pass switch |
| 6 Turn signal cancelling unit | 25 Front left-hand turn signal |
| 7 Servomotor | 26 Ignition switch |
| 8 Turn signal relay | 27 Parking lamp |
| 9 Rear brake lamp switch | 28 Headlamp |
| 10 Battery | 29 Instrument light |
| 11 Control unit | 30 Tachometer |
| 12 Oil level sender unit | 31 Temperature gauge |
| 13 Rear right-hand turn signal | 32 Reed switch |
| 14 Tail/stop lamp | 33 Neutral indicator light |
| 15 Rear left-hand turn signal | 34 Oil level warning light |
| 16 Fuses | 35 High beam indicator |
| 17 Neutral indicator switch | 36 Turn signal warning light |
| 18 Alternator | 37 Front right-hand turn signal |
| 19 CDI unit | 38 Horn |

Component key – RD350 N II and F II models


- | | | | |
|-------------------------------|--------------------------------|--------------------------------|---------------------------------|
| 1 Lighting switch | 12 Battery | 22 Alternator | 32 High beam indicator |
| 2 Engine stop switch | 13 Rear right-hand turn signal | 23 Horn switch | 33 Oil level warning light |
| 3 Front brake lamp switch | 14 Tail/stop lamp | 24 Turn signal switch | 34 Neutral indicator light |
| 4 Turn signal cancelling unit | 15 Rear left-hand turn signal | 25 Headlamp pass switch | 35 Tachometer |
| 5 Servomotor | 16 Control unit | 26 Headlamp dip switch | 36 Temperature gauge |
| 6 CDI unit | 17 Sidestand switch | 27 Front left-hand turn signal | 37 Reed switch |
| 7 Ignition coil | 18 Oil level sender unit | 28 Ignition switch | 38 Instrument lights |
| 8 Spark plug | 19 Turn signal relay | 29 Headlamp | 39 Front right-hand turn signal |
| 9 Rear brake lamp switch | 20 Fuses | 30 Parking lamp | 40 Horn |
| 10 Regulator/rectifier unit | 21 Neutral indicator switch | 31 Turn signal warning light | 41 Thermo switch |
| 11 Side stand control unit | | | |

Wire colour key


- | | |
|---------------|---------------|
| B Black | O Orange |
| Br Brown | P Pink |
| Ch Dark brown | R Red |
| Dg Dark green | Sb Light blue |
| G Green | W White |
| Gr Grey | Y Yellow |
| L Blue | |

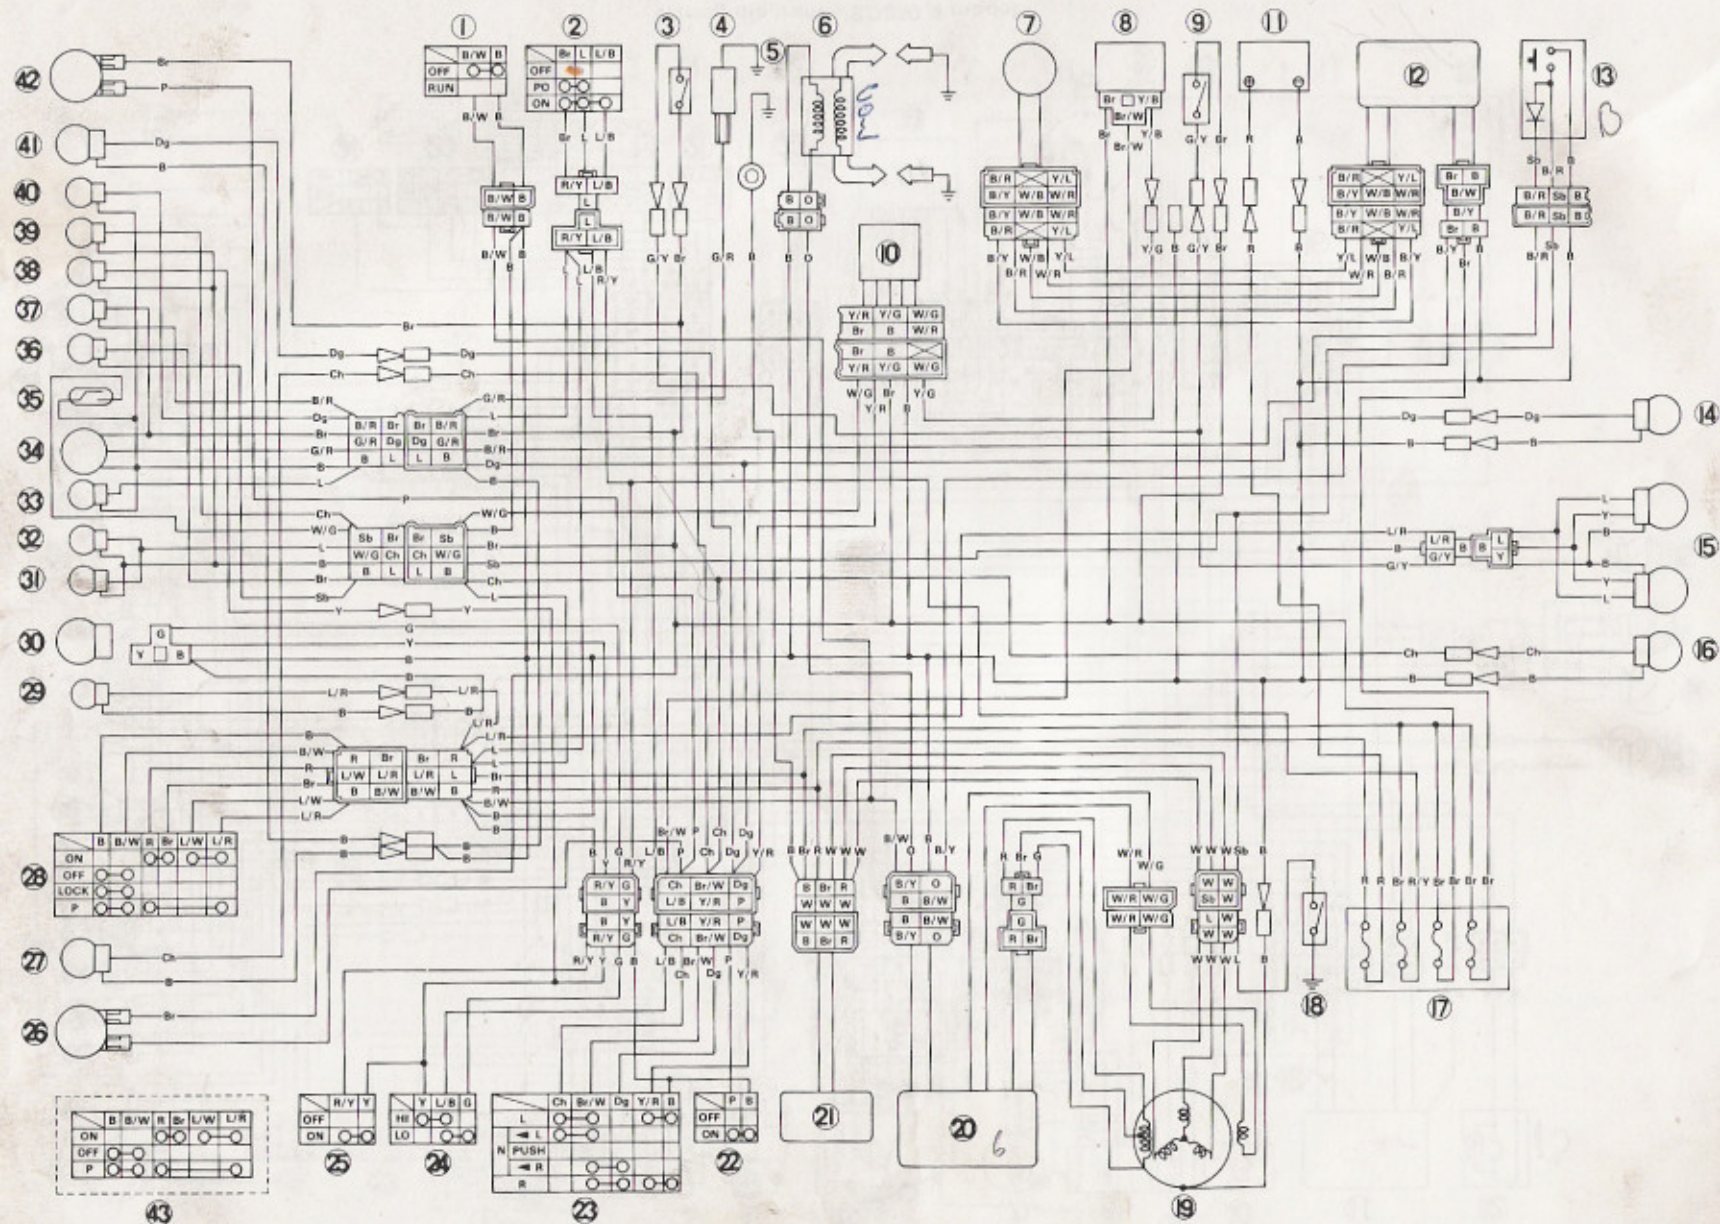


Wiring diagram - RD350 LC II model
See page 164 for key

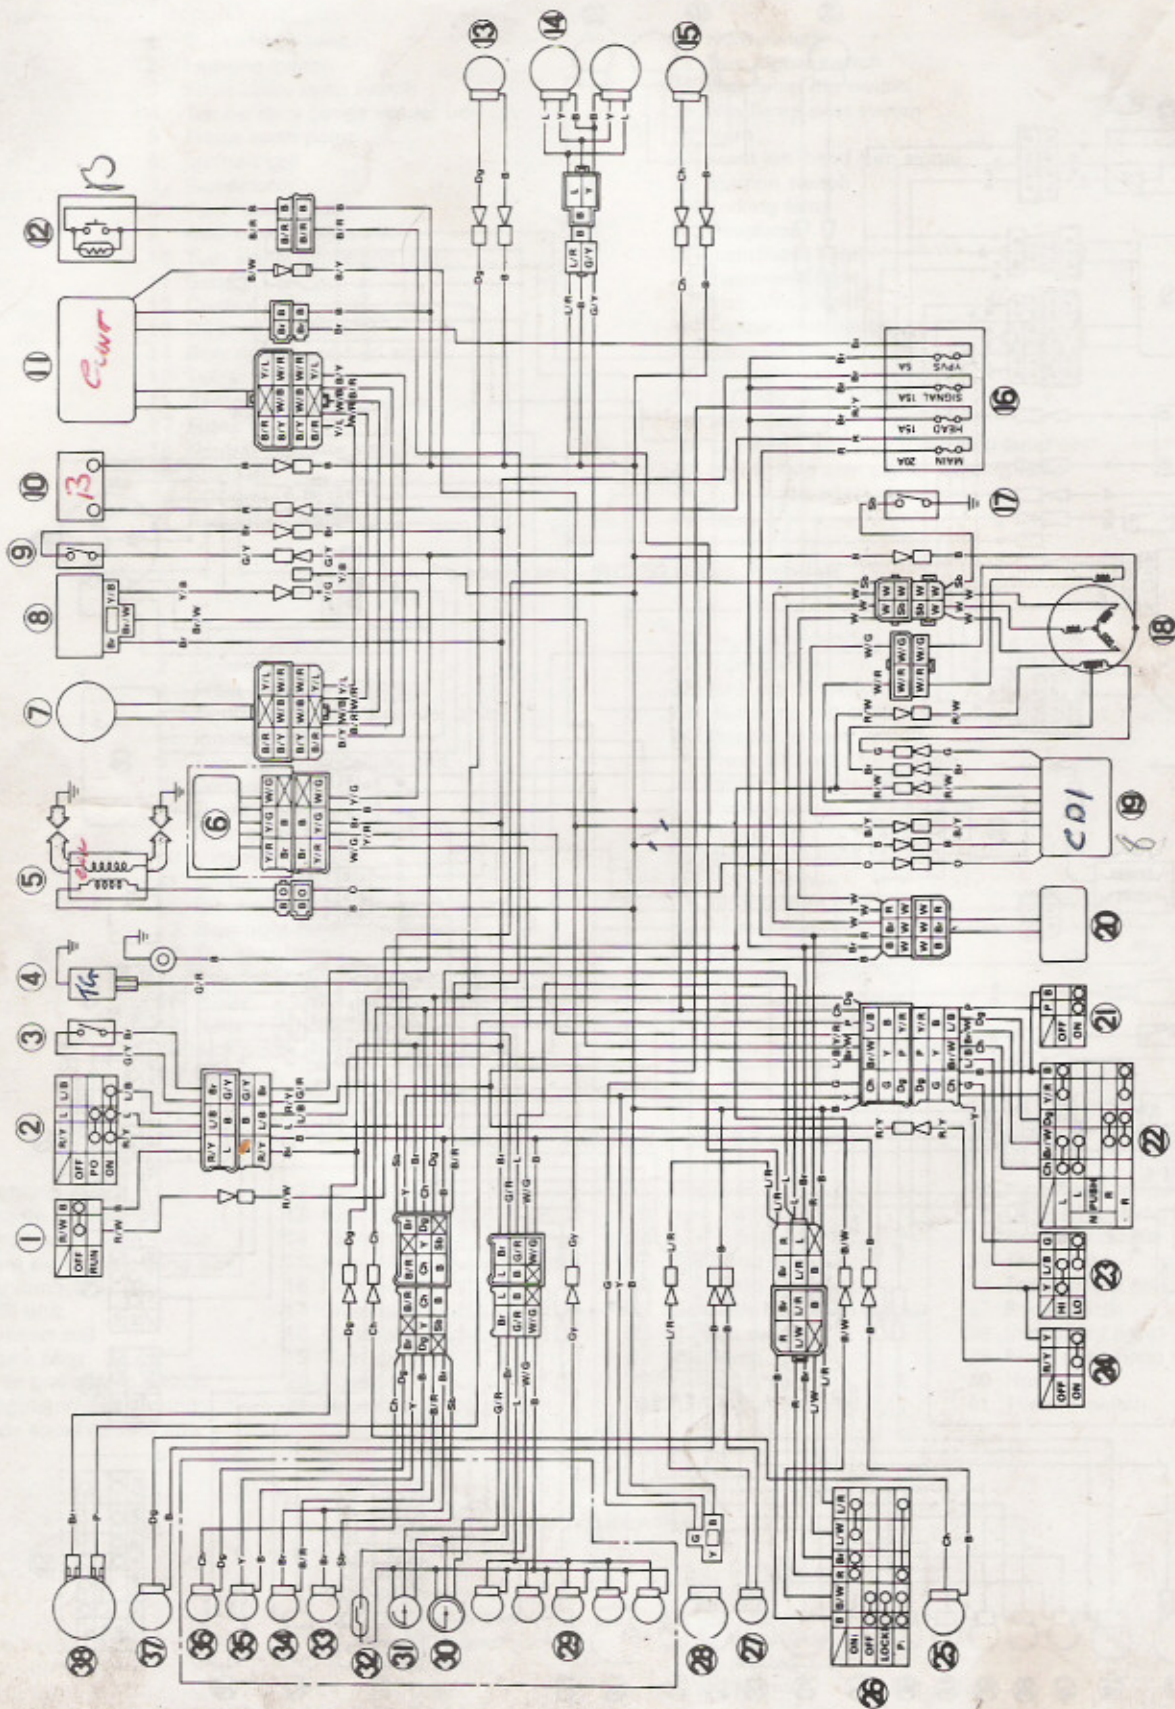

Wiring diagram - RD350 N model
See page 164 for key

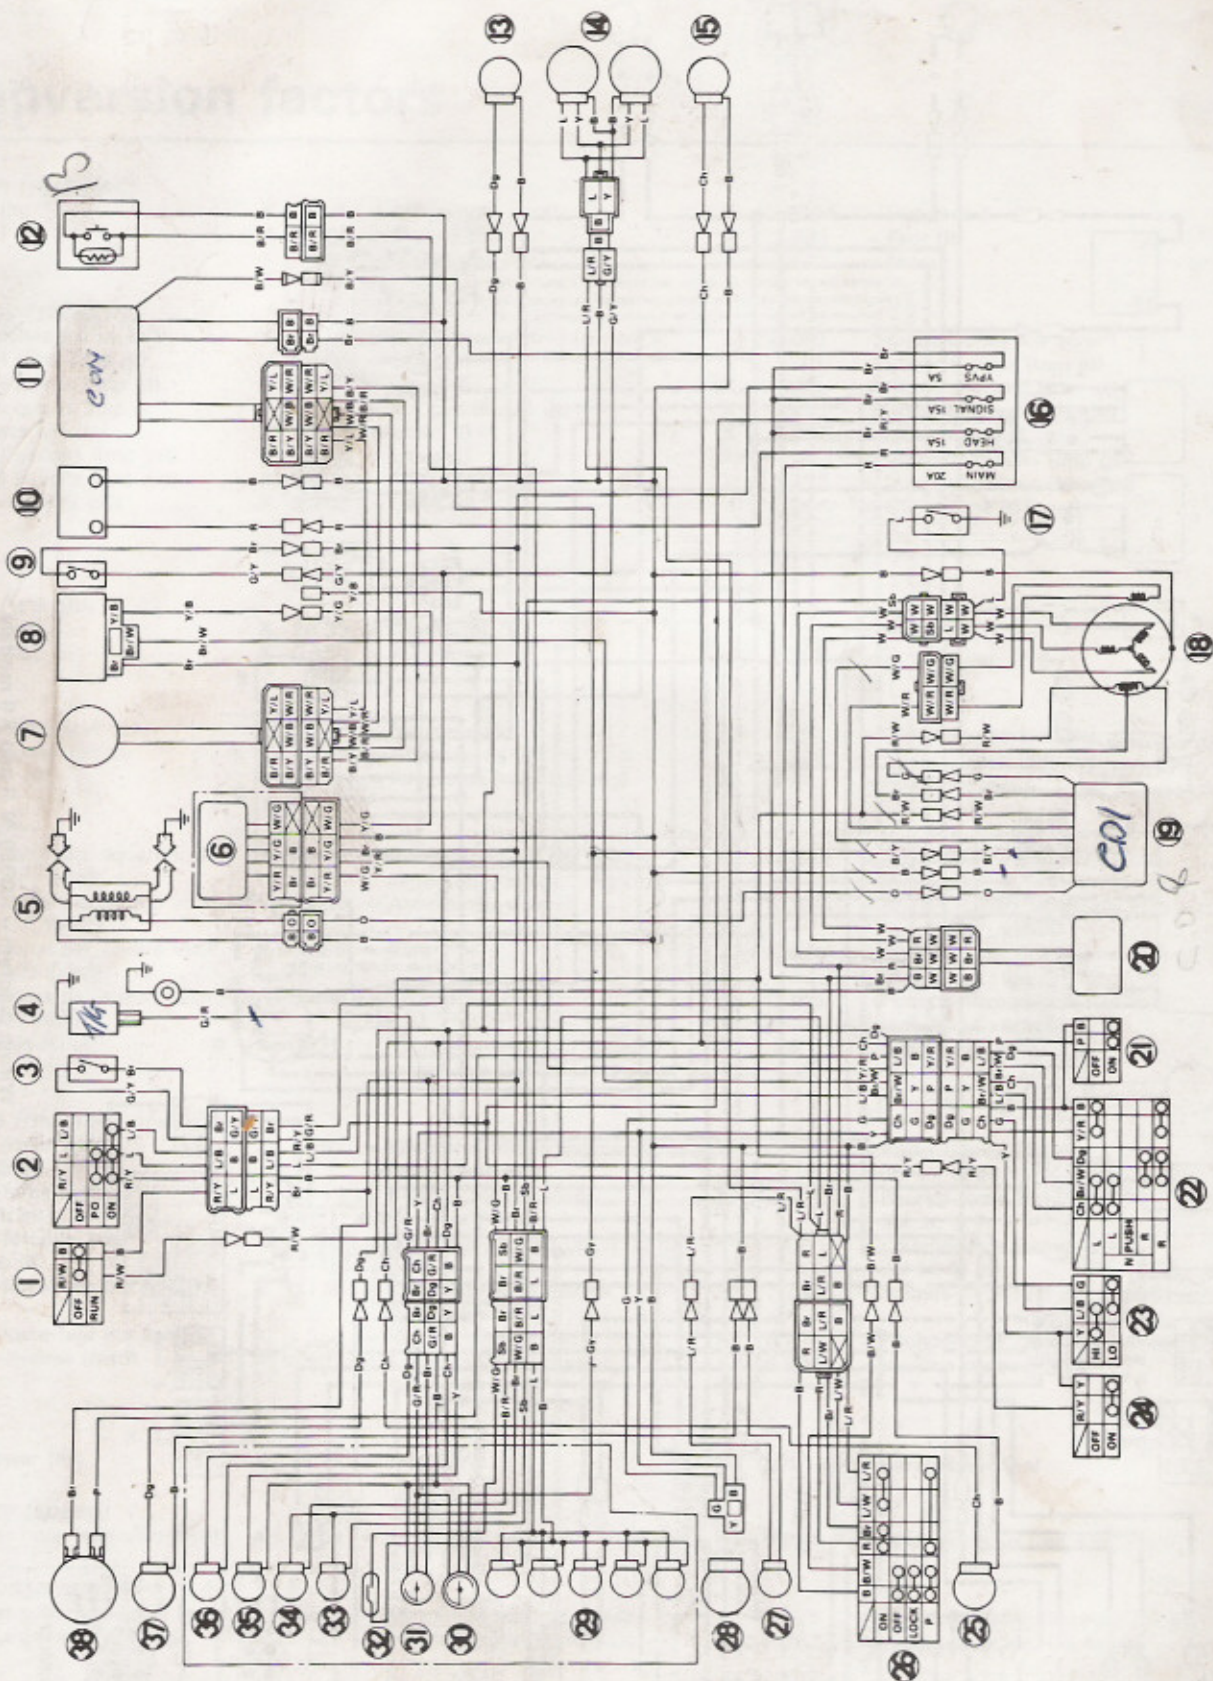

Wiring diagram – RD350 F model
See page 164 for key

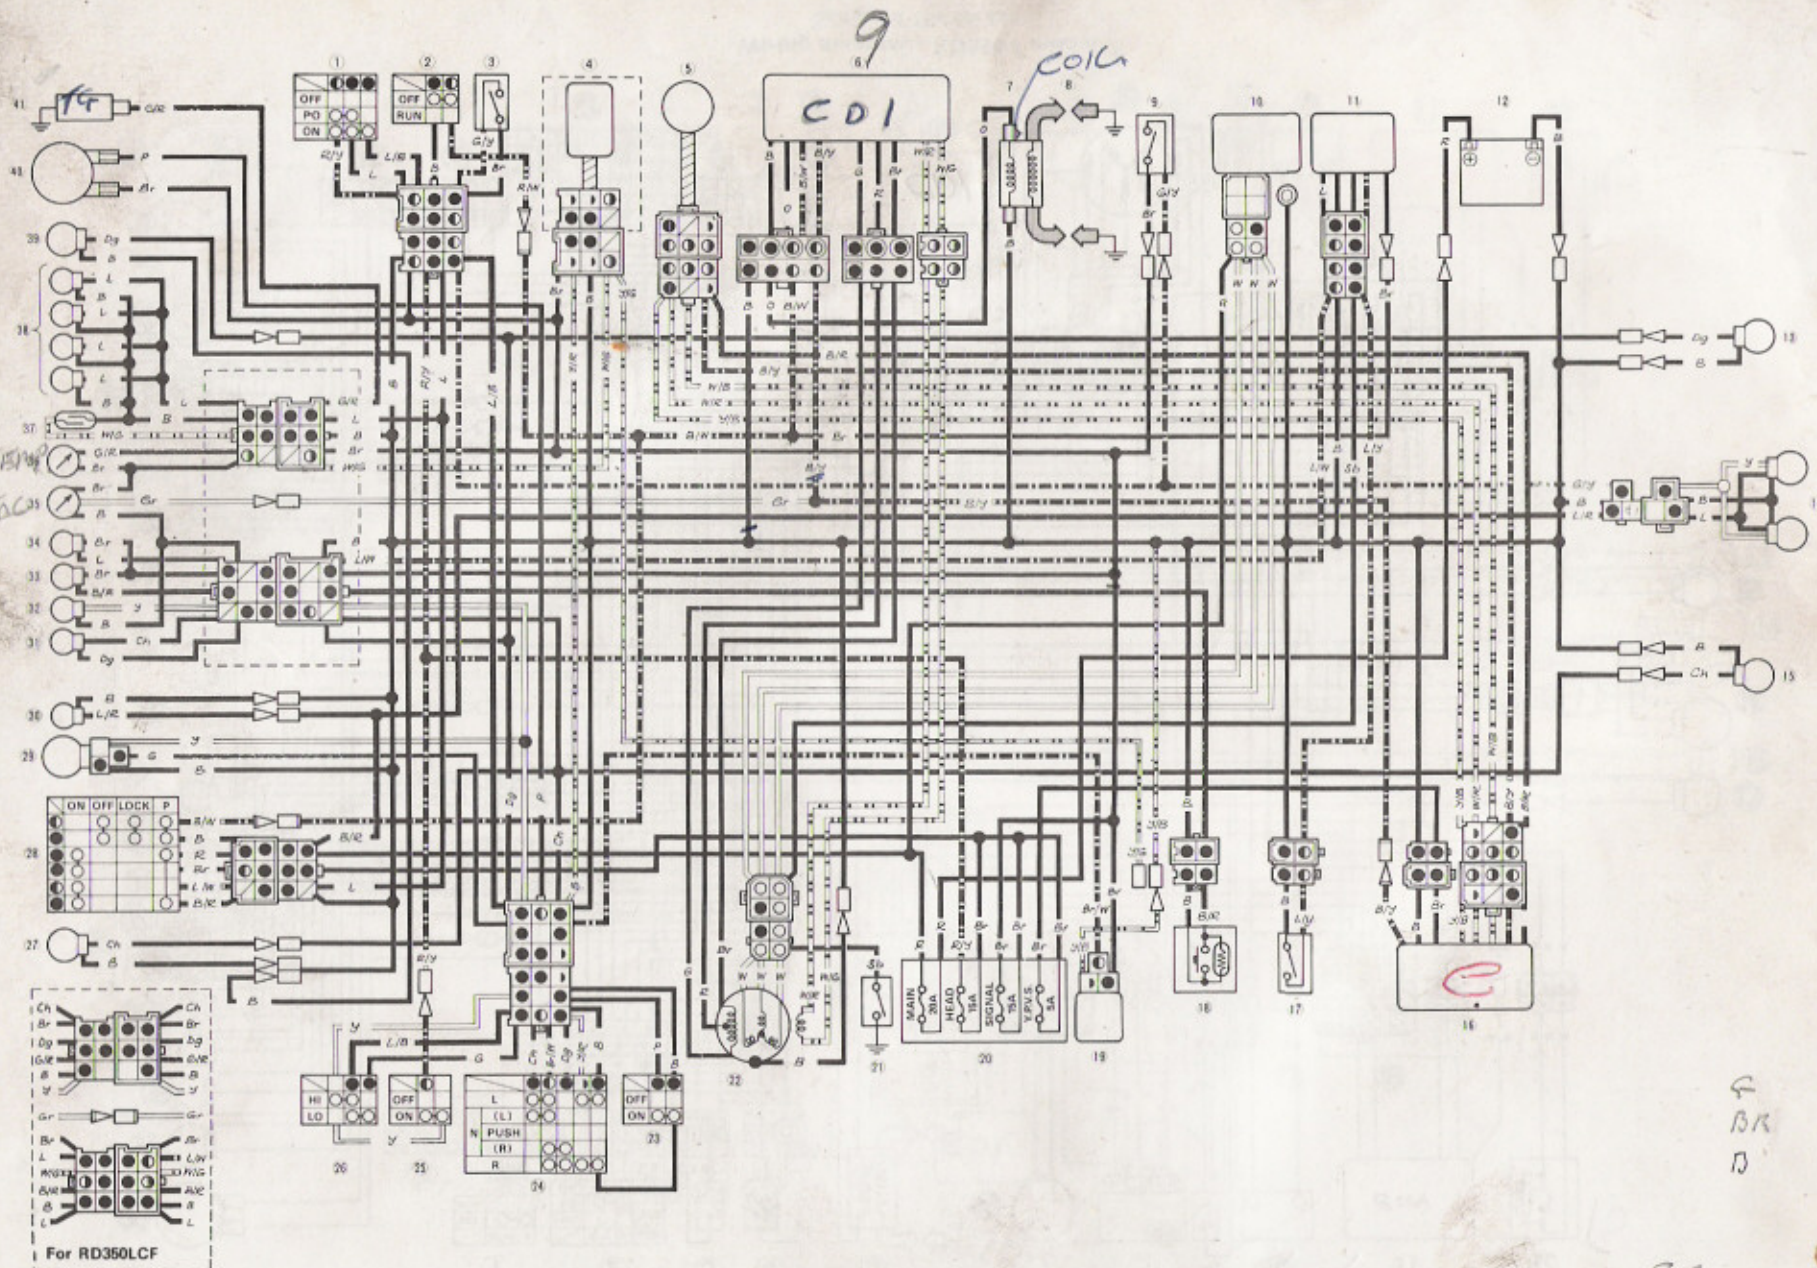

Wiring diagram - RD350 N II and F II models

See page 164 for key

FR
BR
D

FR
BR