

18. ONLY ATV ON ROAD AVAILABLE

ONLY ATV ON ROAD AVAILABLE

18

INSTRUMENT	18- 1
INDICATOR LIGHT	18- 1
WINKER SWITCH/HORN	18- 2

18. ONLY ATV ON ROAD AVAILABLE

INSTRUMENT

REMOVAL

Remove the two instrument attaching screws.


Disconnect the instrument.



Screws

Remove battery cover on instrument back to replace battery.


- After replace battery, the instrument will be reset. (Refer to owner's manual)

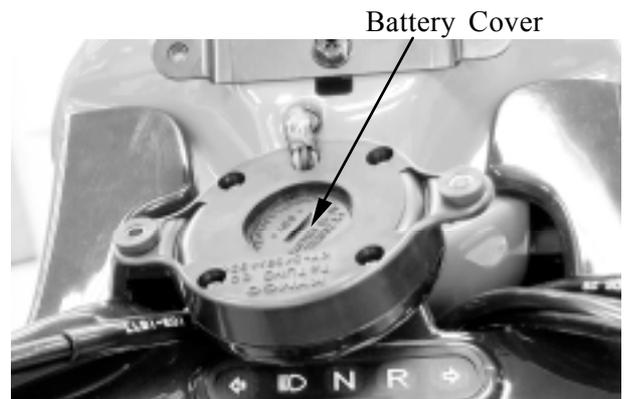

Battery Cover

SENSOR WHEEL

If the sensor is lost or wore, the speed will be not calculated on the instrument.

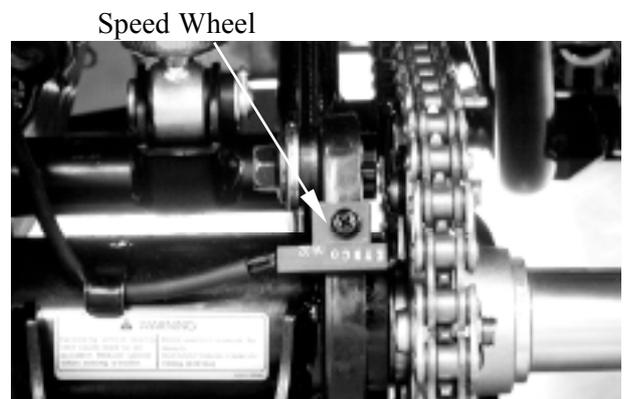

Speed Wheel

INDICATOR LIGHT

REMOVAL

Remove the screw and disconnect the cover of the ignition switch.




Screw

18. ONLY ATV ON ROAD AVAILABLE

Remove the bulb socket and bulb.
Check the bulb for damage and replace with a new one if necessary.

INSTALLATION

The installation sequence is the reverse of removal.

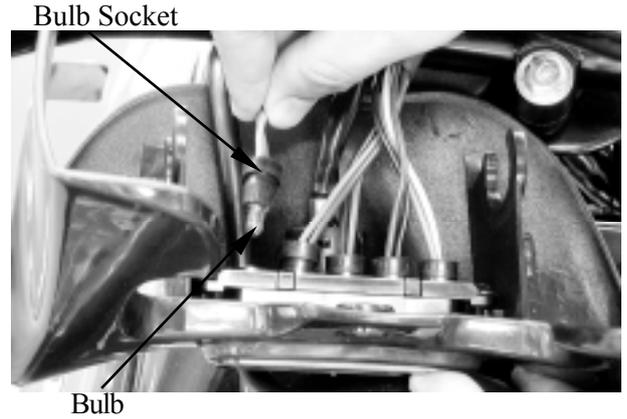

WINKER SWITCH

Check for continuity between the wires indicated below.

Color Position	Sky Blue	Orange	Brown
L		○ — ○	○ — ○
R	○ — ○		○ — ○



HORN SWITCH

Check for continuity between the wires indicated below.

Color Position	Light Green	Black
FREE		
PUSH	○ — ○	○ — ○



HORN

REMOVAL

Disconnect the horn switch wire.
Remove the bolt and remove horn.

INSTALLATION

The installation sequence is the reverse of removal.

