


2. FRAME COVERS/EXHAUST MUFFLER

2

FRAME COVERS/EXHAUST MUFFLER

SERVICE INFORMATION	2- 2
TROUBLESHOOTING	2- 2
FRAME COVERS	2- 3
HEADLIGHT REMOVAL.....	2- 5
EXHAUST MUFFLER REMOVAL	2- 5

2. FRAME COVERS/EXHAUST MUFFLER

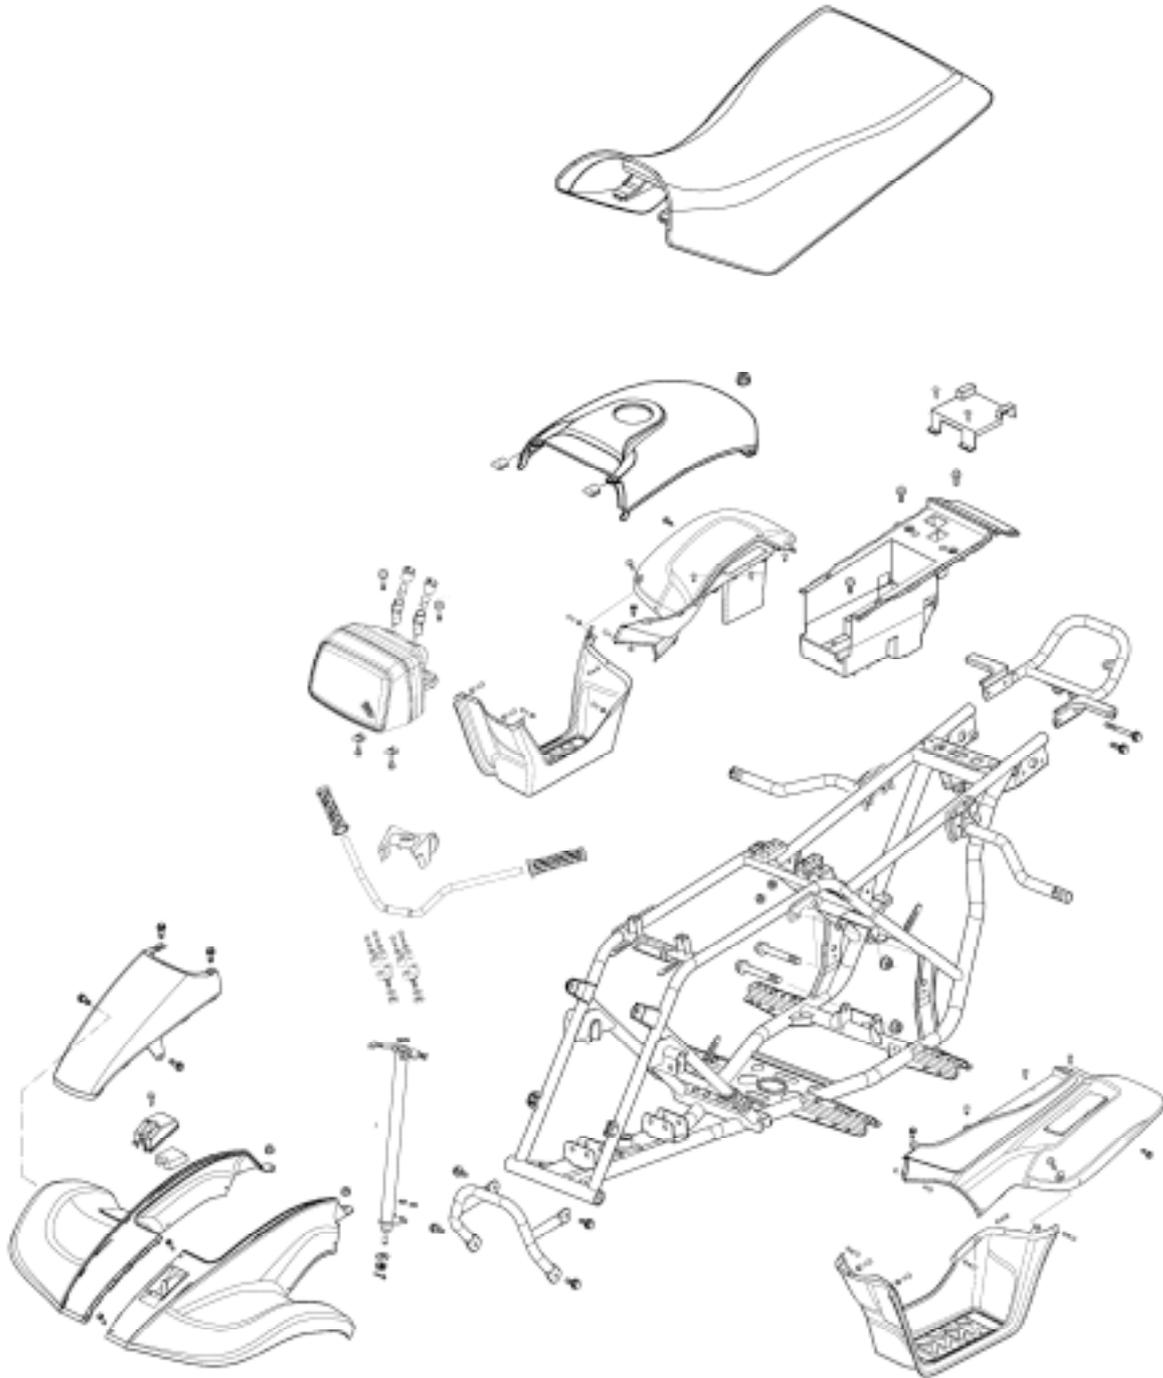

2. FRAME COVERS/EXHAUST MUFFLER

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- When removing frame covers, use special care not to pull them by force because the cover joint claws may be damaged.
- Make sure to route cables and harnesses according to the Cable & Harness Routing.

TORQUE VALUES

Exhaust muffler lock bolt	3.0_ 3.6kgf-m
Exhaust muffler joint lock nut	1.0_ 1.4kgf-m

TROUBLESHOOTING

Noisy exhaust muffler

- Damaged exhaust muffler
- Exhaust muffler joint air leaks

Lack of power


- Caved exhaust muffler
- Exhaust muffler air leaks
- Clogged exhaust muffler

2. FRAME COVERS/EXHAUST MUFFLER

FRAME COVERS

SEAT REMOVAL

Pull the lever backward, then pull up the seat at the rear.
Remove the seat.

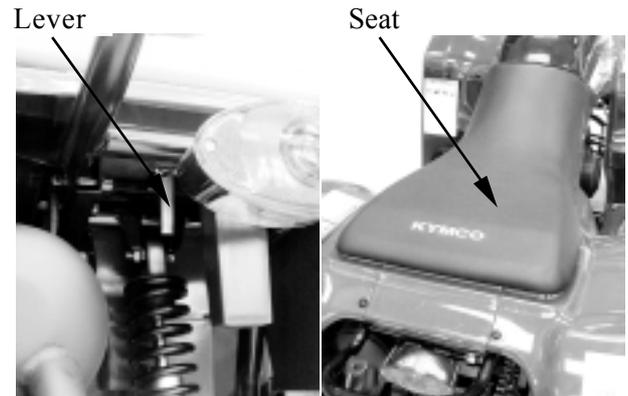


LEFT AND RIGHT FENDER REMOVAL


Remove seven screws and two bolts attaching the left rear fender.

Remove seven screws and two bolts attaching the right rear fender.


ⓘ During removal, do not pull the joint claws forcedly to avoid damage.

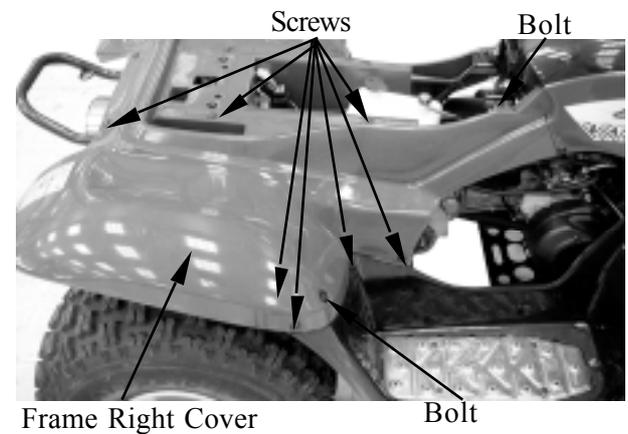

Remove the left rear fender under bolt.
Remove the left rear fender.

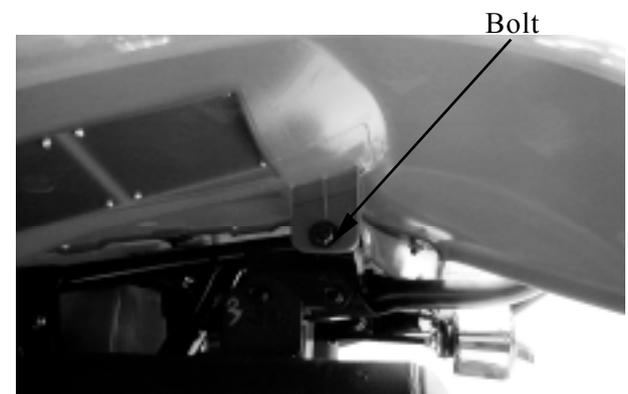


Remove right rear fender under bolt.
Remove the right rear fender.

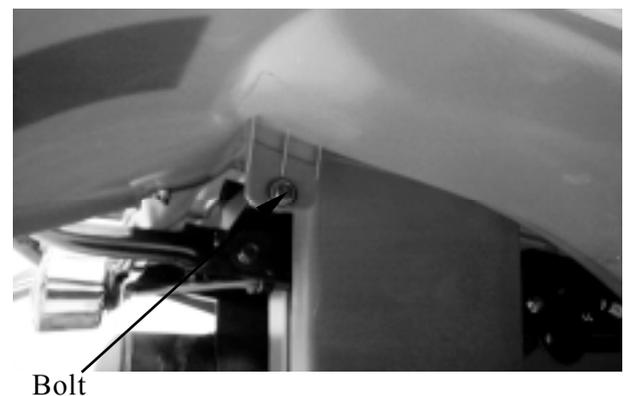


2. FRAME COVERS/EXHAUST MUFFLER

FRONT COVERS REMOVAL

Remove the two screws on the front cover.

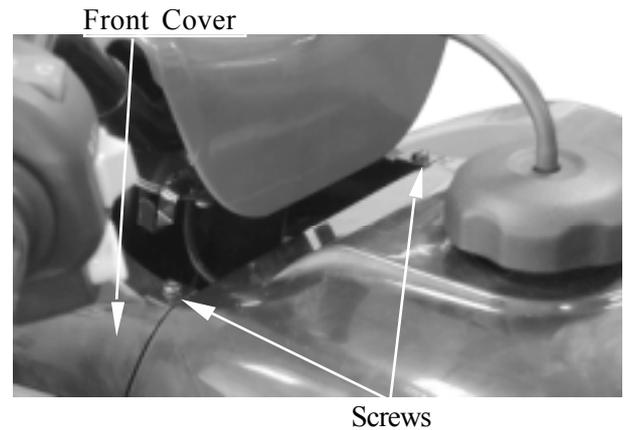

Remove the left and right front fender under bolt.
Remove the front cover.

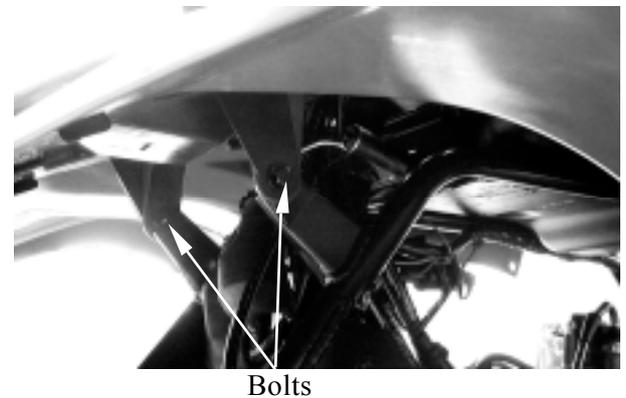


FRONT FENDER REMOVAL

Remove screws attaching the left and right front fender.
Remove the left and right front fender.





⚠ During removal, be careful not to damage the joint claws.

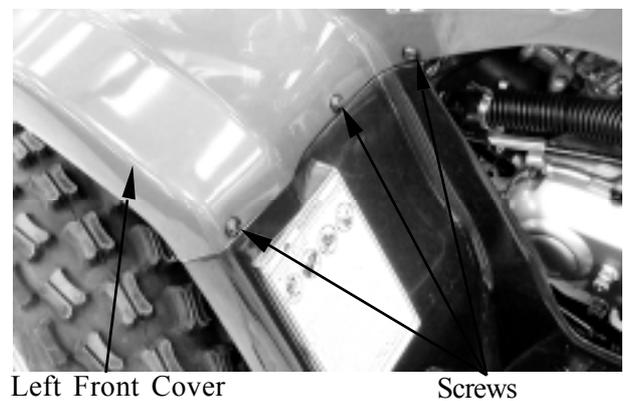

2. FRAME COVERS/EXHAUST MUFFLER


FLOOR BOARD COVER REMOVAL

Remove the four bolts on the floorboard cover.
Remove the floorboard cover.

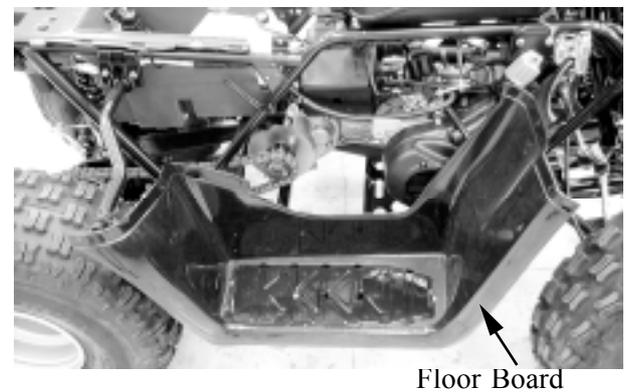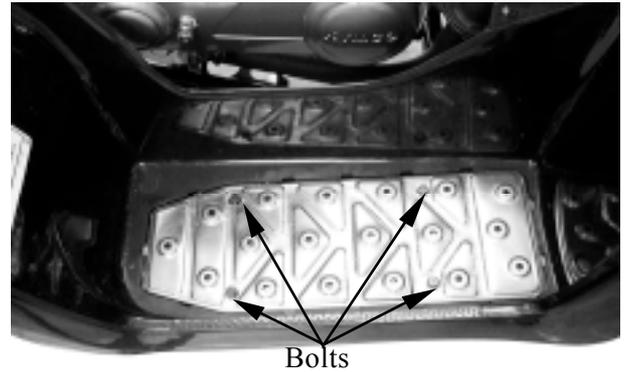


HEADLIGHT REMOVAL

Remove the headlight connector wire.
Remove the two bolts on the headlight.

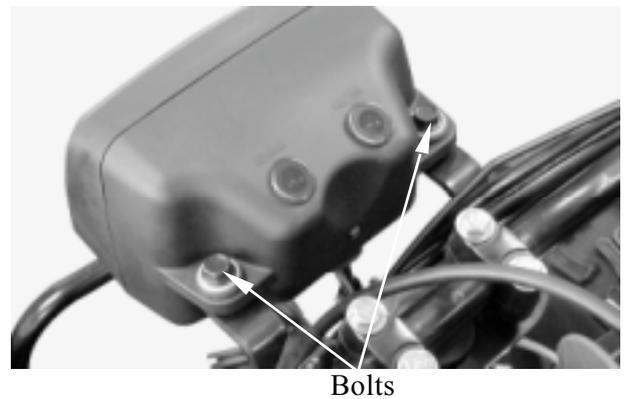

EXHAUST MUFFLER REMOVAL

Remove the two nuts attaching the exhaust
muffler.
Remove the two nuts attaching the exhaust
pipe.

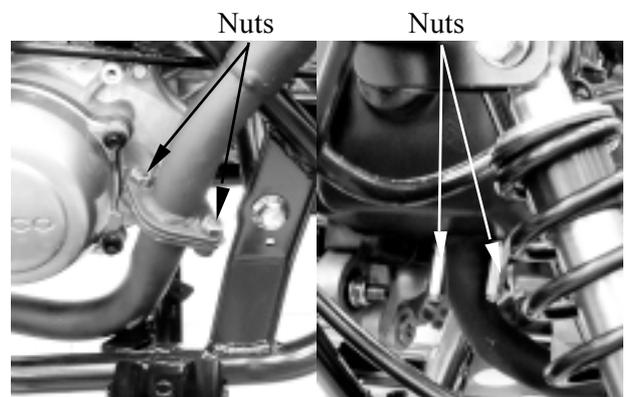


2. FRAME COVERS/EXHAUST MUFFLER

Remove the exhaust muffler lock bolts.
Remove the exhaust muffler and then
remove exhaust pipe.
When installing, first install the exhaust pipe
onto the engine and then install the exhaust
muffler.

Torque:

Exhaust muffler lock bolt: 3.0_ 3.6kgf-m

Exhaust muffler joint lock nut: 1.0_ 1.4kgf-
m

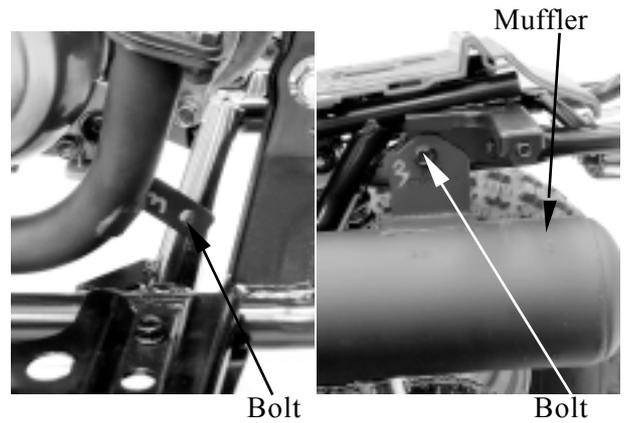

° Be sure to install a new exhaust muffler
gasket.

