

# 11. CARBURETOR

---

---

---

---

---

---

---

---

---


---

## CARBURETOR

---

SERVICE INFORMATION.....	11- 2
TROUBLESHOOTING.....	11- 2
THROTTLE VALVE DISASSEMBLY .....	11- 3
THROTTLE VALVE INSTALLATION.....	11- 4
CARBURETOR REMOVAL.....	11- 5
AUTO BYSTARTER.....	11- 6
FLOAT CHAMBER.....	11- 8
FLOAT LEVEL INSPECTION .....	11-10
CARBURETOR INSTALLATION.....	11-11
AIR SCREW ADJUSTMENT.....	11-11
REED VALVE.....	11-12
FUEL TANK .....	11-13

**11. CARBURETOR**

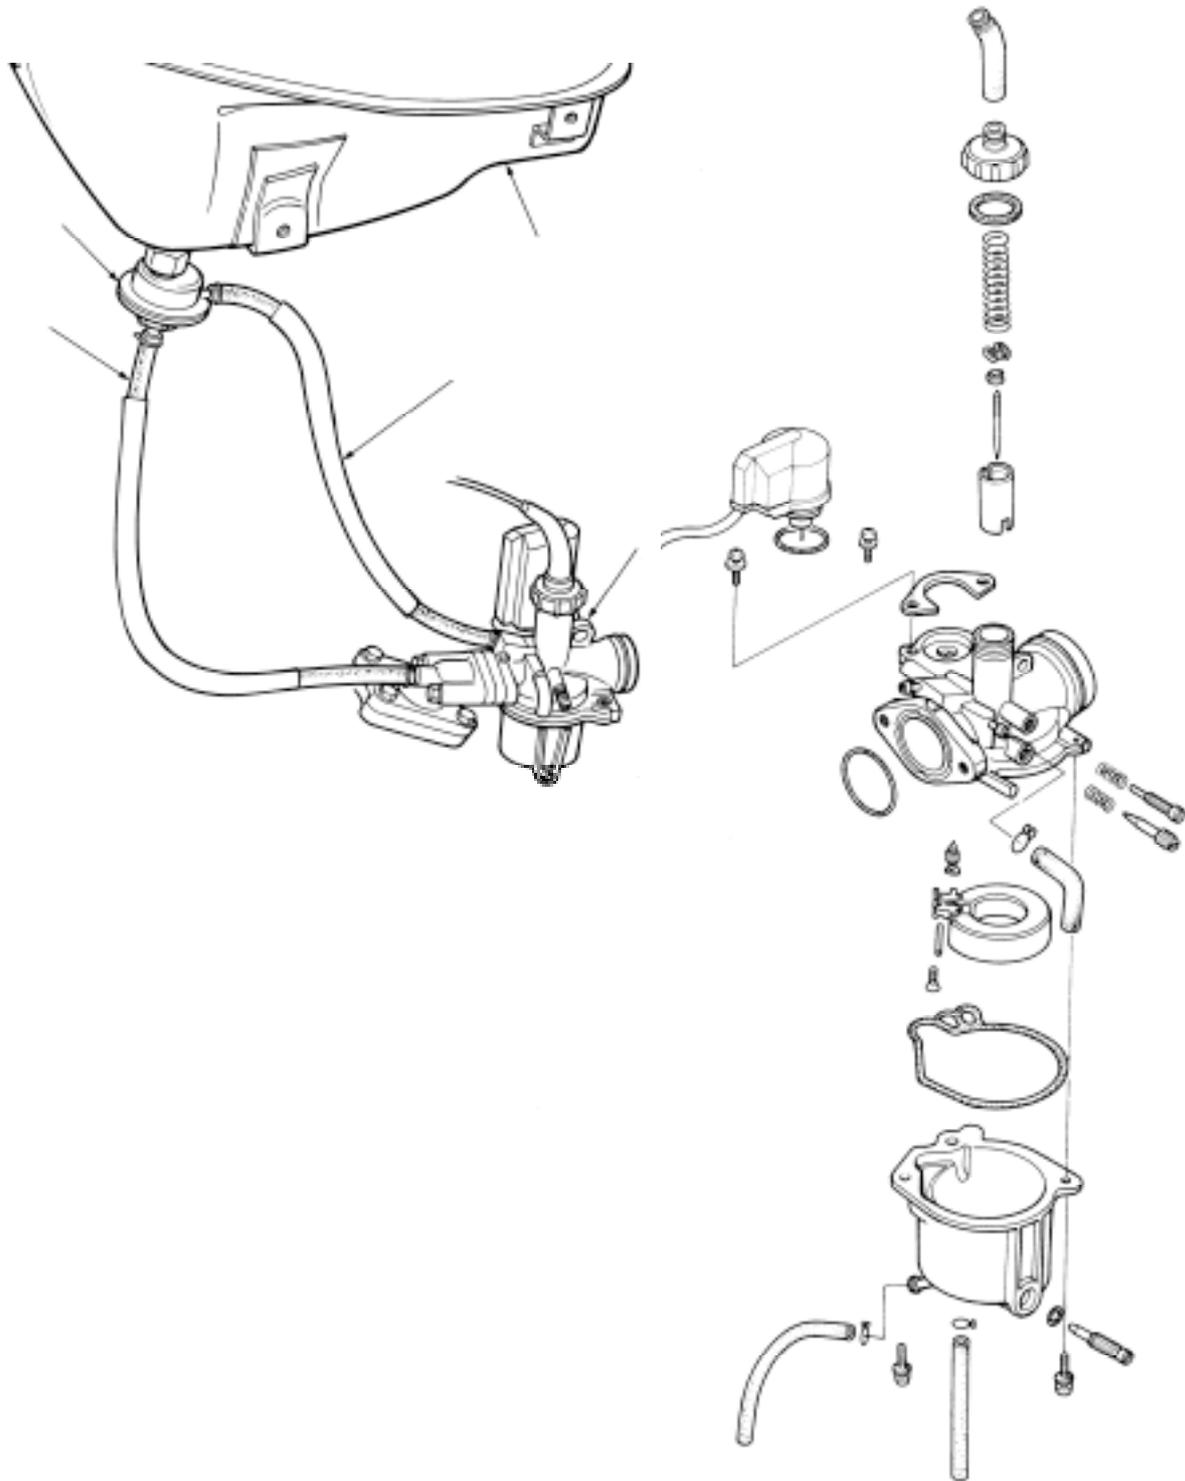

# 11. CARBURETOR

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- When working with gasoline, keep away from sparks and flames..
- Note the locations of O-rings when disassembling and replace them with new ones during assembly.
- All cables, fuel lines and wires must be routed and secured at correct locations.
- Bleed air from the oil lines whenever they are disconnected.

### SPECIFICATIONS

Venturi dia.	14mm
Identification number	0.14A
Float level	5.0mm
Main jet	#80
Slow jet	#35
Air screw opening	1±
Idle speed	2100±100rpm
Throttle grip free play	2_ 6mm

### SPECIAL TOOL

Float level gauge

### TROUBLESHOOTING

#### Engine does not start

- No fuel in tank
- Too much fuel getting to cylinder
- Clogged fuel filter
- Clogged air cleaner

#### Lean mixture

- Clogged fuel jets
- Clogged fuel cap vent
- Clogged fuel filter
- Bent, kinked or restricted fuel line

- Faulty float valve
- Float level too low
- Clogged air cleaner

#### Engine idles roughly, stalls or runs poorly

- Incorrect idle speed
- Ignition malfunction
- Compression too low
- Incorrectly adjusted air screw
- Incorrect float level
- Clogged air cleaner
- Intake air leaks
- Fuel contaminated
- Faulty reed valve
- Clogged fuel jets

#### Rich mixture


- Faulty float valve
- Float level too high
- Clogged air jets

# 11. CARBURETOR

---

## THROTTLE VALVE DIS-ASSEMBLY


Remove the rear carrier. (⇒ 12-5)  
Remove the met-in box. (⇒ 12-4)  
Loosen the carburetor cap and remove the throttle valve.

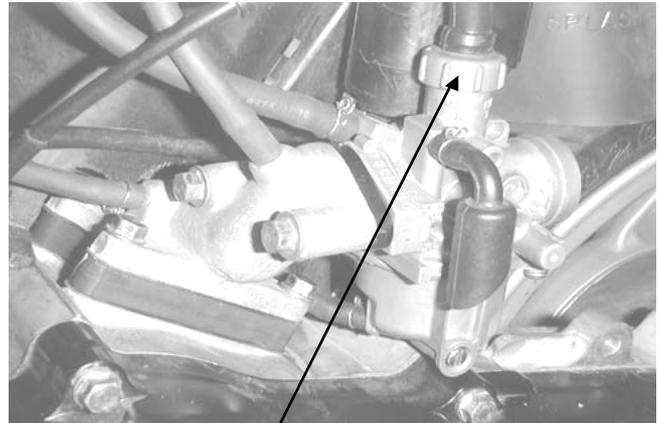

Carburetor Cap


Throttle Valve

Disconnect the throttle cable from the throttle valve.

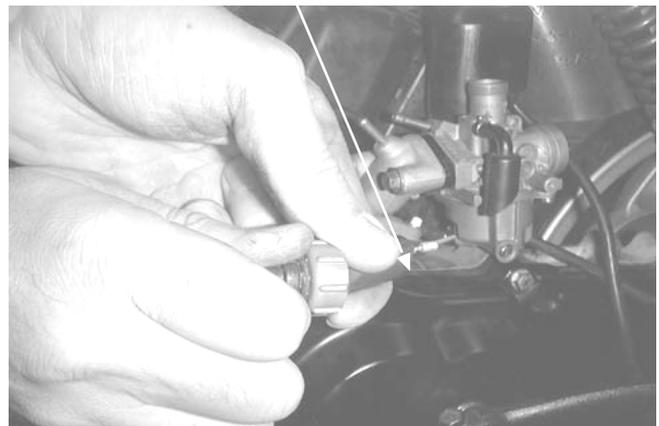

Rubber Seal

Remove the throttle valve spring, carburetor cap and rubber seal.

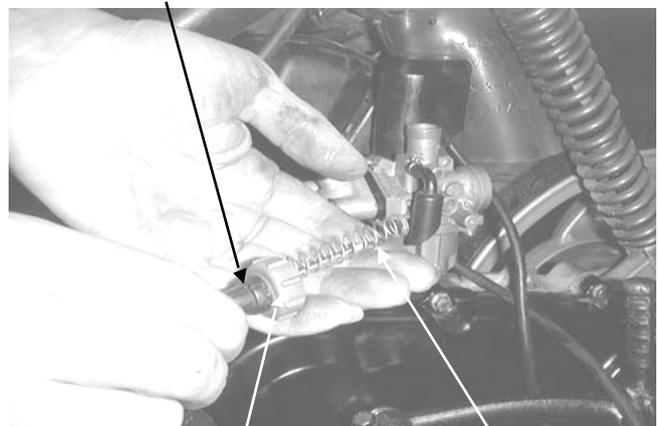


Carburetor Cap

Spring

# 11. CARBURETOR


Remove the jet needle by removing the needle clip.  
Check the jet needle and throttle valve for wear or damage.

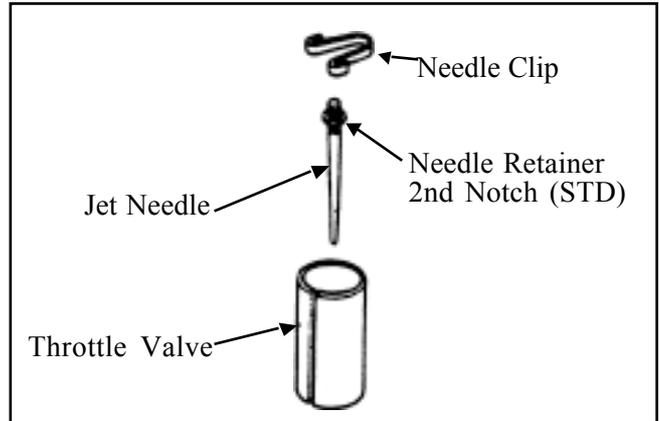

## THROTTLE VALVE INSTALLATION


Install the jet needle on the throttle valve and secure with the needle clip.

Install the rubber seal on the throttle cable and then install the carburetor cap and throttle valve spring.

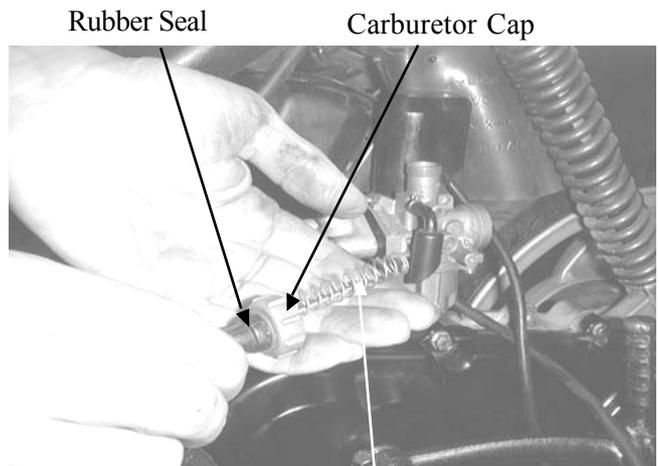

Throttle Valve Spring


Connect the throttle cable to the throttle valve.

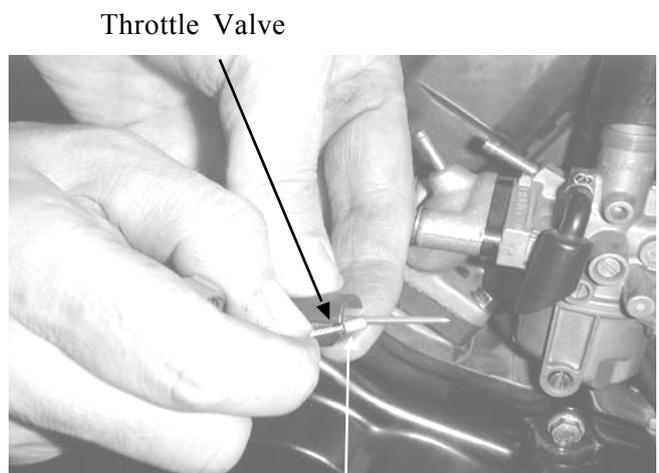

Throttle Cable

# 11. CARBURETOR

Install the throttle valve by aligning the groove in the throttle valve with the throttle stop screw.

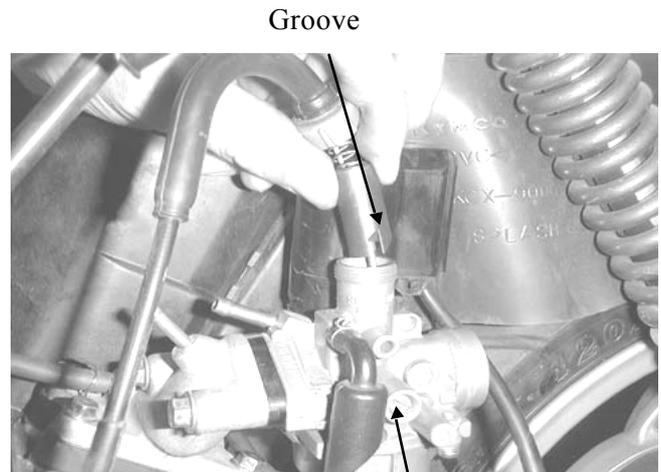


Throttle Stop Screw

Tighten the carburetor cap.  
After installation, perform the following adjustments and inspections.

- Throttle cable free play (⇒3-11)
- Idle speed adjustment (⇒3-8)

Install the met-in box.


Carburetor Cap

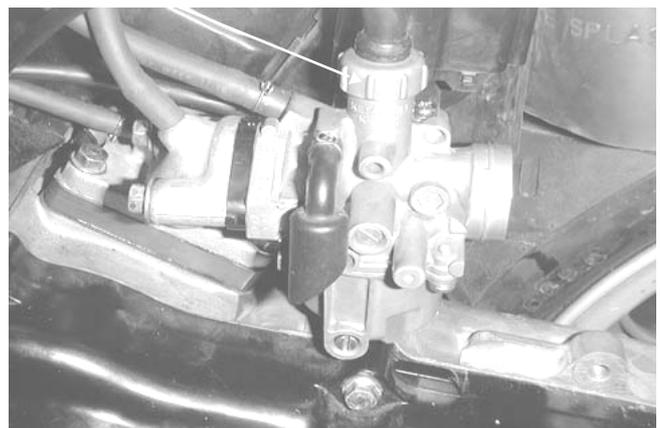

## CARBURETOR REMOVAL

Remove the met-in box. (⇒12-4)  
Remove the air cleaner by removing the air cleaner band screw and attaching bolts.  
Disconnect the fuel tube.  
Loosen the drain bolt to drain fuel from the carburetor.  
Disconnect the auto bystarter wire connector.  
Remove the two carburetor lock nuts.


Throttle Cable

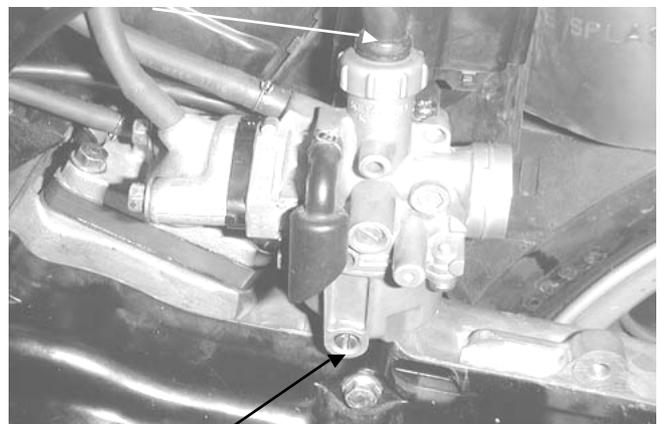

Drain Bolt

## 11. CARBURETOR

Remove the carburetor.

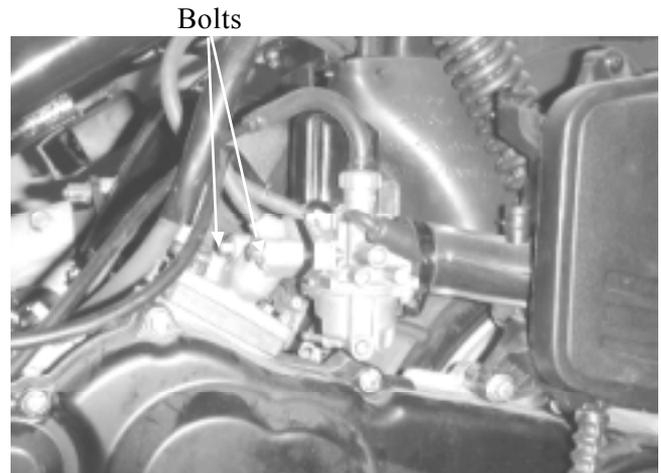

### AUTO BYSTARTER

#### AUTO BYSTARTER INSPECTION


Measure the resistance between the auto bystarter wire terminals.

**Resistance:**  $5\Omega$  (10 minutes minimum after stopping the engine)

If the resistance exceeds  $5\Omega$ , replace the auto bystarter with a new one.




After the engine stops for 30 minutes, connect a hose to the fuel enriching circuit and blow the hose with mouth.  
If air cannot be blown into the hose (clogged), the auto bystarter is faulty. Replace it with a new one.

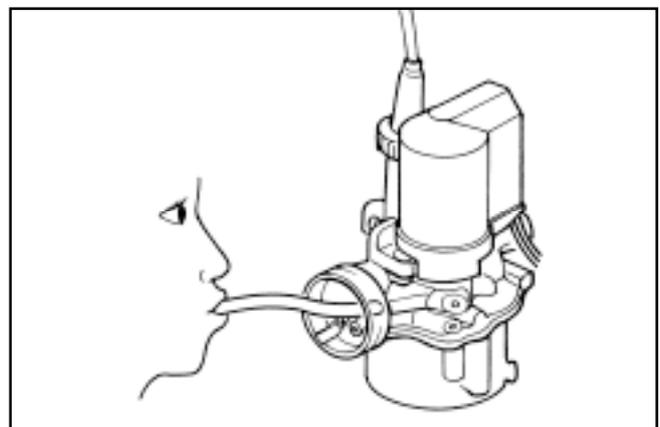


# 11. CARBURETOR

Connect the auto bystarter yellow wire to the battery positive (+) terminal and green/black wire to the battery negative (-) terminal and wait 5 minutes.  
 Connect a hose to the fuel enriching circuit and blow the hose with mouth.  
 If air can be blown into the hose, the auto bystarter is faulty and replace it with a new one.

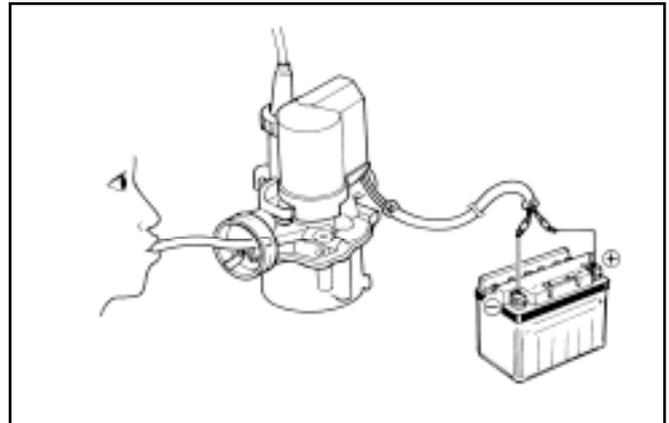


## AUTO BYSTARTER REMOVAL

Remove the auto bystarter cover.  
 Remove the two auto bystarter set plate screws to remove the auto bystarter.

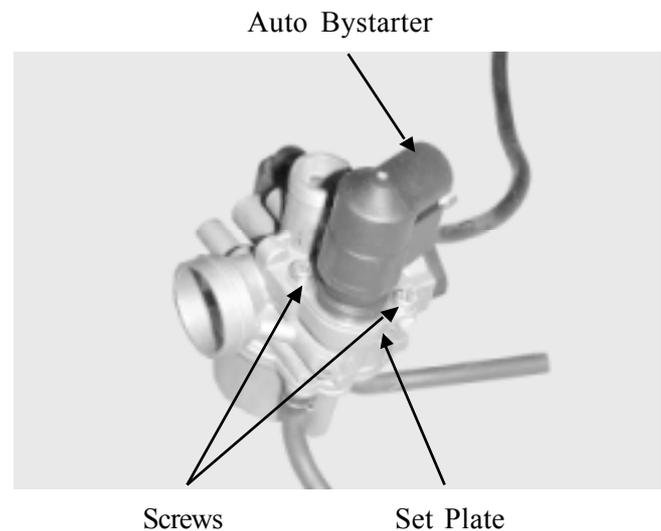


Check the auto bystarter valve and needle for wear or damage.  
 Check the O-ring for wear or damage.

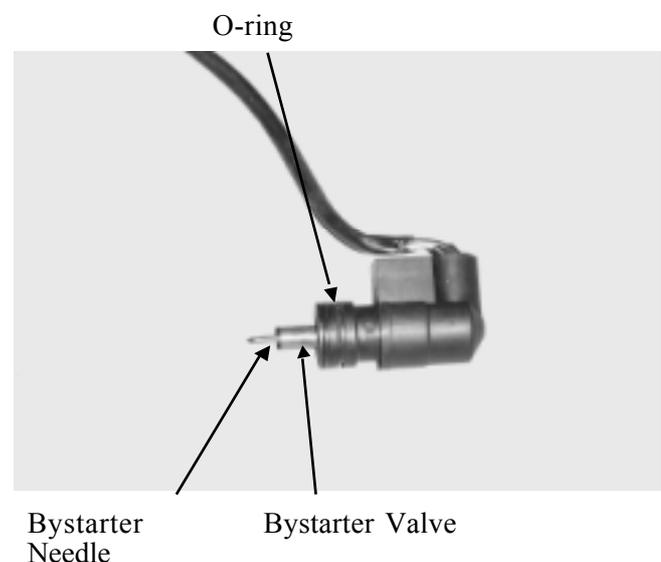

# 11. CARBURETOR


## AUTO BYSTARTER INSTALLATION

Install the auto bystarter into the carburetor body until it bottoms.  
 Install the set plate and then tighten the two screws.

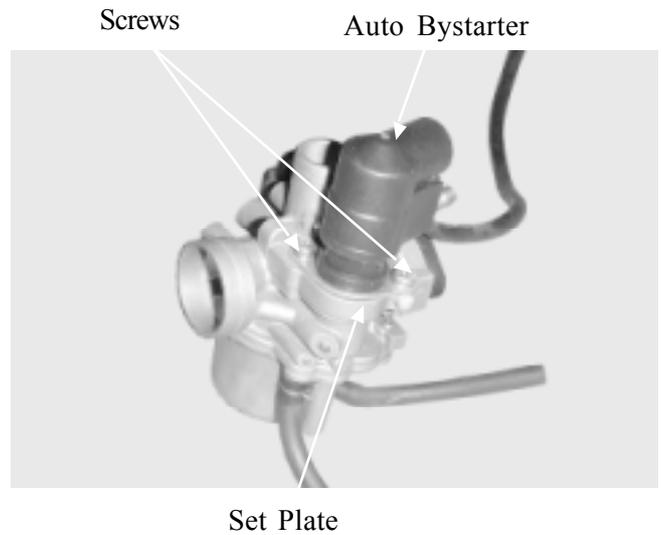


## FLOAT CHAMBER

Remove the two float chamber screws and the float chamber.

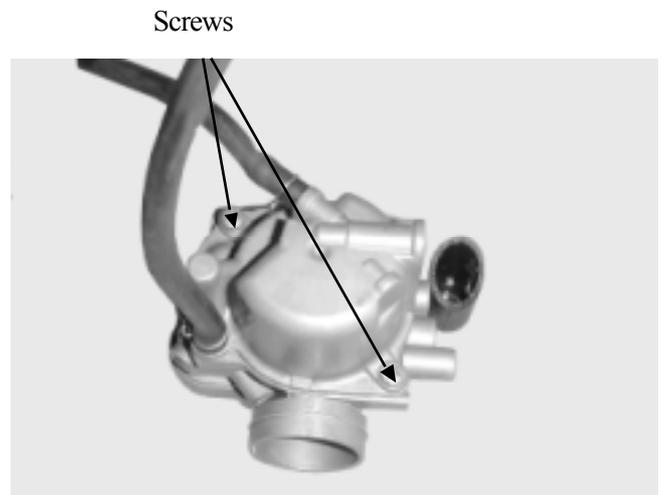

Remove the screw and O-ring.  
 Remove the float pin, float and float valve.

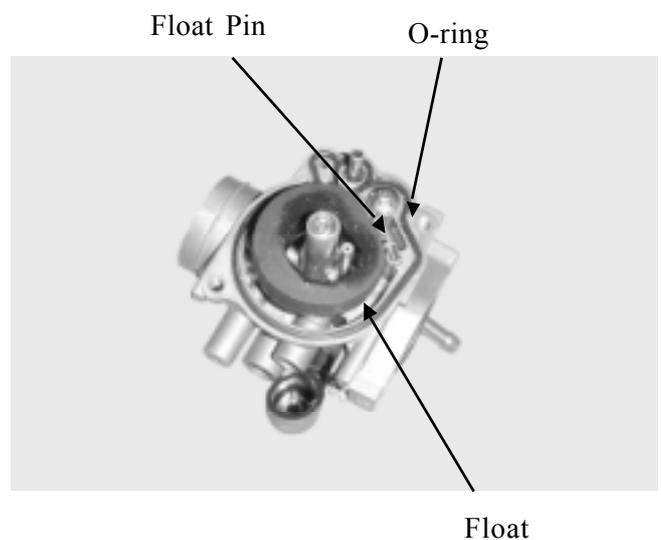


# 11. CARBURETOR

---

## FLOAT/FLOAT VALVE INSPECTION


Inspect the float for damage or fuel inside the float.  
Check the float valve seat for wear or damage.

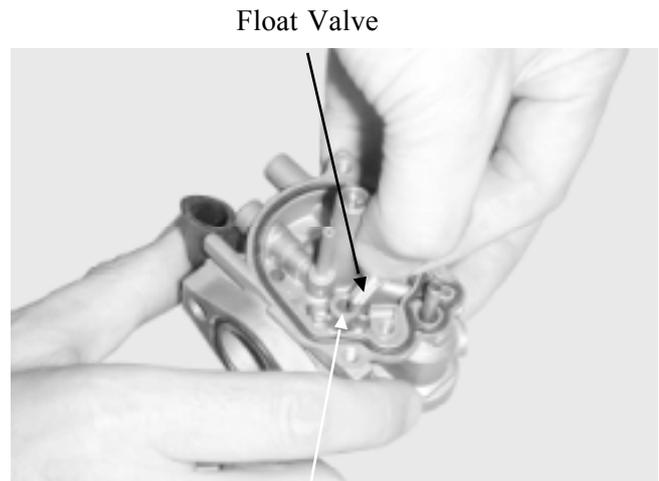

## JETS/SCREWS REMOVAL


Before removing the throttle stop screw or air screw, record the number of rotations until it seats lightly. Then, remove them.

Remove the main jet and needle jet holder.

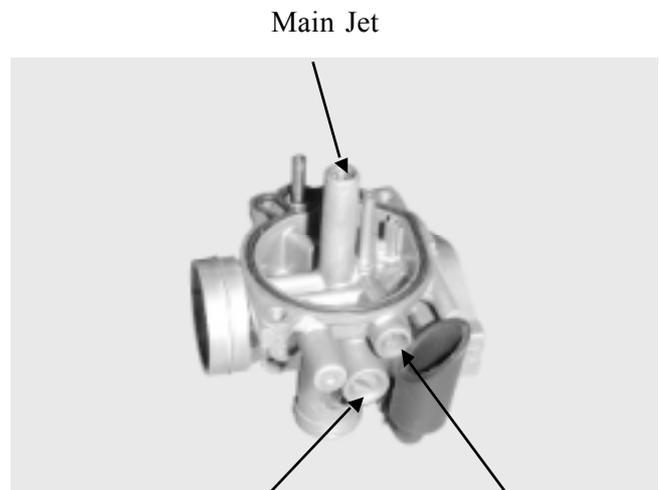

## CARBURETOR PASSAGES CLEANING


Blow compressed air through all passages of the carburetor body with an air gun.

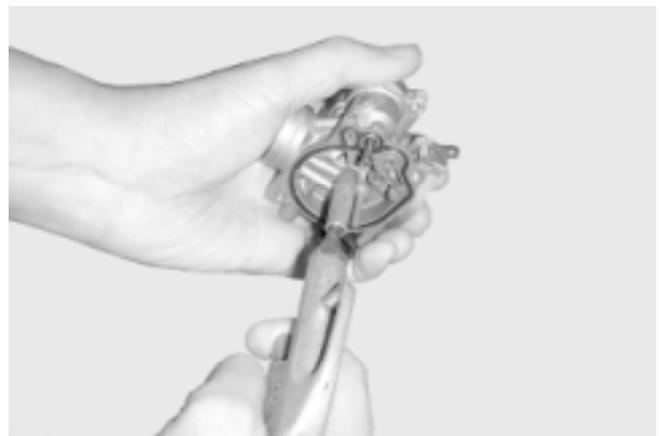


## 11. CARBURETOR

### FLOAT CHAMBER ASSEMBLY

Install the main jet and needle jet holder.  
Install the air screw and throttle stop screw according to the rotations recorded.

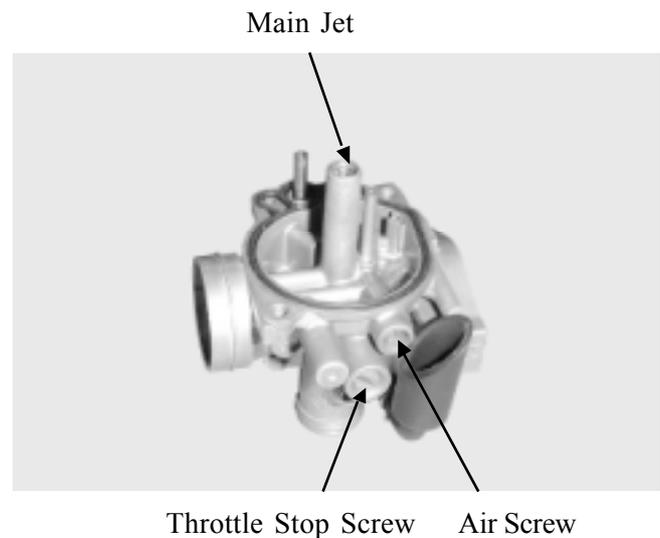

Install the float valve, float and float pin.  
Tighten the float screw securely.

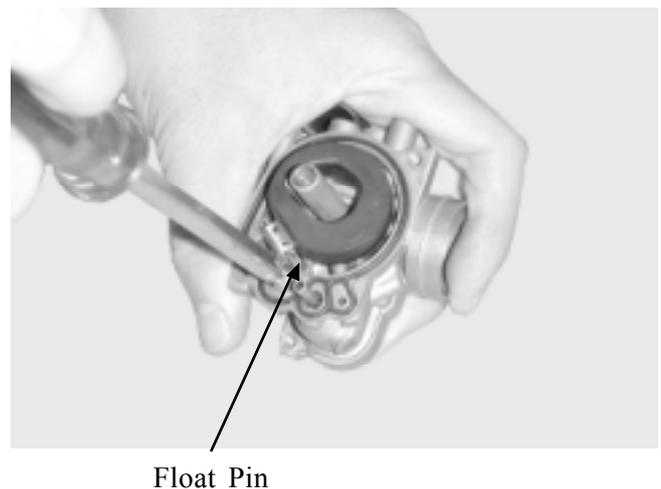

### FLOAT LEVEL INSPECTION

Slightly tilt the carburetor and measure the float level with the float valve just connecting the float arm.


**Float Level:** 5.0mm

Replace the float if the level is out of the specified level range.

Install the O-ring.

Check the operation of the float and install the float chamber.


Tighten the screws.

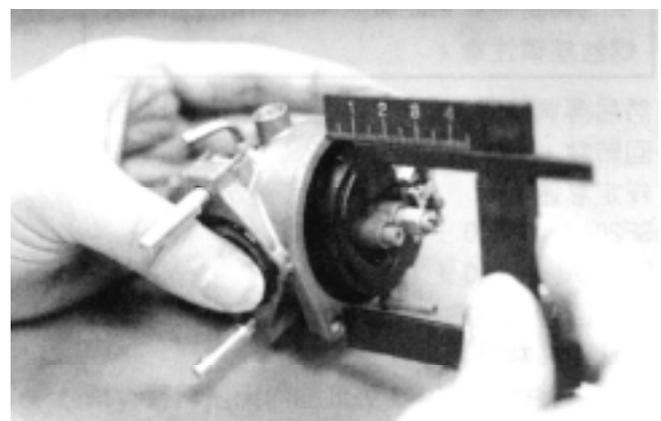

# 11. CARBURETOR

## CARBURETOR INSTALLATION


Check the carburetor insulator and O-ring for wear or damage.  
 Install the carburetor and insulator onto the intake manifold and tighten the two lock nuts.  
 Connect the fuel tube and auto bystarter wire connector.

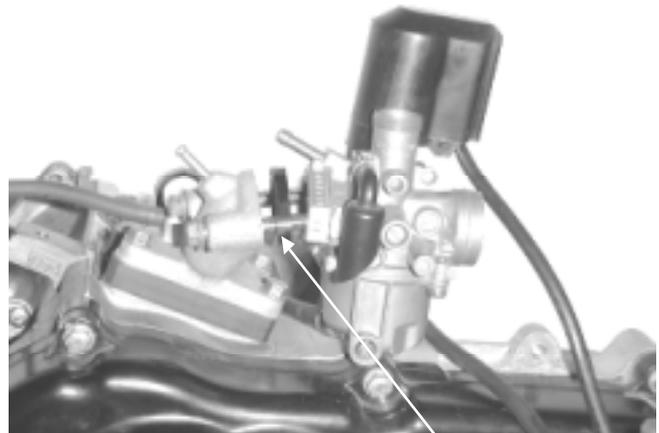

Insulator

Install the carburetor cap. (⇒11-4)  
 Install the air cleaner onto the carburetor and tighten the band screw.  
 Install the met-in box. (⇒12-4)

Carburetor Cap

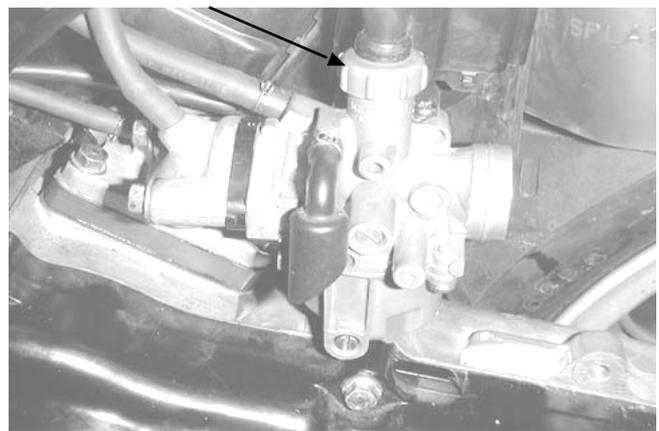

## AIR SCREW ADJUSTMENT

Remove the met-in box. (⇒12-4)


Turn the air screw clockwise until it seats lightly and back it to the specification given.

### Air Screw Opening:

1± turns

Start the engine and turn the air screw in or out slowly to obtain the highest engine speed.

Air Screw

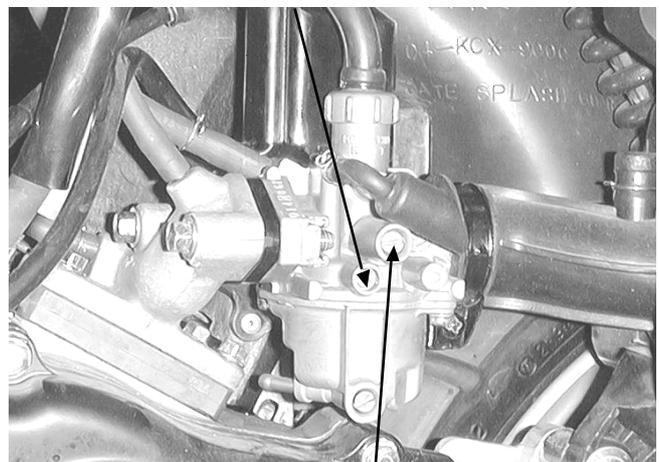

Throttle Stop Screw

Turn the throttle stop screw to obtain the specified idle speed.

### Idle Speed:

2100±100rpm

Slightly increase the engine speed and make sure that the engine does not miss or run erratic.


If the adjustment of the air screw within the range of ± turn makes no difference to the engine performance, check other related items.

## 11. CARBURETOR

### REED VALVE

#### REMOVAL


Remove the rear carrier.  
Remove the frame body cover.  
Remove the four intake manifold bolts and gasket.  
Remove the reed valve and gasket.

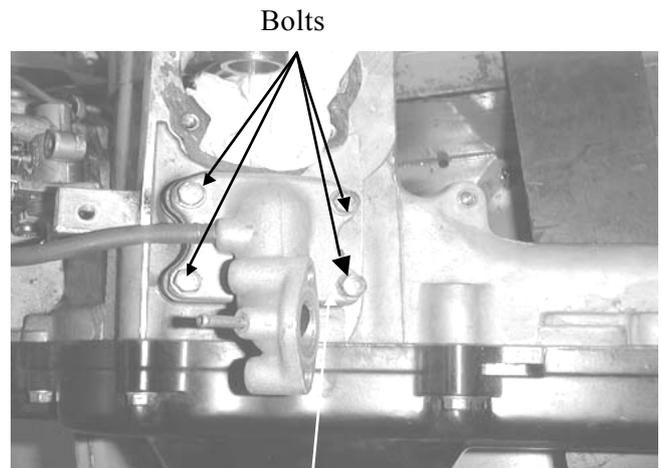

Intake Manifold

#### INSPECTION

Check the reed valve for damaged or weak reeds.  
Check the reed valve seat for cracks, damage or clearance between the seat and reed.  
Replace the valve if necessary.

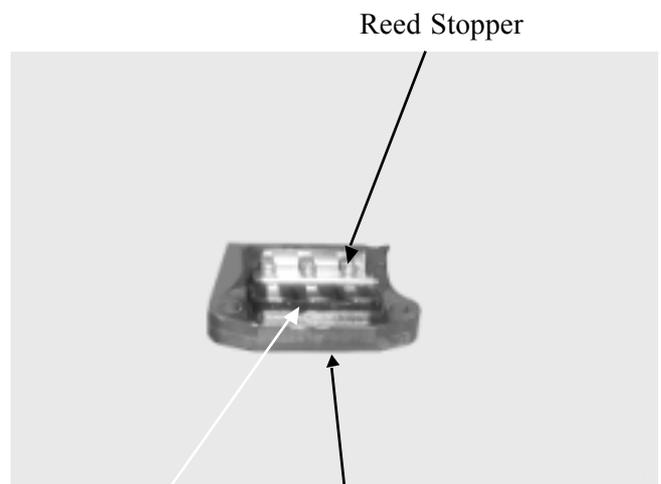

Reeds Reed Valve Seat

#### INSTALLATION

Install the reed valve in the reverse order of removal.

# 11. CARBURETOR

## FUEL TANK

### REMOVAL

- Remove the met-in box. (⇒12-4)
- Remove the frame body cover. (⇒12-5)
- Remove the rear carrier. (⇒12-5)
- Disconnect the fuel tube and vacuum tube at the auto fuel valve.
- Disconnect the fuel unit wire connector.
- Remove the fuel tank mounting bolts and fuel tank.
- Inspect the fuel unit. (⇒16-2)
- Replace the fuel unit if necessary. (⇒16-2)

