



aprilia

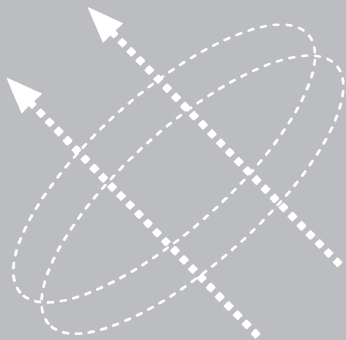

use and maintenance

aprilia part # 8104127

SL mille

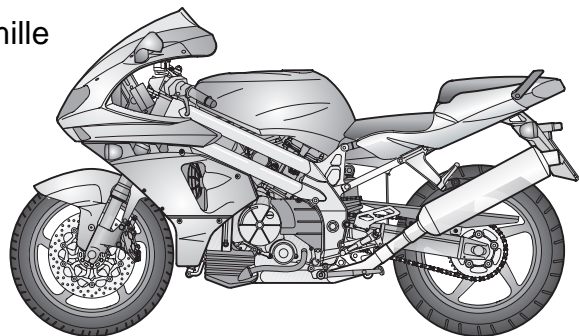

First edition: september 1999


Reprint: december 1999

Produced and printed by:
stp editing division
Soave (VERONA) - Italy
Tel. +39 - 045 76 11 911
Fax +39 - 045 76 12 241
E-mail: customer@stp.it
www.stp.it

On behalf of:
aprilia s.p.a.
via G. Galilei, 1 - 30033 Noale (VE) - Italy
Tel. +39 - 041 58 29 111
Fax +39 - 041 44 10 54
www.aprilia.com

SAFETY WARNINGS

The following precautionary warnings are used throughout this manual in order to convey the following messages:

 **Safety warning. When you find this symbol on the vehicle or in the manual, be careful to the potential risk of personal injury. Non-compliance with the indications given in the messages preceded by this symbol may result in grave risks for your and other people's safety and for the vehicle!**

WARNING

Indicates a potential hazard which may result in serious injury or even death.

CAUTION

Indicates a potential hazard which may result in minor personal injury or damage to the vehicle.

NOTE The word “NOTE” in this manual precedes important information or instructions.

TECHNICAL

★ The operations preceded by this symbol must be repeated also on the opposite side of the vehicle.

If not expressly indicated otherwise, for the reassembly of the units repeat the disassembly operations in reverse order.

The terms “right” and “left” are referred to the rider seated on the vehicle in the normal riding position.

WARNINGS - PRECAUTIONS - GENERAL ADVICE

Before starting the engine, carefully read this manual and in particular the section “SAFE DRIVE”.

Your and other people's safety depends not only on your quickness of reflexes and on your agility, but also on what you know about the vehicle, on its efficiency and on your knowledge of the basic information for “SAFE DRIVE”. Therefore, get a thorough knowledge of the vehicle, in such a way as to be able to drive in the traffic safely.

NOTE This manual must be considered as an integral part of the vehicle and must always accompany it, even in case of re-sale.

aprilia has carried out this manual with the maximum attention, in order to supply the user with correct and updated information. However, since **aprilia** constantly improves the design of its products, there may be slight discrepancies between the characteristics of your vehicle and those described in this manual. For any clarification concerning the information contained in this manual, do not hesitate to contact your **aprilia** Official Dealer.

For control and repair operations not expressly described in this publication, for the purchase of **aprilia** genuine spare parts, accessories and other products, as well as for specific advice, contact exclusively **aprilia** Official Dealers and Service Centers, which guarantee prompt and accurate assistance.

Thank you for choosing **aprilia**. We wish you a nice ride.

All rights as to electronic storage, reproduction and total or partial adaptation, with any means, are reserved for all Countries.

NOTE In some countries the antipollution and noise regulations in force require periodical inspections.

The user of the vehicle in these countries must:

- contact an **aprilia** Authorized Dealer to have the non-homologated components replaced with others homologated for use in the country in question;
- carry out the required periodical inspections.

NOTE When asking your Dealer for spare parts, specify the spare parts code indicated on the SPARE PARTS IDENTIFICATION LABEL.

Write down the identification code in the space here below, in order to remember it also in case of loss or deterioration of the label.

The label is positioned under the rider saddle, see p. 66 (REMOVING THE RIDER SADDLE).

aprilia N°		YEAR		T	V	W	X	Y
SPARE PARTS CODE NUMBER		I.M.		A	B	C	D	E
I	UK	A	P	SF	B	D	F	GR
NL	CH	DK	J	SGP	PL	IL	ROK	MAL
BM	USA	AUS	BR	RSA	NZ	CDN	HR	SLO

In this manual the various versions are indicated by the following symbols:

ASD automatic light switching version (Automatic Switch-on Device)

OPT optional

VERSION:

- | | |
|--------------------------|-------------------------------------|
| I Italy | PL Poland |
| UK United Kingdom | IL Israel |
| A Austria | ROK South Korea |
| P Portugal | MAL Malaysia |
| SF Finland | RCH Chile |
| B Belgium | BM Bermuda |
| D Germany | USA United States of America |
| F France | AUS Australia |
| E Spain | BR Brazil |
| GR Greece | RSA South Africa |
| NL Holland | NZ New Zealand |
| CH Switzerland | CDN Canada |
| DK Denmark | HR Croatia |
| J Japan | SLO Slovenia |
| SGP Singapore | |

TABLE OF CONTENTS

SAFE DRIVE	5	ADJUSTING THE REAR BRAKE		ADJUSTING	
BASIC SAFETY RULES	6	CONTROL LEVER CLEARANCE	40	THE COLD START CONTROL (I\I)	72
CLOTHING	9	AUTOMATIC		CHECKING THE SIDE STAND	
ACCESSORIES	10	LIGHT SWITCHING VERSION ASD	41	AND THE SAFETY SWITCH	73
LOAD	10	EXHAUST SILENCERS / EXHAUST PIPES	41	SPARK PLUGS	74
ARRANGEMENT OF THE		INSTRUCTIONS FOR USE	42	BATTERY	75
MAIN ELEMENTS	12	PRELIMINARY		CHECKING AND CLEANING	
ARRANGEMENT OF THE		CHECKING OPERATIONS	42	THE TERMINALS	75
INSTRUMENTS/CONTROLS	14	STARTING	43	REMOVING THE BATTERY	76
INSTRUMENTS AND INDICATORS	15	DEPARTURE AND DRIVE	46	RECHARGING THE BATTERY	77
INSTRUMENTS AND INDICATORS TABLE	16	RUNNING-IN	49	INSTALLING THE BATTERY	77
MULTIFUNCTION COMPUTER	18	STOPPING	49	LONG INACTIVITY	
MAIN INDEPENDENT CONTROLS	24	PARKING	50	OF THE BATTERY	78
CONTROLS ON THE LEFT PART		SUGGESTIONS TO PREVENT THEFT	50	CHECKING THE SWITCHES	78
OF THE HANDLEBAR	24	MAINTENANCE	51	CHANGING THE FUSES	79
CONTROLS ON THE RIGHT PART		REGULAR SERVICE INTERVALS CHART	52	HORIZONTAL ADJUSTMENT OF THE	
OF THE HANDLEBAR	25	IDENTIFICATION DATA	54	HEADLIGHT BEAM	80
IGNITION SWITCH	26	CHECKING THE ENGINE OIL LEVEL		ADJUSTING THE VERTICAL	
STEERING LOCK	26	AND TOPPING UP	55	HEADLIGHT BEAM	81
AUXILIARY EQUIPMENT	27	CHANGING THE ENGINE OIL		BULBS	81
UNLOCKING / LOCKING		AND THE OIL FILTER	56	CHANGING	
THE PASSENGER SEAT	27	ASSEMBLING THE PINS FOR THE REAR		THE HEADLIGHT BULBS	82
GLOVE/TOOL KIT COMPARTMENT	28	SUPPORT STAND OPT	58	CHANGING THE FRONT AND REAR	
LUGGAGE RACK FASTENINGS	28	POSITIONING THE VEHICLE		DIRECTION INDICATOR BULBS	83
SPECIAL TOOLS OPT	29	ON THE REAR SUPPORT STAND OPT	58	CHANGING	
REAR MUDGUARD EXTENSION OPT	29	POSITIONING THE VEHICLE		THE REAR LIGHT BULB	84
MAIN COMPONENTS	30	ON THE FRONT SUPPORT STAND OPT	58	CHANGING	
FUEL	30	AIR CLEANER	59	THE NUMBER PLATE BULB	84
BRAKE FLUID - recommendations	31	FRONT WHEEL	60	CLEANING	85
DISC BRAKES	31	REAR WHEEL	62	LONG PERIODS OF INACTIVITY	86
FRONT BRAKE	32	DRIVE CHAIN	64	TRANSPORT	86
REAR BRAKE	33	REMOVING THE RIDER SADDLE	66	TECHNICAL DATA	87
CLUTCH FLUID - recommendations	34	LIFTING THE FUEL TANK	66	LUBRICANT CHART	90
CLUTCH	35	CHECKING THE BRAKE PAD WEAR	67	Importers	92-93
COOLANT	36	INSPECTING THE FRONT		WIRING DIAGRAM SL mille	94
TYRES	38	AND REAR SUSPENSIONS	68	WIRING DIAGRAM KEY SL mille	95
ENGINE OIL	39	FRONT SUSPENSION	68		
ADJUSTING THE FRONT BRAKE		REAR SUSPENSION	70		
CONTROL LEVER AND THE CLUTCH		IDLING ADJUSTMENT	72		
CONTROL LEVER	40	ADJUSTING			
		THE ACCELERATOR CONTROL	72		