



Pedal stopper



Adjusting nut

REAR BRAKE ADJUSTMENT

When adjusting the travel of brake pedal, first set the pedal at its proper position for comfortable riding by turning the brake pedal stopper, and then adjust the free travel to 20-30 mm (0.8-1.2 in) by screwing in or out the brake adjusting nut.

BRAKE LINING WEAR LIMIT

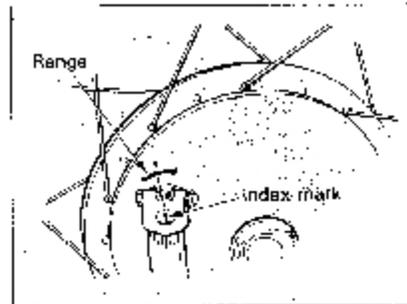


Fig. A The extension line of the index mark is within the range.



Fig. B The extension line of the index mark is out of the range.

Brake lining wear limit:

The motorcycle is equipped with the brake lining wear limit indicator on rear brake. To check wear of the brake lining, perform the following:

- 1) Check if the brake system is properly adjusted.
- 2) While fully applying the brake, check to see that the extension line of the index mark is within the range on the brake panel as shown in the figure A.
- 3) If the extension line is beyond the range as shown in the figure B, have the brake shoe assembly replaced by your Suzuki dealer to insure safe operation.