

The frame and/or engine serial numbers are used to register the motorcycle. They are also used to assist your dealer when ordering parts or referring to special service information.


The frame number is stamped on the steering head tube. The engine serial number is stamped on the left right of the crankcase assembly.

Please write down the numbers here for your reference.


Frame No.

Engine No.


LOCATION OF PARTS

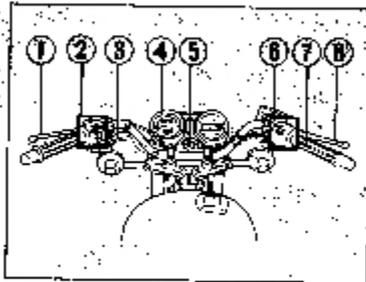

- (1) Parking brake lever
- (2) Left handlebar switch
- (3) Carburetor choke lever
- (4) Speedometer
- (5) Ignition switch
- (6) Right handlebar switch
- (7) Throttle grip
- (8) Front brake lever

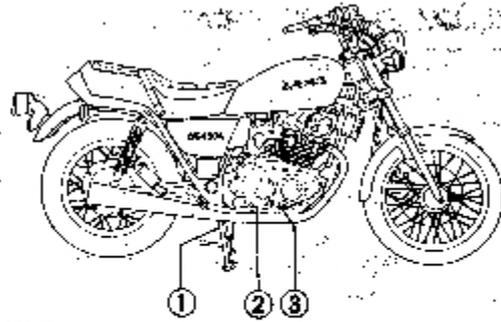

- (1) Center stand
- (2) Rear brake pedal
- (3) Engine oil inspection window

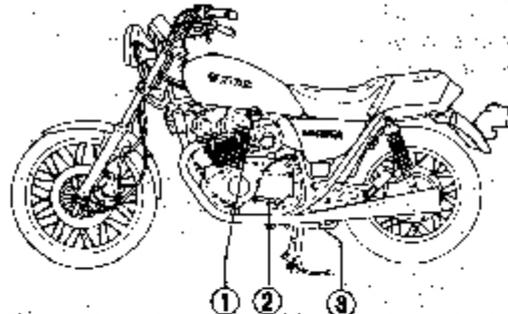

- (1) Fuelcock
- (2) Gear shift lever
- (3) Side stand

CONTROLS

KEY



This motorcycle comes equipped with a pair of identical ignition keys. Keep the spare key in a safe place.

Your motorcycle ignition keys are stamped with an identifying number. This number is used when making replacement keys. Please write your key number in the box provided for your future reference.

KEY NO.: