

**HIGH BEAM INDICATOR LIGHT (6)**

The blue indicator light will be lit when the headlight high beam is turned on.

**PARKING BRAKE INDICATOR LIGHT (7)**

The parking brake indicator light will be lit when the parking brake is in engaged position.

**GEAR POSITION INDICATOR LIGHTS (8)**

The green light will come on when the transmission is in neutral. The light will be go out when you shift into any gear other than neutral.

**L:**

The letter "L" in this indicator shows the gear is in LOW range.

**D:**

The letter "D" in this indicator shows the gear is in DRIVE range.

**OIL PRESSURE INDICATOR LIGHT (9)**

With the ignition switch in the "ON" position but the engine not started, the oil pressure indicator light should be lit. As soon as the engine is started, the light should go out.

**CAUTION:**

Whenever the oil pressure indicator lights up, indicating no oil pressure, stop the engine immediately. First check the oil level and determine if the proper amount of oil is in the engine. If the oil level is low, refill the engine to the correct level. If the light still does not go out, then have your authorized Suzuki dealer inspect your motorcycle to determine the difficulty. Do not operate the motorcycle when the light is lit as it may cause serious damage to the internal parts of the engine or transmission.




**FUEL METER (10)**

The fuel meter indicates the amount of gasoline remaining in the fuel tank. The "E" mark indicates the tank is empty or nearly so. The "F" mark indicates the fuel tank is full.

**SIDE STAND CHECK LIGHT AND BUZZER (11)**

With the side stand in down position and with the engine started, the side stand check light should flicker if the transmission is in neutral. And a buzzer sound should be heard at the same time if the transmission is in gear.

**LEFT HANDLEBAR**

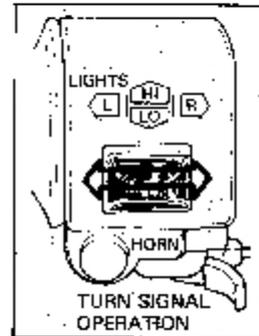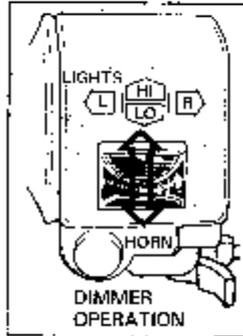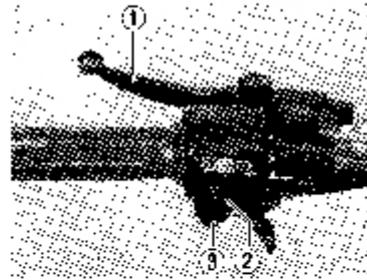

**PARKING BRAKE LEVER (1)**

To lock the parking brake lever, push the knob in and squeeze the lever, then push the knob again. This locks the rear wheel and turns the parking brake indicator light on. Check that the rear wheel is locked. To release the parking brake, simply squeeze the lever. Check that the rear wheel is free and the indicator light is off.

**WARNING:**

Never operate the parking brake while moving the motorcycle.

**WARNING:**

Do not open the throttle or rev the engine while stopped in gear. The motorcycle may move forward.