

ENGINE OIL AND FILTER CHANGE

Change the engine oil and oil filter at the initial 800 miles (1 000 km) and also at the every 4 000 miles (6 000 km). The oil should always be changed when the engine is hot so that the oil will drain thoroughly from the engine. The procedure is as follows:

NOTE: About 2 800 ml (3.0 US qt.) of oil will be required when changing oil without replacing the oil filter.

- (1) Place the motorcycle on the center stand.



Oil filler cap

- (2) Remove the oil filler cap.



Drain plug



Drain plug
(Under the secondary
gear case)

- (3) Drain the engine oil by removing the drain plug from the bottom of the engine and secondary gear case.



(1) Nut (2) Filter cap

- (4) Remove the three nuts holding the filter cap in place.




Oil filter

- (5) Remove the filter cap, pull out the element and replace with a new oil filter element.

CAUTION:

Insert the filter with the open end into the engine.

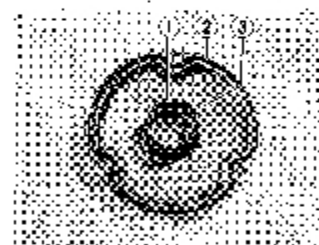

(1) Spring
(2) "O" ring
(3) Filter cap