




(9) Remove the wheel from the splined drive gear and set the wheel assembly on the ground.

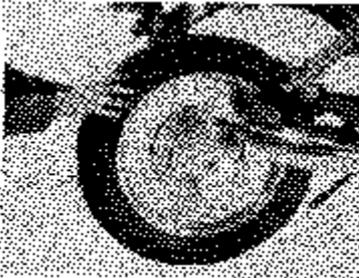

(10) Remove the rear wheel assembly.

WARNING:

If you have found it necessary to remove the rear wheel, it is very important that the nuts and bolts be torqued to the proper specification. We strongly recommend that you have these bolts checked and retorqued by your authorized Suzuki Dealer.

CAUTION:



Check all bolts, nuts and cotter pins after reinstalling the rear wheel.

LIGHT BULB REPLACEMENT

The wattage rating of each bulb is shown on the chart below. When replacing a burned out bulb, always use the exact same wattage rating. Using other than the specified rating can result in overloading the electrical system or premature failure of a bulb.

Headlight	12V 50/35W
Tail/Brake light	12V 8/23W (3/32 cp)
Turn signal light	12V 23W (32 cp)

HEADLIGHT

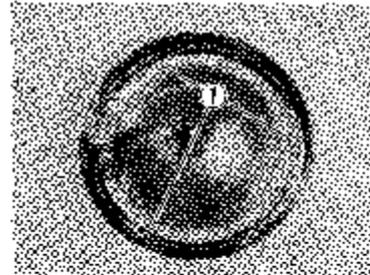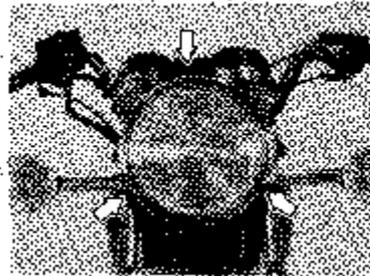

To remove the headlight perform the following steps:

- (1) Remove the three screws from the headlight retainer ring. Remove the headlight.
- (2) Remove the headlight from the wiring harness socket.
- (3) Pulling up the headlight clamp (1) and the bulb unit can now be removed from the retainer ring.

To reinstall the headlight assembly, simply reverse the above sequence listed.