


21. TROUBLESHOOTING


ENGINE DOES NOT START OR IS HARD TO START	21-1	POOR PERFORMANCE AT HIGH SPEED	21-4
ENGINE LACKS POWER	21-2	UNDERCHARGED BATTERY	21-4
POOR PERFORMANCE AT LOW AND IDLE SPEEDS	21-3	OVERCHARGED BATTERY	21-5
		NO SPARKS	21-5

ENGINE DOES NOT START OR IS HARD TO START




ENGINE LACKS POWER

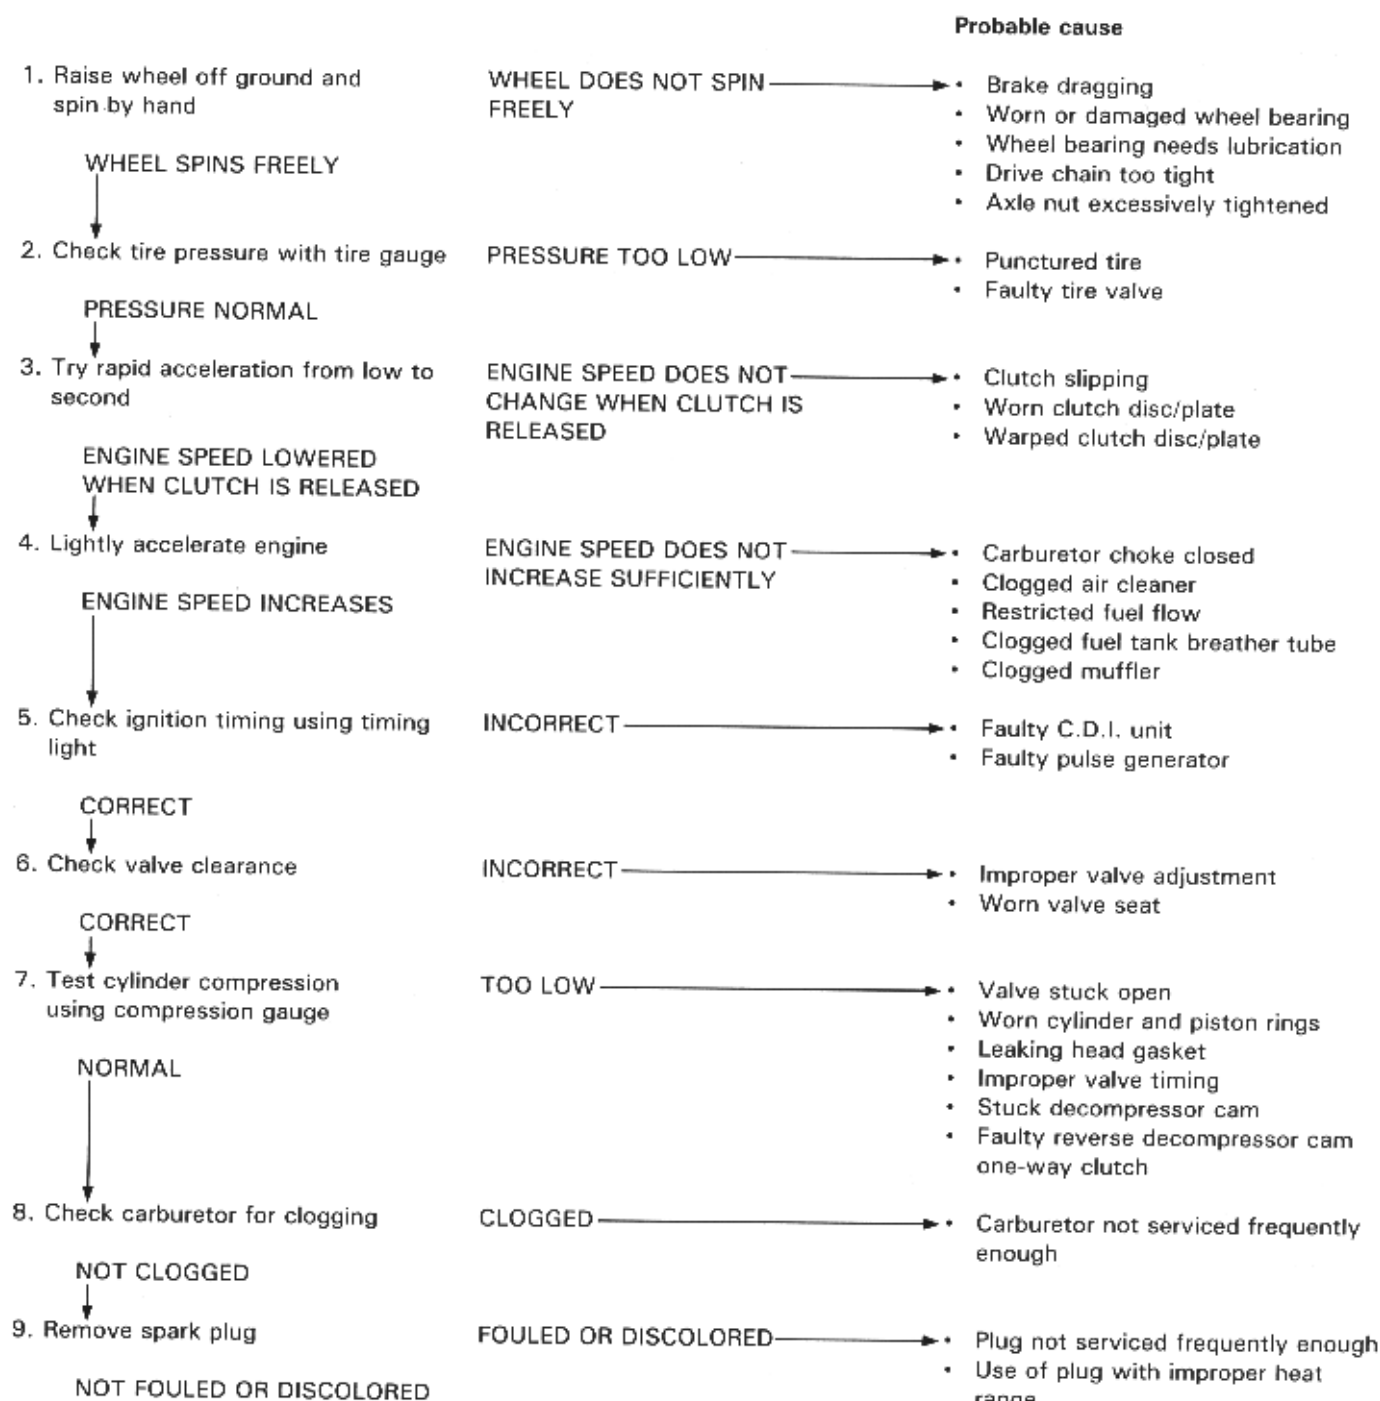


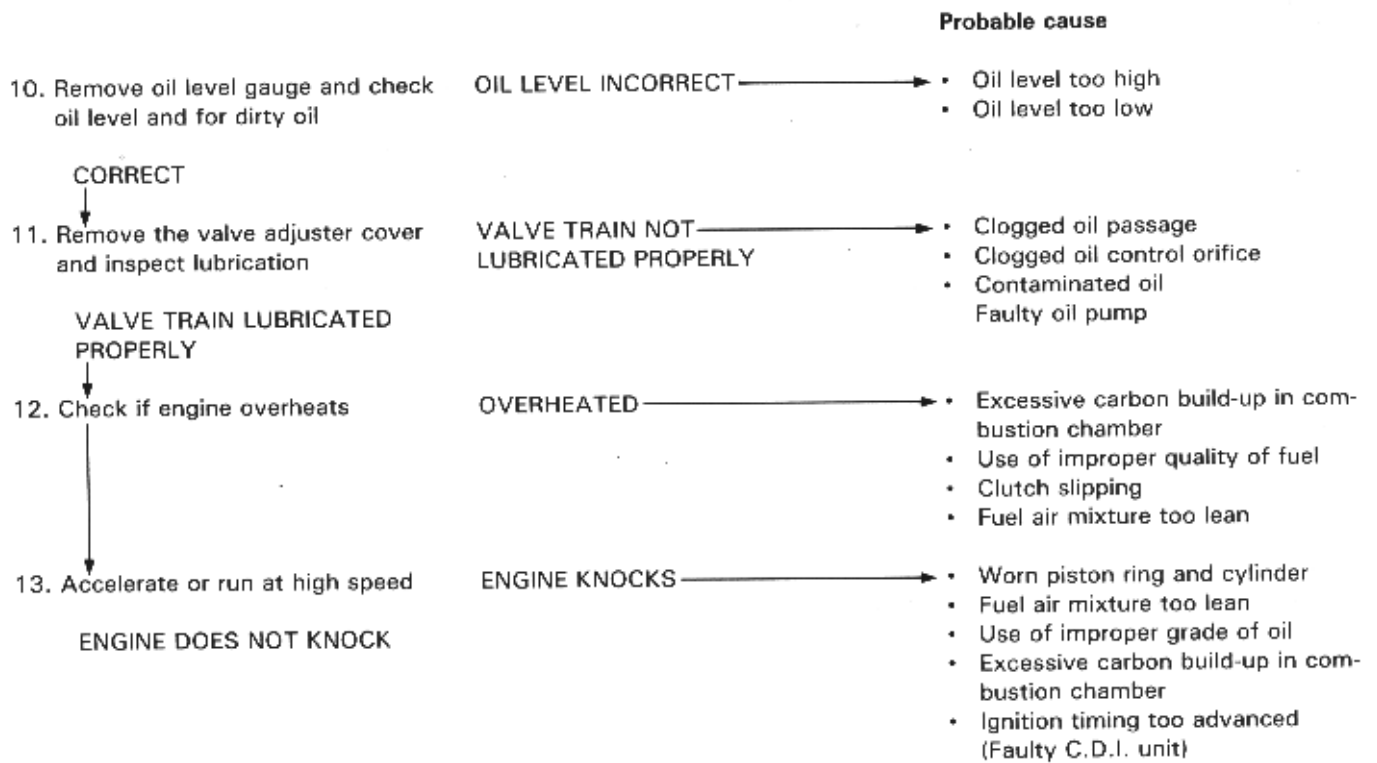


POOR PERFORMANCE AT LOW AND IDLE SPEEDS

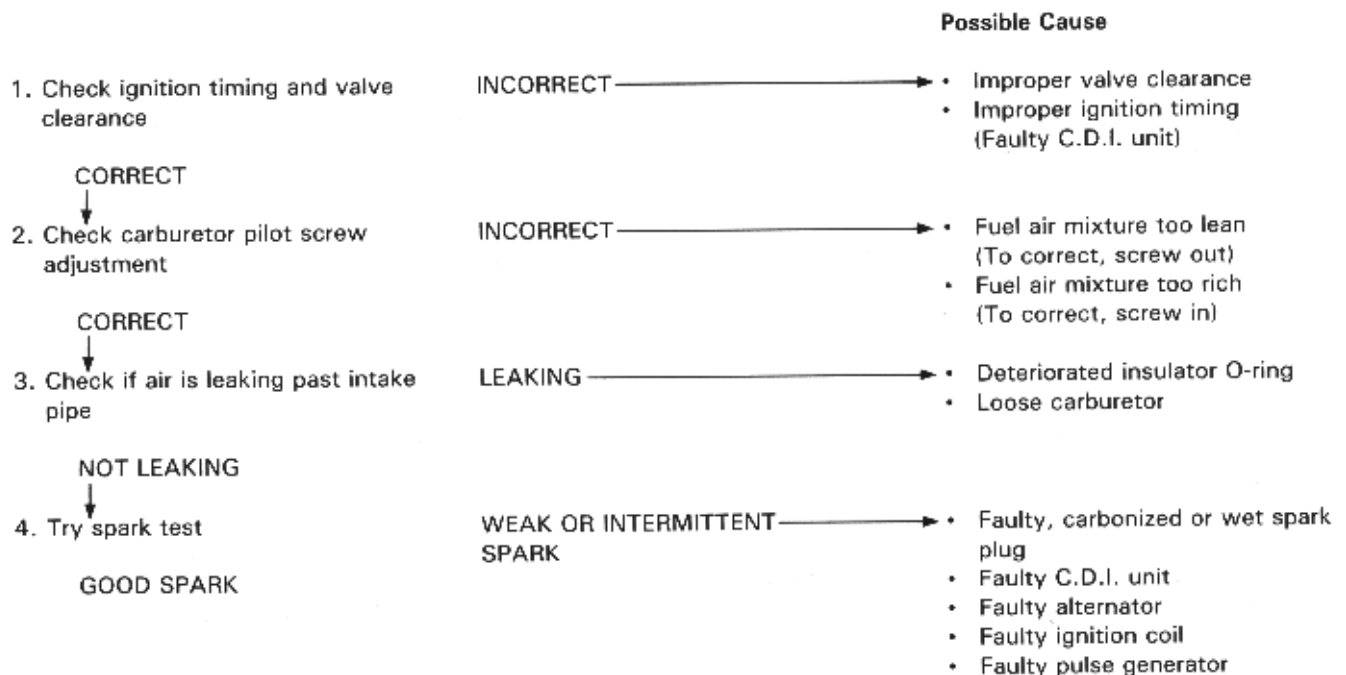


POOR PERFORMANCE AT HIGH SPEED

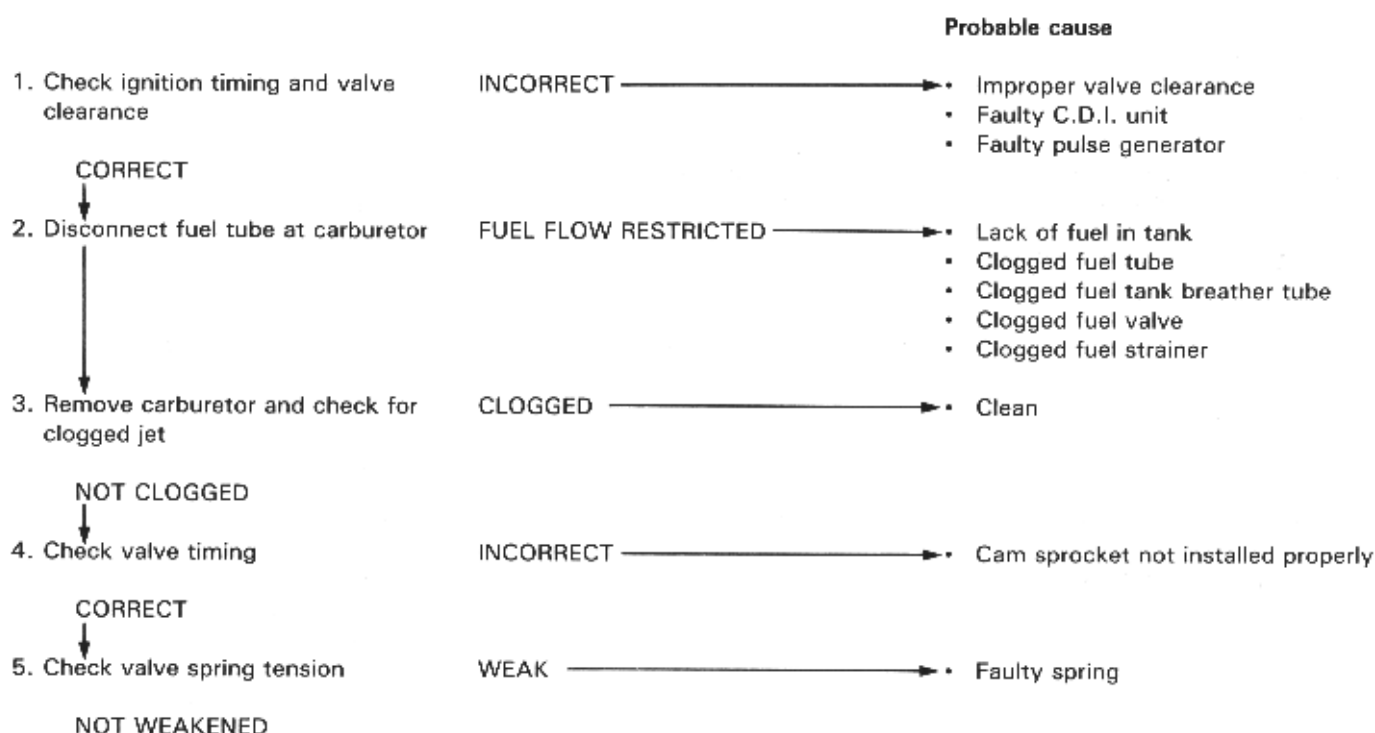

UNDERCHARGED BATTERY

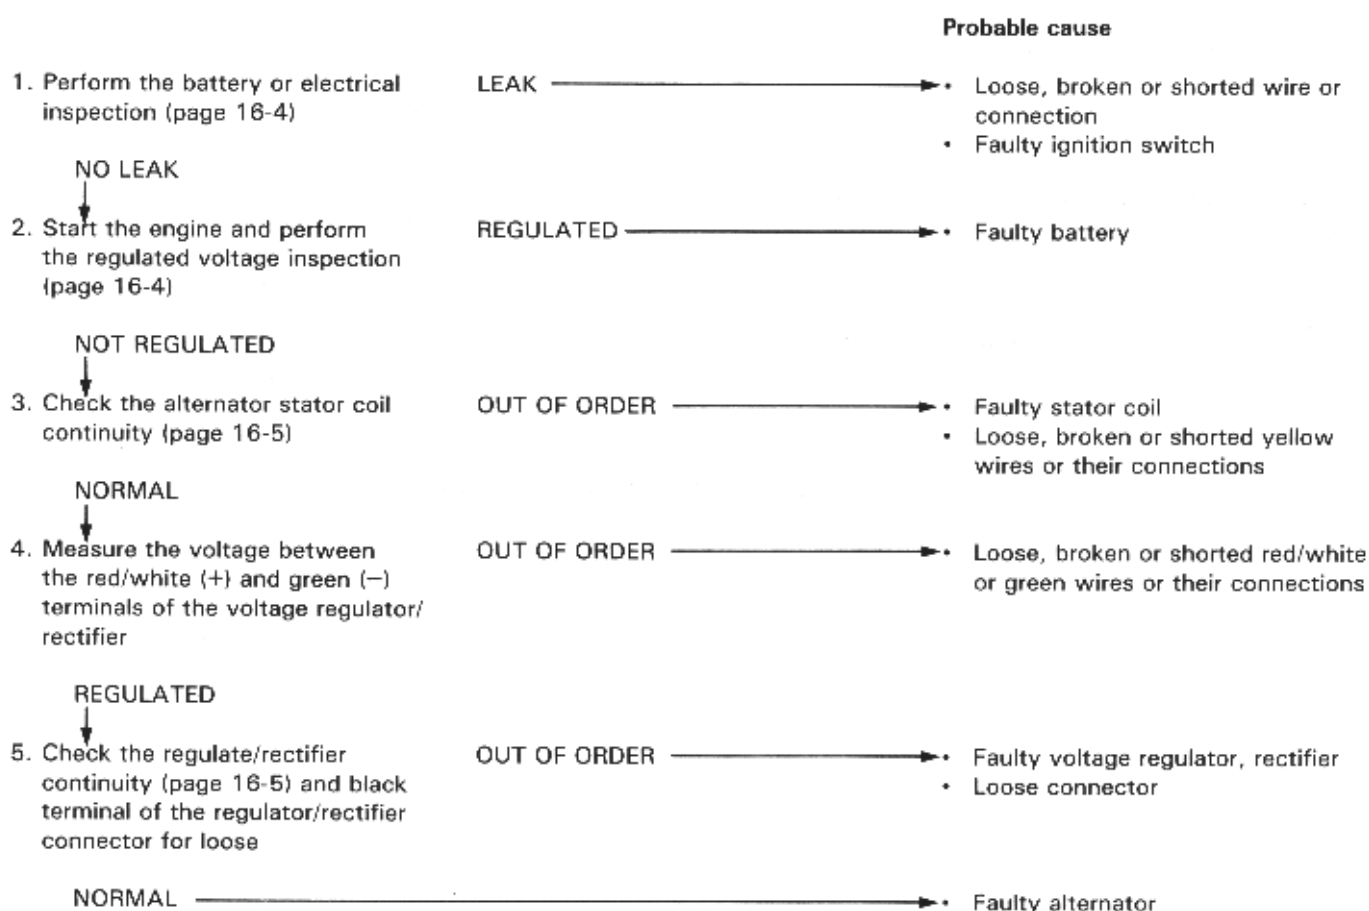

OVERCHARGED BATTERY

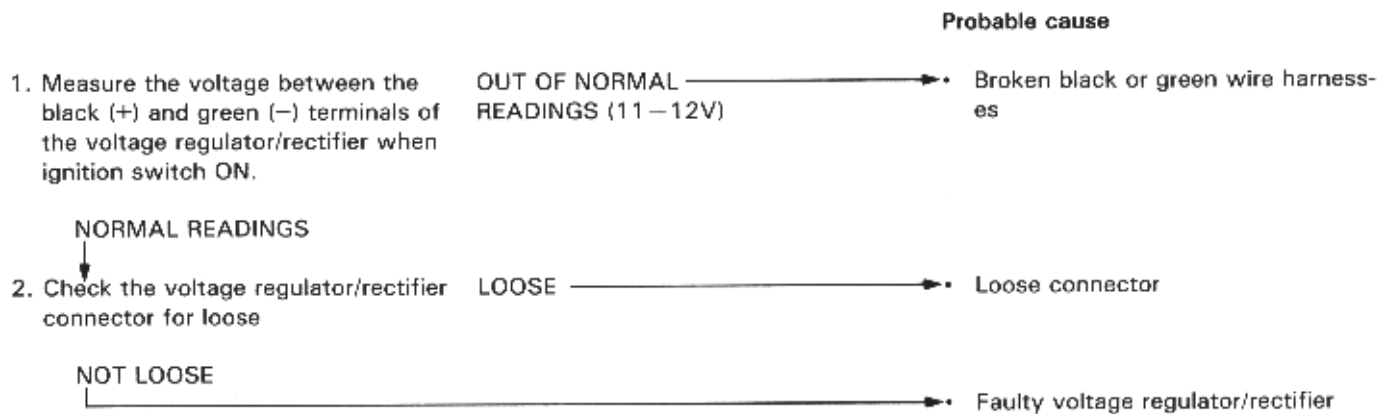

NO SPARKS

