

YAMAHA

XTZ660 ('91)

3YF-ME1

SERVICE MANUAL

NOTICE

This manual was written by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to put an entire mechanic's education into one manual, so it is assumed that persons using this book to perform maintenance and repairs on Yamaha motorcycle have a basic understanding of the mechanical concepts and procedures inherent in motorcycle repair technology. Without such knowledge, attempted repairs or service to this model may render it unfit to use and/or unsafe.

Yamaha Motor Company, Ltd. is continually striving to improve all models manufactured by Yamaha. Modifications and significant changes in specifications or procedures will be forwarded to all Authorized Yamaha dealers and will, where applicable, appear in future editions of this manual.

PARTICULARLY IMPORTANT INFORMATION

This material is distinguished by the following notation.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

WARNING

Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander, or a person inspecting or repairing the motorcycle.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the motorcycle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

HOW TO USE THIS MANUAL

CONSTRUCTION OF THIS MANUAL

This manual consists of chapters for the main categories of subjects. (See "Illustrated symbols")

- 1st title ① : This is a chapter with its symbol on the upper right of each page.
- 2nd title ② : This title appears on the upper of each page on the left of the chapter symbol. (For the chapter "Periodic inspection and adjustment" the 3rd title appears.)
- 3rd title ③ : This is a final title.

MANUAL FORMAT


All of the procedures in this manual are organized in a sequential, step-by-step format. The information has been compiled to provide the mechanic with an easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspections. A set of particularly important procedure ④ is placed between a line of asterisks "*" with each procedure preceded by "•".




IMPORTANT FEATURES

- Data and a special tool are framed in a box preceded by a relevant symbol ⑤.
- An encircled numeral ⑥ indicates a part name, and an encircled alphabetical letter data or an alignment mark ⑦, the others being indicated by an alphabetical letter in a box ⑧.
- A condition of a faulty component will precede an arrow symbol and the course of action required the symbol ⑨.

EXPLODED DIAGRAM

Each chapter provides exploded diagrams before each disassembly section for ease in identifying correct disassembly and assembly procedures.

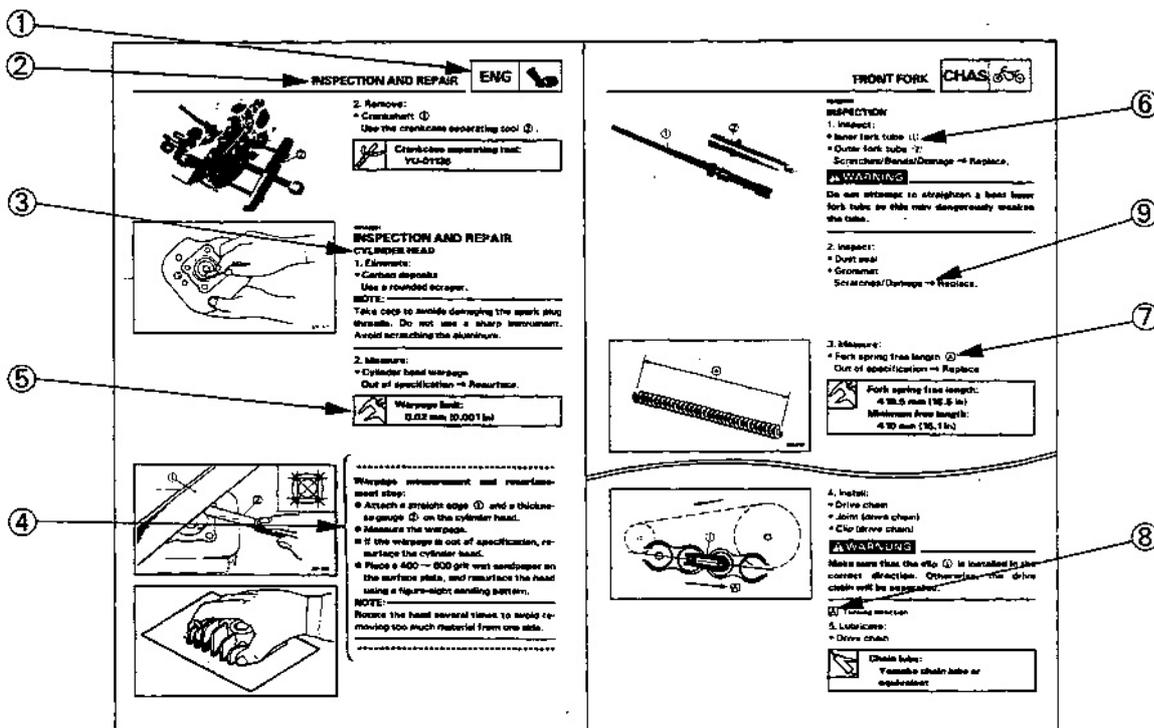

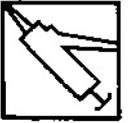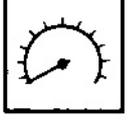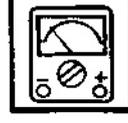① GEN INFO 	② SPEC 	
③ INSP ADJ 	④ ENG 	
⑤ COOL 	⑥ CARB 	
⑦ CHAS 	⑧ ELEC 	
⑨ TRBL SHTG ?	⑩ 	
⑪ 	⑫ 	
⑬ 	⑭ 	
⑮ 	⑯ 	
⑰ 	⑱ 	⑲ 
⑳ 	㉑ 	㉒ 
㉓ 		

ILLUSTRATED SYMBOLS (Refer to the illustration)

Illustrated symbols ① to ⑨ are designed as thumb tabs to indicate the chapter's number and content.

- ① General information
- ② Specifications
- ③ Periodic inspection and adjustment
- ④ Engine
- ⑤ Cooling system
- ⑥ Carburetion
- ⑦ Chassis
- ⑧ Electrical
- ⑨ Troubleshooting

Illustrated symbols ⑩ to ⑯ are used to identify the specifications appearing in the text.

- ⑩ Filling fluid
- ⑪ Lubricant
- ⑫ Special tool
- ⑬ Tightening
- ⑭ Wear limit, clearance
- ⑮ Engine speed
- ⑯ Ω , V, A

Illustrated symbols ⑰ to ㉓ in the exploded diagram indicate grade of lubricant and location of lubrication point.

- ⑰ Apply engine oil
- ⑱ Apply gear oil
- ⑲ Apply molybdenum disulfide oil
- ㉑ Apply wheel bearing grease
- ㉒ Apply lightweight lithium-soap base grease
- ㉓ Apply molybdenum disulfide grease
- ㉔ Apply locking agent (LOCTITE®)


INDEX

GENERAL INFORMATION	
	GEN INFO 1
SPECIFICATIONS	
	SPEC 2
PERIODIC INSPECTION AND ADJUSTMENT	
	INSP ADJ 3
ENGINE OVERHAUL	
	ENG 4
COOLING SYSTEM	
	COOL 5
CARBURETION	
	CARB 6
CHASSIS	
	CHAS 7
ELECTRICAL	
	ELEC 8
TROUBLESHOOTING	
	TRBL SHTG 9

CHAPTER 1. GENERAL INFORMATION

MOTORCYCLE IDENTIFICATION	A-8
VEHICLE IDENTIFICATION NUMBER (For CNR, E)	A-8
FRAME SERIAL NUMBER (Except for CNR, E)	A-8
ENGINE SERIAL NUMBER	A-8
IMPORTANT INFORMATION	A-8
PREPARATION FOR REMOVAL AND DISASSEMBLY	A-8
ALL REPLACEMENT PARTS	A-9
GASKETS, OIL SEALS, AND O-RINGS	A-9
LOCK WASHERS/PLATES AND COTTER PINS	A-9
BEARING AND OIL SEALS	A-9
CIRCLIPS	A-9
SPECIAL TOOLS	A-9
FOR TUNE UP	A-9
FOR ENGINE SERVICE	A-10
FOR CHASSIS SERVICE	A-12
FOR ELECTRICAL COMPONENTS	A-12

GENERAL INFORMATION

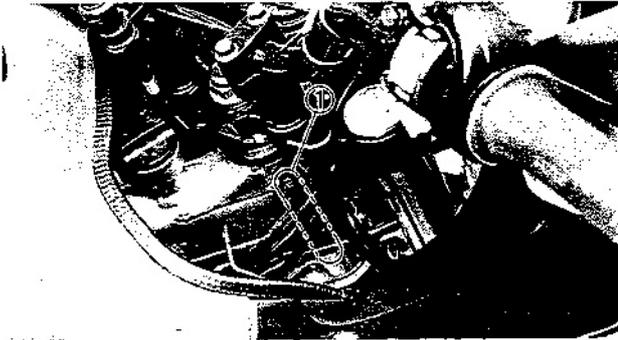

**MOTORCYCLE IDENTIFICATION
VEHICLE IDENTIFICATION NUMBER
(For CNR, E)**


The vehicle identification number ① is stamped into the right side of the steering head.

Starting serial number:
JYA3YFS0*MA029101

**FRAME SERIAL NUMBER
(Except for CNR, E)**

The frame serial number ① is stamped into the right side of the steering head.

Starting serial number:
XTZ660...3YF-000101 (A)(B)(D)(DK)
(F)(GB)(GR)(I)
(N)(NL)(PRT)
(S)(SF)
XTZ660...4BW-000101 (A)(CH)

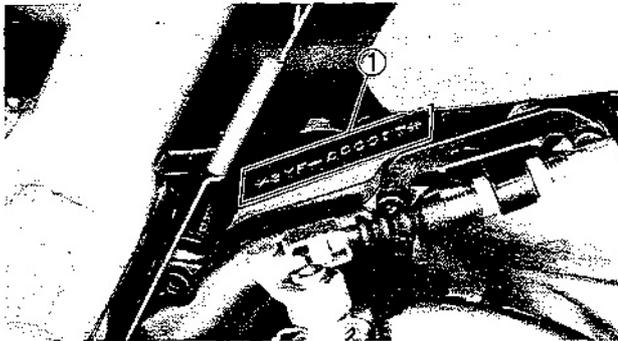

ENGINE SERIAL NUMBER

The engine serial number ① is stamped into the elevated part of the right rear section of the engine.

Starting serial number:
XTZ660...3YF-000101 (A)(B)(D)(DK)
(F)(GB)(GR)(I)
(N)(NL)(PRT)
(S)(SF)
XTZ660...3YF-029101 (CNR)(E)
XTZ660...4BW-000101 (A)(CH)

NOTE:


- The first three digits of these numbers are for model identifications; the remaining digits are the unit production number.
- Designs and specifications are subject to change without notice.




IMPORTANT INFORMATION

PREPARATION FOR REMOVAL AND
DISASSEMBLY

1. Remove all dirt, mud, dust, and foreign material before removing and disassembling.

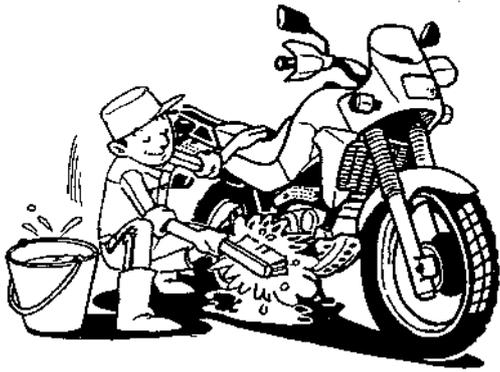

2. Use proper tools and cleaning equipment. Refer to "SPECIAL TOOL."

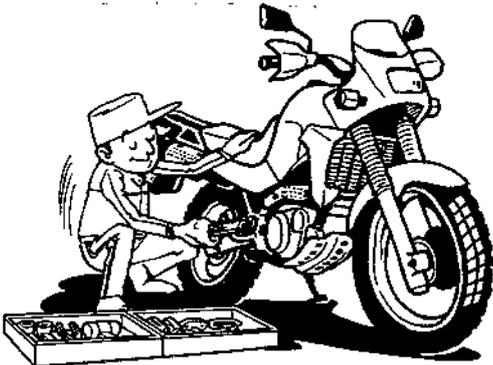



3. When disassembling the motorcycle, keep mated parts together. This includes gears, cylinders, pistons, and other mated parts that have been "mated" through normal wear. Mated parts must be reused as an assembly or replaced.



4. During the motorcycle disassembly, clean all parts and place them in trays in the order of disassembly. This will speed up assembly time and help assure that all parts are correctly reinstalled.

5. Keep away from fire.

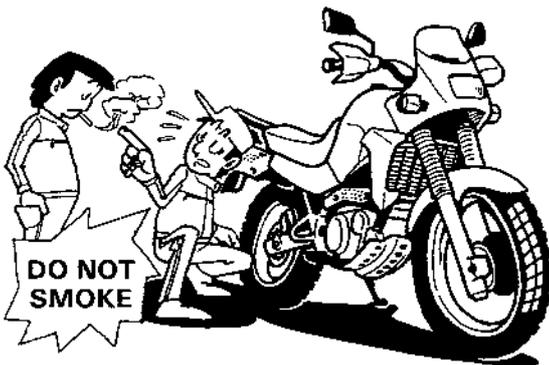

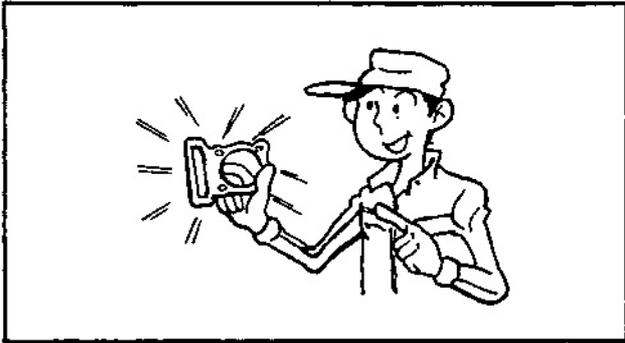

ALL REPLACEMENT PARTS


1. Use only genuine Yamaha parts for all replacements. Use oil and /or grease recommended by Yamaha for assembly and adjustment. Other brands may be similar in function and appearance, but inferior in quality.

GASKETS, OIL SEALS, AND O-RINGS

1. All gaskets, seals and O-rings should be replaced when an engine is overhauled. All gasket surfaces, oil seal lips and O-rings must be cleaned.
2. Properly oil all mating parts and bearings during reassembly. Apply grease to the oil seal lips.


LOCK WASHERS/PLATES AND COTTER PINS

1. All lock washers/plates ① and cotter pins must be replaced when they are removed. Lock tab(s) should be bent along the bolt or nut flat(s) after the bolt or nut has been properly tightened.

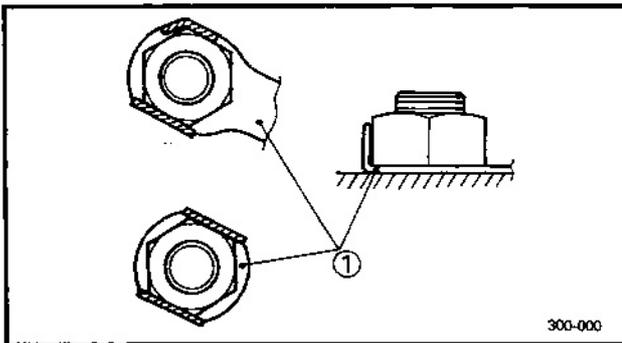

BEARINGS AND OIL SEALS


1. Install the bearing(s) and oil seal(s) with their manufacturer's marks or numbers facing outward. (In other words, the stamped letters must be on the side exposed to view.) When installing oil seal(s), apply a light coating of light-weight lithium base grease to the seal lip(s). Oil the bearings liberally when installing.

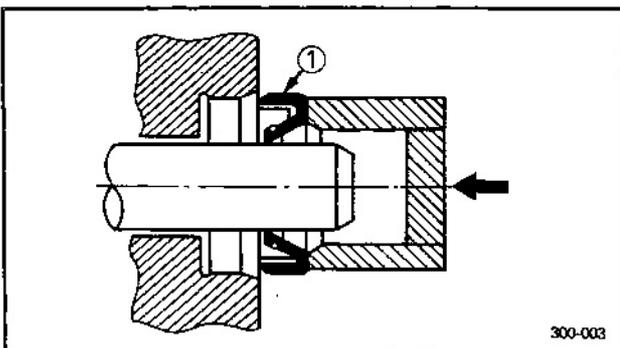


① Oil seal

CAUTION: _____

Do not use compressed air to spin the bearings dry. This causes damage to the bearing surfaces.

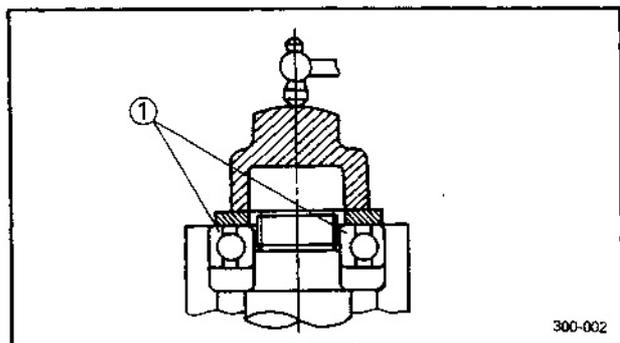

① Bearing

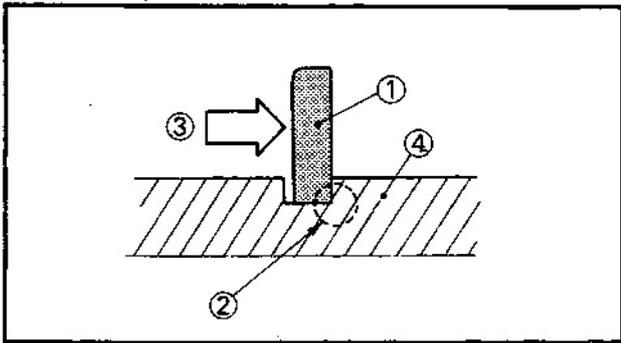

CIRCLIPS

1. All circlips should be inspected carefully before reassembly. Always replace piston pin clips after one use. Replace distorted circlips. When installing a circlip ①, make sure that the sharp-edged corner ② is positioned opposite to the thrust ③ it receives. See the sectional view.

④ Shaft


SPECIAL TOOLS

The proper special tools are necessary for complete and accurate tune-up and assembly. Using the correct special tool will help prevent damage caused by the use of improper tools or improvised techniques.

The shape and part number used for the special tool differ by country, so two types are provided. Refer to the list provided to avoid errors when placing an order.

P/N. YM- □□□□□, YU- □□□□□ } For
 YS- □□□□□, YK- □□□□□ } US, CDN
 ACC-□□□□□

P/N. 90890-□□□□□ } Except for
 US, CDN

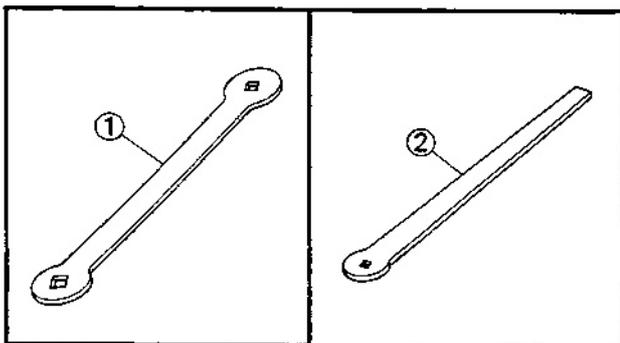


FOR TUNE UP

1. Valve adjusting tool

P/N. YM-08035-①

P/N. 90890-01311-②

This tool is necessary for adjusting the valve clearance.

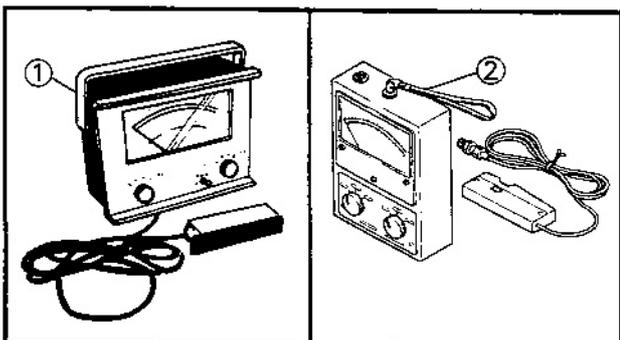

2. Inductive tachometer

P/N. YU-08036-A-①

P/N. 90890-03113-②

This tool is needed for detecting engine rpm.

SPECIAL TOOLS




3. Inductive timing light

P/N. YM-33277-A—①

P/N. 90890-03141—②

This tool is necessary for checking ignition timing.

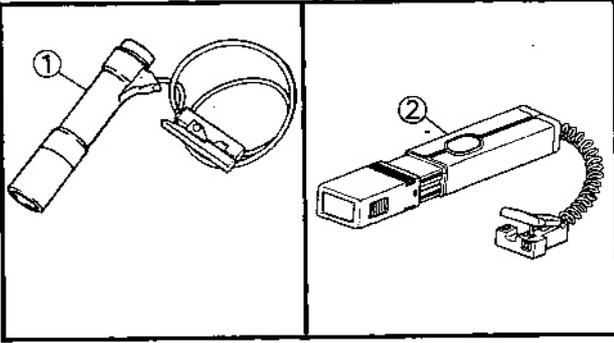

4. Compression gauge

P/N. YU-33223—①


P/N. 90890-03081—②

Adapter (M12)

P/N. YU-33223-3—③

P/N. 90890-04082—④

These gauges are used to measure the engine compression.

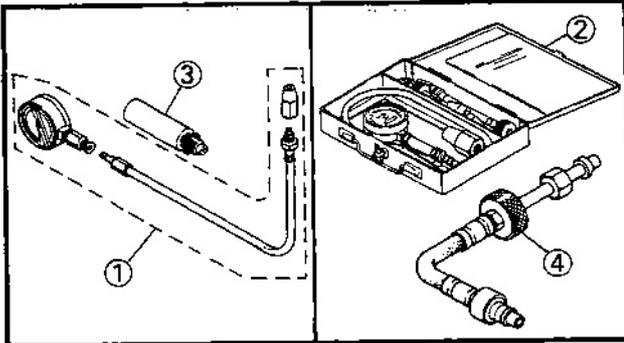


5. Fuel level gauge

P/N. YM-01312-A

P/N. 90890-01312

This gauge is used to measure the fuel level in the float chamber.

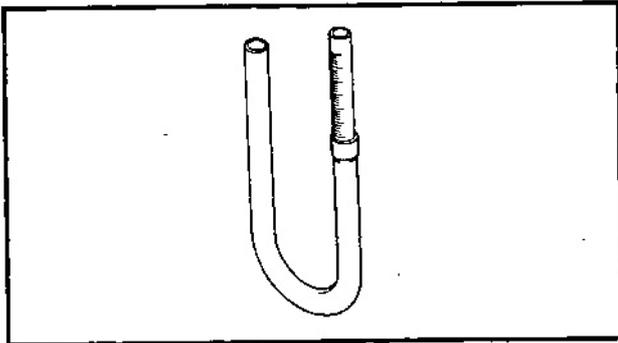


6. Steering nut wrench

P/N. YM-38520—①

P/N. 90890-01443—②

This tool is used to adjust the spring preload of rear shock absorber.

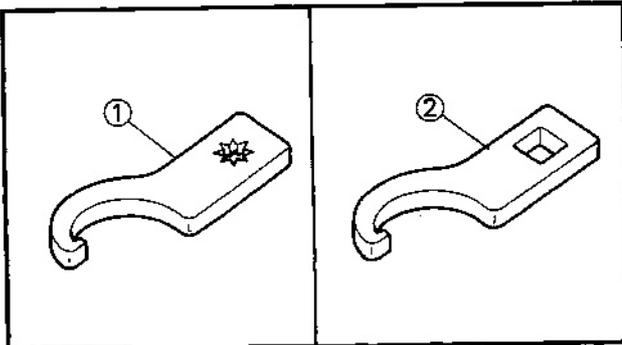


FOR ENGINE SERVICE

1. Piston pin puller


P/N. YU-01304

P/N. 90890-01304

This tool is used to remove the piston pin.

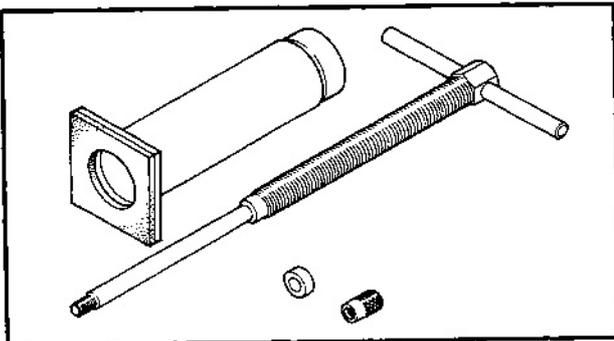


SPECIAL TOOLS

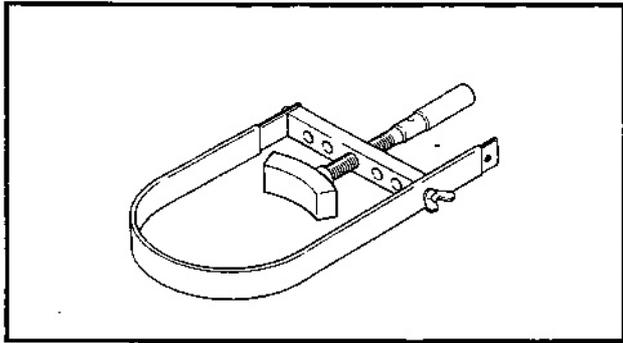


2. Rotor holder
P/N. YS-01880
P/N. 90890-01701

This tool is used to hold the rotor when removing or installing the rotor securing nut.

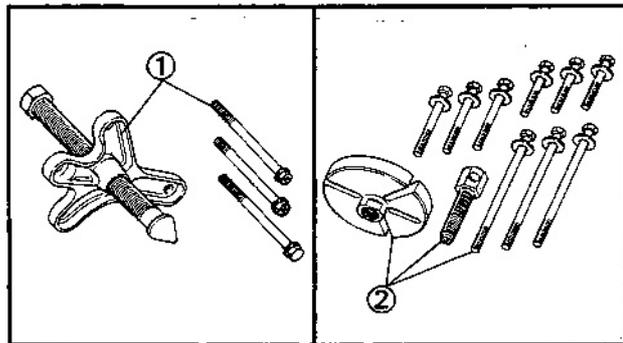


3. Rotor puller
P/N. YU-33270-①
P/N. 90890-01362-②

This tool is used to remove the rotor.

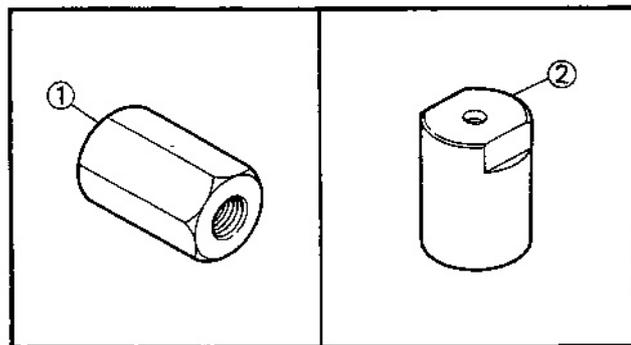


4. Rotor puller adapter
P/N. YM-04063-A-①
P/N. 90890-04063-②

This tool is used to remove the rotor.

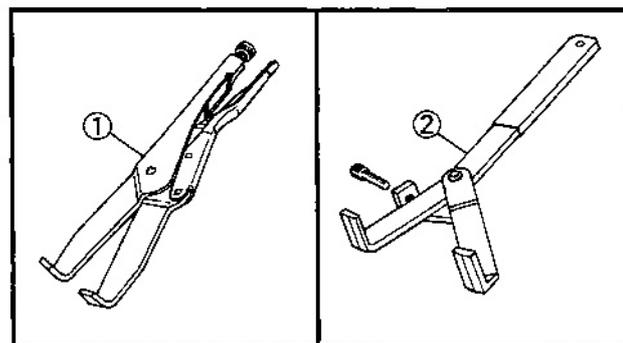

5. Universal clutch holder
P/N. YM-91042-①
P/N. 90890-04086-②


This tool is used to hold the clutch when removing or installing the clutch boss locknut.

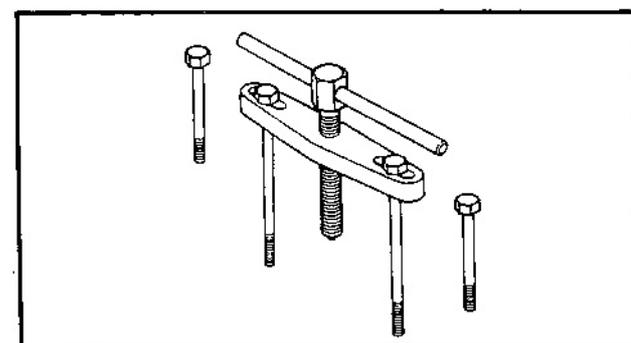

6. Crankcase separator
P/N. YU-01135-A
P/N. 90890-01135


This tool is necessary to separate the crankcase.

SPECIAL TOOLS

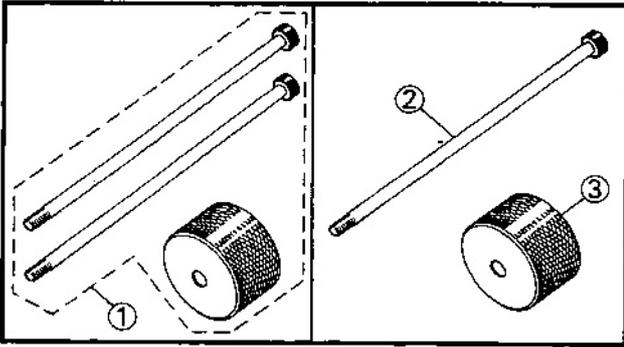


7. Slide hammer set
P/N. YU-01083-A — ①
Slide hammer bolt
P/N. 90890-01083 — ②
Weight
P/N. 90890-01084 — ③

These tools are used when removing the rocker arm shaft.

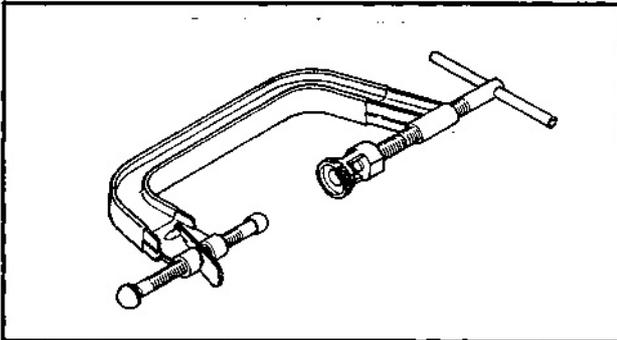


8. Valve spring compressor
P/N. YM-04019
P/N. 90890-04019

This tool is needed to remove and install the valve assemblies.

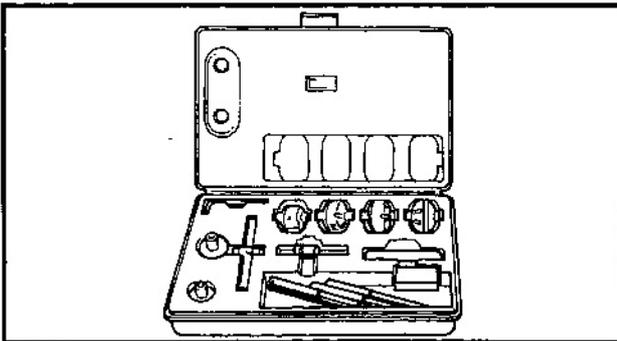


9. Valve seat cutter set
P/N. YM-91043

This tool is needed to resurface the valve seat.

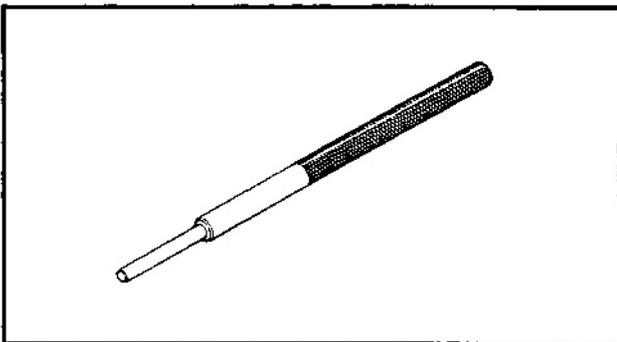

10. Valve guide remover 6 mm (0.24 in)
P/N. YM-04064
P/N. 90890-04064

This tool is used to remove the valve guides.

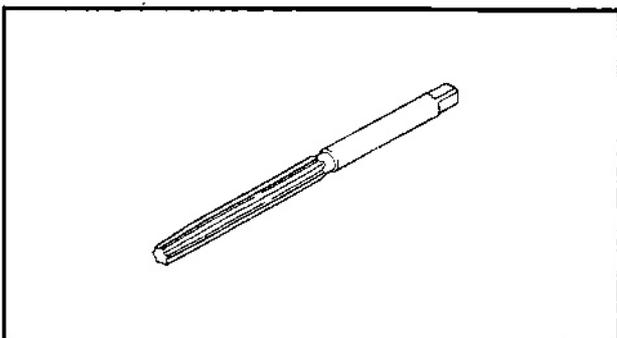


11. Valve guide reamer 6 mm (0.24 in)
P/N. YM-04066
P/N. 90890-04066

This tool is used to rebore the new valve guide.


SPECIAL TOOLS

GEN
INFO

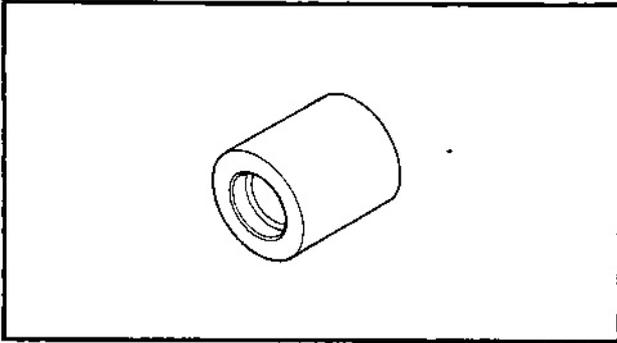


12. Valve guide installer 6 mm (0.24 in)
P/N. YM-04065-A
P/N. 90890-04065

This tool is needed to install the valve guides properly.

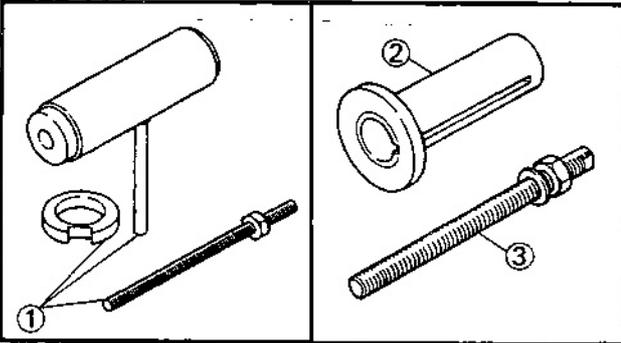


13. Crankshaft installer set
P/N. YU-90050—①
Crankshaft installer pot
P/N. 90890-01274—②
Crankshaft installer bolt
P/N. 90890-01275—③

These tools are used to install the crankshaft.

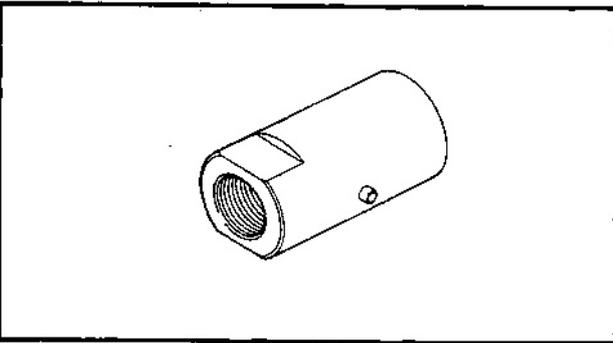


14. Adapter #10 (M14)
P/N. YM-90069
P/M. 90890-04059

This tool is used to install the crankshaft.

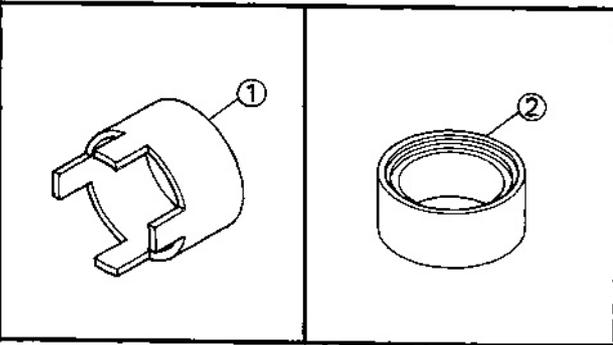

15. Crank pot spacer
P/N. YM-91044
P/N. 90890-04081—①
Spacer
P/N. 90890-01288—②


This tool is used to install the crankshaft.

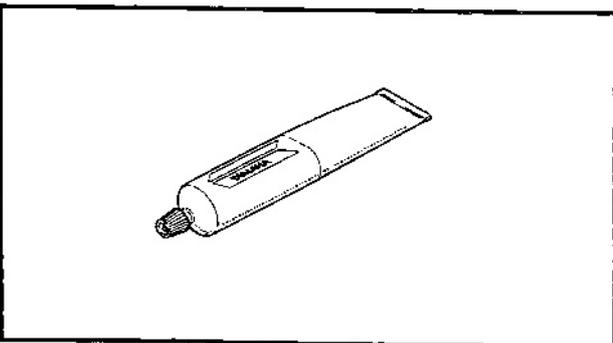

16. Sealant (quick gasket)®
P/N. ACC-11001-01
Yamaha Bond No. 1215®
P/N. 90890-85505

This sealant (bond) is used for crankcase mating surfaces, etc.


SPECIAL TOOLS

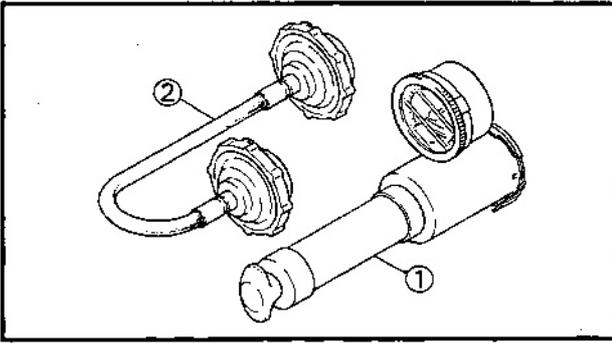

17. Radiator cap tester
P/N. YU-24460-01
P/N. 90890-01325—①
Adapter
P/N. YU-33984
P/N. 90890-01352—②


This tester is used for checking the cooling system.

FOR CHASSIS SERVICE

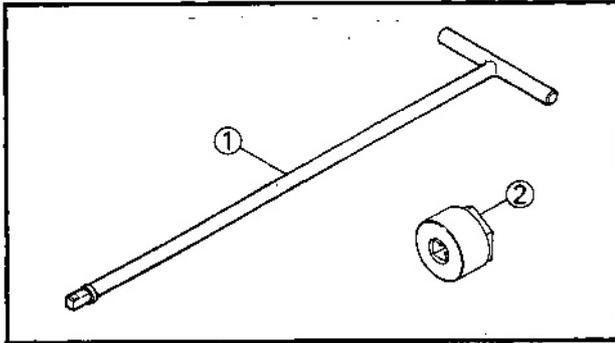


1. T-Handle
P/N. YM-01326
P/N. 90890-01326--①
Damper rod holder 30 mm (1.18 in)
P/N. YM-01327
P/N. 90890-01327—②

This tool is used to loosen and tighten the front fork damper rod holding bolt.

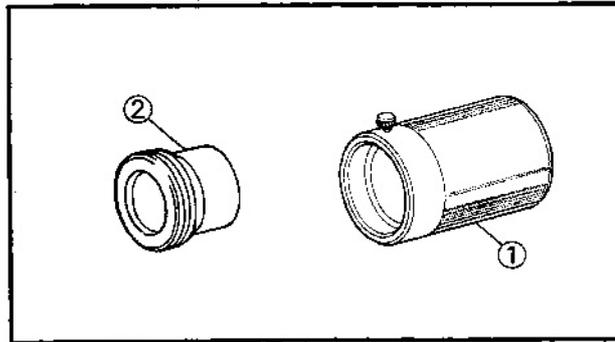

2. Front fork seal drive weight
P/N. YM-33963
P/N. 90890-01367—①
Adapter 43 mm (1.69 in)
P/N. YM-08020
P/N. 90890-01374—②


These tools are used when installing the fork oil seal.

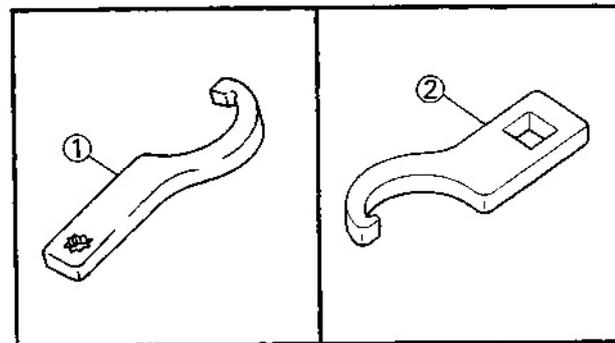

3. Ring nut wrench
P/N. YU-33975--①
P/N. 90890-01403--②

This tool is used to loosen and tighten the steering ring nut.


FOR ELECTRICAL COMPONENTS

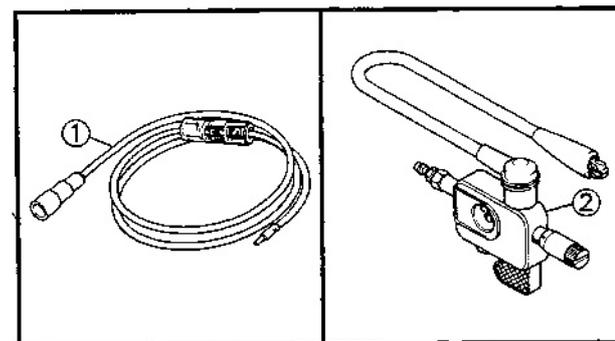

1. Dynamic spark tester
P/N. YM-34487--①
Ignition checker
P/N. 90890-06754--②

This instrument is necessary for checking the ignition system components.

SPECIAL TOOLS

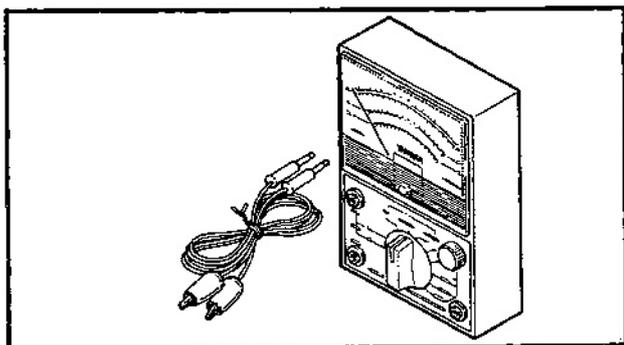

- 2. Pocket tester
P/N. YU-03112
P/N. 90890-03112

This instrument is available for checking the electrical system.

CHAPTER 2. SPECIFICATIONS

GENERAL SPECIFICATIONS	A-16
MAINTENANCE SPECIFICATIONS	B-1
ENGINE	B-1
CHASSIS	B-6
ELECTRICAL	B-8
GENERAL TORQUE SPECIFICATIONS	B-10
DEFINITION OF UNITS	B-10
LUBRICATION POINT AND LUBRICANT TYPE	B-10
ENGINE	B-10
CHASSIS	B-11
LUBRICATION DIAGRAM	B-11
COOLANT DIAGRAM	B-13
CABLE ROUTING	B-14

GENERAL SPECIFICATIONS

SPEC



SPECIFICATIONS

GENERAL SPECIFICATIONS

Model	XTZ660
Model Code Number:	3YF1: (A)(B)(D)(DK)(F)(GB)(GR)(I)(N)(NL) (PRT)(S)(SF) 3YF2: (CNR)(E) 4BW1: (A)(CH)
Vehicle Identification Number:	JYA3YFS0*MA029101: (CNR)(E)
Frame Starting Number:	3YF-000101: (A)(B)(D)(DK)(F)(GB)(GR)(I)(N)(NL) (PRT)(S)(SF) 4BW-000101: (A)(CH)
Engine Starting Number:	3YF-000101: (A)(B)(D)(DK)(F)(GB)(GR)(I)(N)(NL) (PRT)(S)(SF) 3YF-029101: (CNR)(E) 4BW-000101: (A)(CH)
Dimensions:	
Overall Length	2,265 mm (89.2 in) 2,355 mm (92.7 in): (CH)(D)(DK)(N)(S)(SF)
Overall Width	885 mm (34.8 in)
Overall Height	1,355 mm (53.3 in)
Seat Height	865 mm (34.1 in)
Wheelbase	1,495 mm (58.9 in)
Minimum Ground Clearance	245 mm (9.6 in)
Basic Weight:	
With Oil and Full Fuel Tank	195 kg (430 lb)
Minimum Turning Radius:	2,400 mm (94.5 in)
Engine:	
Engine Type	Liquid cooled 4-stroke, SOHC
Cylinder Arrangement	Forward inclined single cylinder
Displacement	660 cm ³
Bore × Stroke	100 × 84 mm (3.94 × 3.31 in)
Compression Ratio	9.2 : 1
Compression Pressure	1,100 kPa (11,0 kg/cm ² , 156 psi)
Starting System	Electric starter
Lubrication System:	Dry sump
Engine Oil Type or Grade:	<div style="display: flex; align-items: center; justify-content: space-around;"> <div style="text-align: center;"> <p>30</p> <p>40</p> <p>50</p> <p>60°F</p> </div> <div style="text-align: center;"> <p>0</p> <p>5</p> <p>10</p> <p>15°C</p> </div> <div style="margin-left: 20px;"> <p>SAE 20W40 type SE motor oil</p> <p>SAE 10W30 type SE motor oil</p> </div> </div>

GENERAL SPECIFICATIONS

SPEC


Model	XTZ660	
Engine Oil Capacity: Periodic Oil Change: With Oil Filter Replacement Total Amount	2.6 L (2.3 Imp qt, 2.7 US qt) 2.7 L (2.4 Imp qt, 2.9 US qt) 3.0 L (2.6 Imp qt, 3.2 US qt)	
Coolant Total Amount: (Including All Routes)	1.2 L (1.1 Imp qt, 1.3 US qt)	
Air Filter:	Dry type element	
Fuel: Type Tank Capacity Reserve Amount	Regular unleaded gasoline with a research octane number of 91 or higher 20 L (17.6 Imp qt, 21.1 US gal) 3.5 L (3.1 Imp qt, 3.7 US gal)	
Carburetor: Type × Quantity Manufacturer	Y26PV × 1 TEIKEI	
Spark Plu: Type Manufacturer Gap	DPR8EA-9/DPR9EA-9 NGK 0.8 ~ 0.9 mm (0.031 ~ 0.035 in)	
Clutch Type:	Wet, multiple-disc	
Transmission: Transmission Type Operation Primary Reduction System Primary Reduction Ratio Secondary Reduction System Secondary Reduction Ratio Gear Ratio 1st 2nd 3rd 4th 5th	Constant mesh 5-speed Left foot operation Spur gear 71/34 (2.088) Chain Drive 45/15 (3.000) 31/12 (2.583) 27/17 (1.588) 24/20 (1.200) 21/22 (0.954) 19/24 (0.792)	
Chassis: Frame Type Caster Angle Trail	Diamond 28.0° 112 mm (4.41 in)	
Tire:	Front	Rear
Type Size Manufacture (Type)	With tube 90/90-21 54S BRIDGESTONE (TW41) DUNLOP (TRAIL MAX G)	With tube 120/90-17 64S BRIDGESTONE (TW42B) DUNLOP (TRAIL MAX G)





GENERAL SPECIFICATIONS

SPEC



Model	XTZ660	
Tire Pressure (Cold Tire): Maximum load*	180 kg (397 lb)	
Cold tire pressure	Front	Rear
Up to 90 kg (198 lb) load*	200 kPa (2.00 kg/cm ² , 28 psi)	200 kPa (2.00 kg/cm ² , 28 psi)
90 kg (198 lb) ~ Maximum load*	200 kPa (2.00 kg/cm ² , 28 psi)	225 kPa (2.25 kg/cm ² , 32 psi)
*Load is total weight of cargo, rider, passenger, and accessories.		
Brake: Front Brake Type Operation Rear Brake Type Operation	Single disc brake Right hand operation Single disc brake Right foot operation	
Suspension: Front Suspension Rear Suspension	Telescopic fork Swingarm (Link suspension)	
Shock absorber: Front Shock Absorber Rear Shock Absorber	Coil-Air spring/Oil damper Coil-Gas spring/Oil damper	
Wheel Travel: Front Wheel Travel Rear Wheel Travel	220 mm (8.66 in) 200 mm (7.87 in)	
Electrical: Ignition System Generator System Battery Type or Model Battery Capacity	T.C.I. (Digital) A.C. magneto generator YTX9-BS 12V, 8AH	
Headlight Type:	Quartz bulb (Halogen)	
Bulb Wattage × Quantity: Headlight Auxiliary Light Tail/Brake Light Flasher Light	12V 60W/55W × 1 12V 4W × 1 12V 3.4W × 1 (GB) 12V 5W/21W × 1 12V 21W × 4	
Indicator Light: Wattage × Quantity	"METER LIGHT" "NEUTRAL" "HIGH BEAM" "TURN"	12V 1.7W × 2 12V 3.4W × 1 12V 3.4W × 1 12V 3.4W × 2





MAINTENANCE SPECIFICATIONS
ENGINE

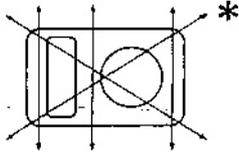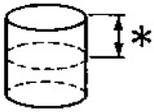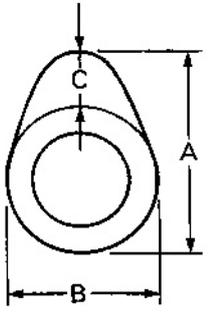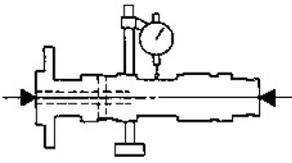Model	XTZ660
<p>Cylinder Head: Warp Limit*</p> 	<p>0.03 mm (0.0012 in) * Lines indicate straightedge measurement.</p>
<p>Cylinder: Bore Size/Measuring Point*</p>  <p><Wear limit></p>	<p>100.005 ~ 100.045 mm (3.9372 ~ 3.9388 in) 50 mm (1.97 in) 100.1 mm (3.941 in)</p>
<p>Camshaft: Drive Method Camshaft Outside Diameter Shaft-to-cap Clearance Cam Dimensions: Intake</p>  <p>Exhaust</p> <p>Camshaft Runout Limit</p> 	<p>Chain drive (Left) 22.967 ~ 22.980 mm (0.9042 ~ 0.9047 in) 0.020 ~ 0.054 mm (0.0008 ~ 0.0021 in) "A" 35.69 ~ 35.79 mm (1.4051 ~ 1.4091 in) < Limit > 35.54 mm (1.3992 in) "B" 30.06 ~ 30.16 mm (1.1835 ~ 1.1874 in) < Limit > 29.91 mm (1.1776 in) "C" 5.74 mm (0.2260 in) Exhaust "A" 36.50 ~ 36.60 mm (1.4370 ~ 1.4409 in) < Limit > 36.35 mm (1.4311 in) "B" 30.11 ~ 30.21 mm (1.1854 ~ 1.1894 in) < Limit > 29.96 mm (1.1795 in) "C" 6.55 mm (0.2579 in) 0.03 mm (0.0012 in)</p>
<p>Timing Chain: Chain Type/No. of Links Chain Adjustment Method</p>	<p>75 RH 2015/126 Links Automatic</p>
<p>Rocker Arm/Rocker Arm Shaft: Rocker Arm Inside Diameter Shaft Outside Diameter Arm-to-shaft Clearance</p>	<p>12.000 ~ 12.018 mm (0.472 ~ 0.473 in) 11.976 ~ 11.991 mm (0.471 ~ 0.472 in) 0.009 ~ 0.042 mm (0.0004 ~ 0.0020 in)</p>

MAINTENANCE SPECIFICATIONS

SPEC

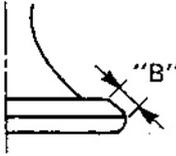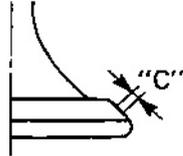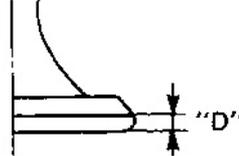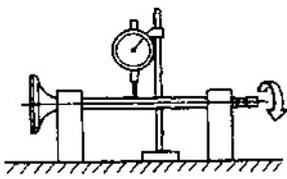

Model	XTZ660	
Valve, Valve Seat, Valve Guide: Valve Clearance (Cold):		
IN.	0.10~0.15 mm (0.004~0.006 in)	
EX.	0.15~0.20 mm (0.006~0.008 in)	
Valve Dimensions:		
 Head Dia.	 Face Width	 Seat Width
		 Margin Thickness
"A" Head Dia.	IN.	29.9~30.1 mm (1.1772~1.1850 in)
	EX.	31.9~32.1 mm (1.2560~1.2638 in)
"B" Face Width	IN.	2.25 mm (0.0886 in)
	EX.	2.26 mm (0.0890 in)
"C" Seat Width	IN.	0.9~1.1 mm (0.035~0.043 in)
	EX.	0.9~1.1 mm (0.035~0.043 in)
"D" Margin Thickness Limit	IN.	0.85~1.15 mm (0.0335~0.0453 in)
	EX.	0.85~1.15 mm (0.0335~0.0453 in)
Stem Outside Diameter	IN.	5.975~5.990 mm (0.2352~0.2358 in)
	EX.	5.960~5.975 mm (0.2346~0.2352 in)
< Limit >	IN.	5.95 mm (0.234 in)
	EX.	5.93 mm (0.233 in)
Guide Inside Diameter	IN.	6.000~6.012 mm (0.2362~0.2367 in)
	EX.	6.000~6.012 mm (0.2362~0.2367 in)
< Limit >	IN.	6.05 mm (0.238 in)
	EX.	6.55 mm (0.258 in)
Stem-to-Guide Clearance	IN.	0.010~0.037 mm (0.0004~0.0015 in)
	EX.	0.025~0.052 mm (0.0010~0.0020 in)
< Limit >	IN.	0.08 mm (0.003 in)
	EX.	0.1 mm (0.004 in)
Stem Runout Limit		0.01 mm (0.0004 in)
		
Valve Seat Width	IN.	0.9~1.1 mm (0.035~0.043 in)
	EX.	0.9~1.1 mm (0.035~0.043 in)

MAINTENANCE SPECIFICATIONS

SPEC



Model	XTZ660
<p>Crankshaft: Crank Width "A" Runout Limit "C" Big End Side Clearance "D" Big End Radial Clearance "E" Small End Free Play "F"</p>	<p>74.95 ~ 75.00 mm (2.951 ~ 2.953 in) 0.03 mm (0.0012 in) 0.35 ~ 0.65 mm (0.014 ~ 0.026 in) 0.01 ~ 0.025 mm (0.0004 ~ 0.0010 in) 0.8 ~ 1.0 mm (0.0315 ~ 0.0394 in)</p>
<p>Balancer: Drive Method</p>	<p>Spur gear</p>
<p>Clutch: Friction Plate: Thickness Quantity Wear Limit Friction plate: Thickness Quantity Wear limit Clutch Plate: Thickness Quantity Warp Limit Clutch Spring: Free Length Quantity Minimum Free Length Clutch Release Method</p>	<p>2.74 ~ 2.86 mm (0.108 ~ 0.113 in) 6 pcs. 2.6 mm (0.102 in) 2.94 ~ 3.06 mm (0.116 ~ 0.120 in) 2 pcs. 2.8 mm (0.110 in) 1.2 mm (0.047 in) 7 pcs. 0.2 mm (0.008 in) 42.8 mm (1.685 in) 5 pcs. 40.8 mm (1.606 in) Outer pull, rack and pinion pull</p>
<p>Transmission: Main Axle Runout Limit Drive Axle Runout Limit</p>	<p>0.08 mm (0.003 in) 0.08 mm (0.003 in)</p>
<p>Shifter: Type</p>	<p>Cam Drum and Guide bar</p>
<p>Decompression Device: Type</p>	<p>Auto</p>

MAINTENANCE SPECIFICATIONS

SPEC



Model	XTZ660	
Carburetor: I.D. Mark	3YF 00, 4BW 00 (A)(CH)	
	Primary	Secondary
Main Jet (M.J.)	# 130	# 165
Main Air Jet (M.A.J.)	φ1.0	φ1.0
Jet Needle (J.N.)	5D96-3/5 5D97-3/5 (A)(CH)	5X7C-3/5
Needle Jet (N.J.)	V00	φ2.7
Pilot Jet (P.J.)	# 48	—
Pilot Air Jet (P.A.J.)	φ0.6	—
Bypass (B.P.)	φ1.0	—
Pilot Screw (P.S.)	2 and 1/2 turns out	—
Valve Seat (V.S.)	φ2.5	—
Starter Jet (G.S.)	# 76	
Pilot Outlet (P.O.)	φ0.8	
Fuel Level (F.L.)	6.0 ~ 8.0 mm (0.24 ~ 0.31 in)	
Float Height (F.H.)	Below from the float chamber mating surface 25 ~ 27 mm (0.98 ~ 1.06 in)	
Engine Idling Speed	1,250 ~ 1,350 r/min	
Vacuum Pressure at Idling Speed	26.6 ~ 34.6 kPa (200 ~ 260 mmHg, 7.87 ~ 10.24 in Hg)	
Lubrication System:		
Oil Filter Type	Paper type	
Oil Pump Type	Trochoid pump type	
Tip Clearance	0.12 mm (0.005 in)	
Side Clearance	0.03 ~ 0.08 mm (0.001 ~ 0.003 in)	
Bypass Valve Setting Pressure	80 ~ 120 kPa (0.8 ~ 1.2 kg/cm ² , 11.38 ~ 17.07 psi)	
Cooling System:		
Radiator Core Size	Width	280 mm (11.02 in)
	Height	147.8 mm (5.82 in)
	Thickness	32 mm (1.26 in)
Radiator Cap Opening Pressure	95 ~ 125 kPa (0.95 ~ 1.25 kg/cm ² , 13.51 ~ 17.77 psi)	
Recovery Tank Capacity < From Low to Full Level >	0.29 L (0.26 Imp qt, 0.31 US qt) < 0.17 L (0.15 Imp qt, 0.18 US qt) >	
Water Pump		
Type	Single-suction centrifugal pump	
Reduction Ratio	33/34 (0.971)	
Thermostat		
Opening Temperature	80 ~ 84°C (176 ~ 183°F)	

MAINTENANCE SPECIFICATIONS

SPEC



TIGHTENING TORQUE

Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks	
				Nm	m•kg	ft•lb		
Cylinder head	Flange bolt	M9	4	38	3.8	27		
Cylinder head	Flange bolt	M9	2	38	3.8	27		
Cylinder head	Hexagon socket head bolt	M6	1	10	1.0	7.2		
Cylinder head (Exhaust pipe)	Stud bolt	M6	4	7	0.7	5.1		
Cylinder head	Straight plug screw	M18		55	5.5	40		
Spark plug	—	M12	1	17.5	1.75	13		
Cylinder head cover	Hexagon socket head bolt	M6	16	10	1.0	7.2		
Cylinder head cover	Hexagon socket head bolt	M6	1	10	1.0	7.2		
Cylinder head side cover	Hexagon socket head bolt	M6	4	10	1.0	7.2		
Gear unit assembly	Hexagon socket head bolt	M6	1	10	1.0	7.2		
Tachometer cable stopper	Flat head screw	M6	1	7	0.7	5.1		
Cylinder	Flange bolt	M10	2	42	4.2	30		
Cylinder	Flange bolt	M10	2	42	4.2	30		
Cylinder	Hexagon socket head bolt	M6	2	10	1.0	7.2		
Holder 1	Hexagon socket head bolt	M6	1	10	1.0	7.2		
Balance weight gear	Nut	M16	1	60	6.0	43		Use lock washer
AC generator rotor	Nut	M14	1	150	15.0	110		
Valve clearance	Nut	M6	4	14	1.4	10		
Stopper guide 2	Hexagon head bolt	M6	2	8	0.8	5.8		
Cam sprocket	Flange bolt	M7	2	20	2.0	14		
Tensioner assembly	Hexagon socket head bolt	M6	2	10	1.0	7.2		
Rocker shaft stopper	Hexagon socket head bolt	M6	2	10	1.0	7.2		
Water pump	Hexagon socket head bolt	M6	3	10	1.0	7.2		
Joint 1	Hexagon socket head bolt	M6	2	10	1.0	7.2		
Pipe 1	Hexagon socket head bolt	M6	1	10	1.0	7.2		
Conduction	Flange bolt	M6	2	10	1.0	7.2		
Conduction	Flange bolt	M6	1	10	1.0	7.2		
Protector	Panhead screw	M5	2	5	0.5	3.6		
Radiator	Flange bolt	M6	3	10	1.0	7.2		
Oil pump assembly	Flange bolt	M6	3	10	1.0	7.2		
Cover 2	Panhead screw	M6	1	7	0.7	5.1		

MAINTENANCE SPECIFICATIONS

SPEC



Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks
				Nm	m•kg	ft•lb	
Strainer housing	Panhead screw	M6	2	7	0.7	5.1	
Drain plug	Straight screw plug	M14	1	30	3.0	22	
Element cover	Hexagon socket head bolt	M6	1	10	1.0	7.2	
Element cover	Hexagon socket head bolt	M6	2	10	1.0	7.2	
Element cover air bleed screw	Screw	M5	1	5	0.5	3.6	
Oil hose 1	Hexagon socket head bolt	M6	4	10	1.0	7.2	
Oil hose 2	Hexagon socket head bolt	M6	2	10	1.0	7.2	
Delivery pipe	Union bolt	M10	2	20	2.0	14	
Delivery pipe	Hexagon head bolt	M6	1	10	1.0	7.2	
Carburetor joint	Hexagon socket head bolt	M6	4	10	1.0	7.2	
Carburetor joint (carburetor left)	Hose clamp	M4	1	2	0.2	1.4	
Carburetor joint (carburetor right)	Hose clamp	M5	1	5	0.5	3.6	
Carburetor joint (air filter left)	Hose clamp	M4	1	2	0.2	1.4	
Carburetor joint (air filter right)	Hose clamp	M5	1	5	0.5	3.6	
Air filter assembly	Flange bolt	M6	4	10	1.0	7.2	
Air filter assembly	Flange bolt	M6	3	10	1.0	7.2	
Exhaust pipe	Nut	M6	4	10	1.0	7.2	
Exhaust pipe 1 & Exhaust pipe 2	Hexagon socket head bolt	M8	1	20	2.0	14	
Exhaust pipe protector	Bind head screw	M6	2	7	0.7	5.1	
Muffler protector (rubber)	Bind head screw	M6	2	7	0.7	5.1	
Muffler protector (cylinder)	Bind head screw	M6	4	7	0.7	5.1	
Exhaust pipe & Muffler	Flange bolt	M8	1	20	2.0	14	
Muffler mounting (front, lower)	Hexagon socket head bolt	M8	1	40	4.0	29	
Muffler mounting (upper)	Hexagon socket head bolt	M8	1	40	4.0	29	
Muffler mounting (lower)	Hexagon socket head bolt	M8	1	40	4.0	29	
Case 1 & 2	Hexagon socket head bolt	M6	9	10	1.0	7.2	
Case 1 & 2	Hexagon socket head bolt	M6	4	10	1.0	7.2	
Case 1 & 2	Hexagon socket head bolt	M6	1	10	1.0	7.2	
Clamp (lead)	Panhead screw	M6	1	7	0.7	5.1	

MAINTENANCE SPECIFICATIONS

SPEC



Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks
				Nm	m•kg	ft•lb	
Crankcase cover 1	Hexagon socket head bolt	M6	6	10	1.0	7.2	
Crankcase cover 1	Hexagon socket head bolt	M6	1	10	1.0	7.2	
Crankcase cover 1	Hexagon socket head bolt	M6	1	10	1.0	7.2	
Crankcase cover 1	Hexagon socket head bolt	M6	1	10	1.0	7.2	
Crankcase cover 1	Straight plug screw	M8	1	10	1.0	7.2	
Crankcase cover 2	Hexagon socket head bolt	M6	2	10	1.0	7.2	
Crankcase cover 3	Hexagon socket head bolt	M6	5	10	1.0	7.2	
Crankcase cover 3	Hexagon socket head bolt	M6	3	10	1.0	7.2	
Crankcase cover 3	Hexagon socket head bolt	M6	2	10	1.0	7.2	
Bearing plate cover	Flat head screw	M6	3	7	0.7	5.1	
Lock plate	Hexagon head bolt	M6	2	10	1.0	7.2	
Clutch spring	Screw with washer	M6	5	8	0.8	5.8	
Clutch boss	Nut	M20	1	90	9.0	65	Use lock washer
Primary drive gear	Nut	M20	1	120	12.0	85	Use lock washer
Push lever assembly (stopper)	Bolt	M6	1	6.5	0.65	4.7	
Push lever assembly	Screw	M8	1	12	1.2	8.7	
Drive sprocket	Nut	M18	1	110	11.0	80	Use lock washer
Oilseal cover	Hexagon head bolt	M6	2	10	1.0	7.2	
Stopper lever	Screw with washer	M6	1	10	1.0	7.2	
Shift arm	Bolt	M6	1	10	1.0	7.2	
Stator coil	Panhead screw with washer	M6	3	7	0.7	5.1	
Neutral switch	—	M10	1	20	2.0	14	
Cylinder head side cover 1	—	M32	2	12	1.2	8.7	
Spring tensioner	Plug	M16	1	20	2.0	14	
Starting motor	Flange bolt	M6	2	10	1.0	7.2	
Cover 1	Hexagon socket head bolt	M6	1	10	1.0	7.2	

MAINTENANCE SPECIFICATIONS

SPEC




Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks
				Nm	m•kg	ft•lb	
Cover 1	Hexagon socket head bolt	M6	3	10	1.0	7.2	
Starter oneway clutch	Hexagon socket head bolt	M8	3	30	3.0	22	Stake 
Pick up	Panhead screw	M5	2	5	0.5	3.6	
Ignition coil	Hexagon head bolt	M5	2	5	0.5	3.6	
Ignition coil bracket	Flange bolt	M6	2	10	1.0	7.2	
Ignition unit	Panhead screw	M6	2	5	0.5	3.6	
Thermo switch	Panhead screw	M16	1	28	2.8	20	
Thermo unit	Panhead screw	PT 1/8	1	15	1.5	11	

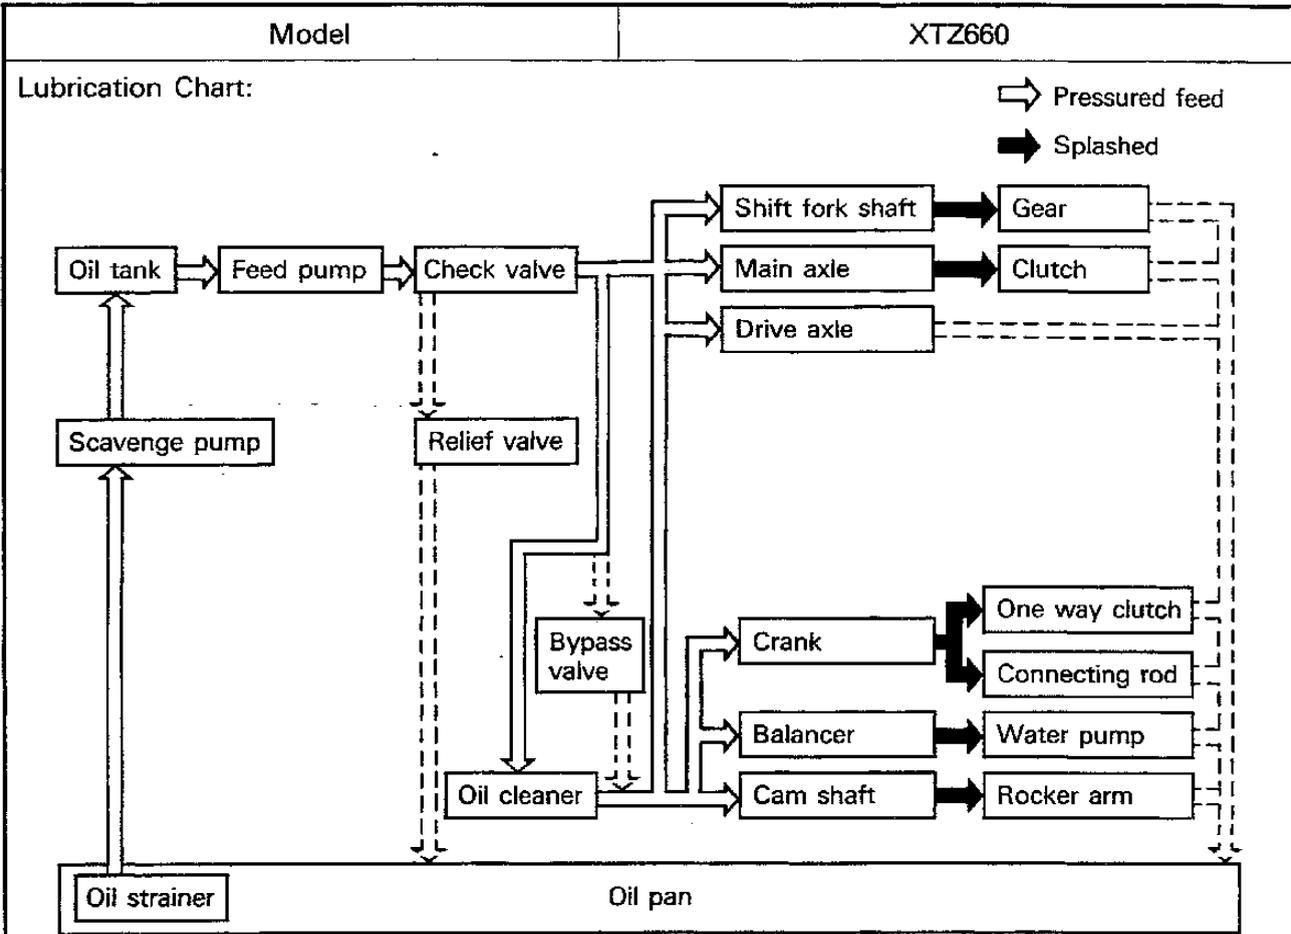


Crankcase Tightening Sequence:

Crankcase (Left)

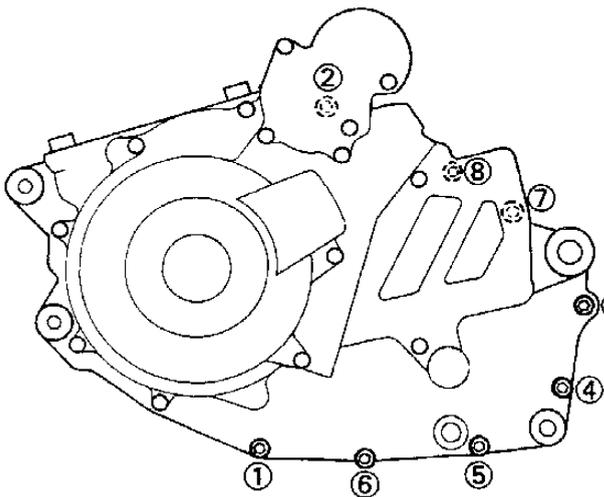

Crankcase (Right)

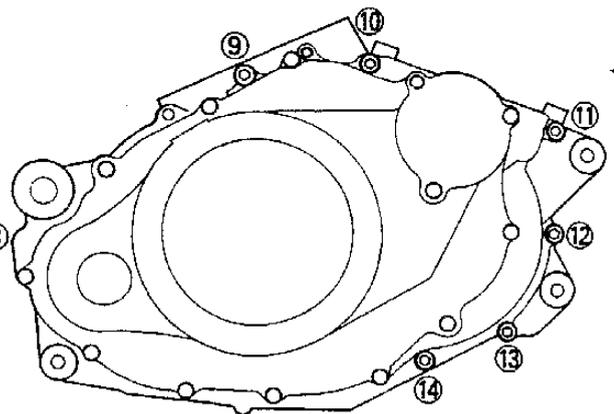

MAINTENANCE SPECIFICATIONS

SPEC


CHASSIS

Model	XTZ660
Steering System: Steering Bearing Type	Taper Roller Bearing
Front Suspension: Front Fork Travel Front Spring Free Length < Limit > Spring Rate: K1 Stroke K1 Optional Spring Oil Capacity Oil Level Oil Grade Enclosed Air Pressure: Standard	220 mm (8.66 in) 407 mm (16.02 in) < 402.9 mm (15.86 in) > 4.25 N/mm (0.425 kg/mm, 23.80 lb/in) 0.0 ~ 220 mm (0.0 ~ 8.66 in) No 669 cm ³ (23.5 Imp oz, 22.6 US oz) 94 mm (3.70 in) From top of inner tube fully compressed without spring. Fork oil 10W or equivalent Zero
Rear Suspension: Shock Absorber Travel Spring Free Length Fitting Length Spring Rate K1 Stroke K1 Optional Spring Enclosed Gas Pressure: Standard	66 mm (2.60 in) 222 mm (8.74 in) 212 mm (8.35 in) 125 N/mm (12.5 kg/mm, 700 lb/in) 0.0 ~ 83.0 mm (0.0 ~ 3.3 in) No 1.500 kPa (15 kg/cm ² , 213 psi)
Swingarm: Free Play Limit Side Clearance	1.0 mm (0.039 in) at swingarm end Move swingarm end side to side 0.4 ~ 0.7 mm (0.016 ~ 0.028 in) at swingarm pivot
Front Wheel: Type Rim Size Rim Material Rim Runout Limit Vertical Lateral	Spoke wheel 21 × 1.85 Aluminum 2 mm (0.08 in) 2 mm (0.08 in)
Rear Wheel: Type Rim Size Rim Material Rim Runout Limit Vertical Lateral	Spoke wheel 17 × 2.75 Aluminum 2 mm (0.08 in) 2 mm (0.08 in)
Drive Chain: Type/Manufacturer No. of Links Chain Free Play	520V6/DAIDO, 520SM0Z9/RK 110 20 ~ 45 mm (0.79 ~ 1.77 in)



Model	XTZ660
<p>Front Disc Brake:</p> <p>Type</p> <p>Disc Outside Diameter × Thickness</p> <p>Pad Thickness Inner</p> <p style="padding-left: 150px;">< Limit > *</p> <p>Pad Thickness Outer</p> <p style="padding-left: 150px;">< Limit > *</p> <div style="text-align: center;"> </div> <p>Master Cylinder Inside Diameter</p> <p>Caliper Cylinder Inside Diameter</p> <p>Brake Fluid Type</p>	<p>Dual</p> <p>282 × 5 mm (11.1 × 0.20 in)</p> <p>5.0 mm (0.20 in)</p> <p>< 1.0 mm (0.04 in) ></p> <p>5.0 mm (0.20 in)</p> <p>< 1.0 mm (0.04 in) ></p> <p>14 mm (0.55 in)</p> <p>32.03 mm (1.26 in)</p> <p>DOT #4</p>
<p>Rear Disc Brake:</p> <p>Type</p> <p>Disc Outside Diameter × Thickness</p> <p>Pad Thickness Inner</p> <p style="padding-left: 150px;">< Limit > *</p> <p>Pad Thickness Outer</p> <p style="padding-left: 150px;">< Limit > *</p> <div style="text-align: center;"> </div> <p>Master Cylinder Inside Diameter</p> <p>Caliper Cylinder Inside Diameter</p> <p>Brake Fluid Type</p>	<p>Single</p> <p>220 × 5 mm (8.66 × 0.20 in)</p> <p>6.0 mm (0.24 in)</p> <p>< 0.8 mm (0.03 in) ></p> <p>6.0 mm (0.24 in)</p> <p>< 0.8 mm (0.03 in) ></p> <p>12.7 mm (0.50 in)</p> <p>34.9 mm (1.37 in)</p> <p>DOT #4</p>
<p>Brake Lever and Brake Pedal:</p> <p>Brake Lever Free Play</p> <p>Brake Pedal Position</p>	<p>2 ~ 5 mm (0.08 ~ 0.20 in)</p> <p>At brake lever end.</p> <p>25 mm (0.98 in)</p> <p>Below top of footrest.</p>
<p>Clutch Lever and Throttle Grip:</p> <p>Clutch Lever Free Play</p> <p>Throttle Grip Free Play</p>	<p>10 ~ 15 mm (0.39 ~ 0.59 in)</p> <p>At clutch lever end.</p> <p>3 ~ 5 mm (0.12 ~ 0.20 in)</p> <p>At grip flange.</p>



TIGHTENING TORQUE

Part to be tightened	Thread size	Tightening torque			Remarks
		Nm	m•kg	ft•lb	
Front fork/Handlebar:					
Handle crown and inner tube	M 8×1.25	23	2.3	17	
Handle crown and steering shaft	M14×1.25	110	11	80	
Handlebar holder (under) and handlebar holder (upper)	M 8×1.25	23	2.3	17	
Steering shaft and ring nut	M25×1.0	7	0.7	5.1	See note
Front brake hose and clamp	M 6×1.0	7	0.7	5.1	
Front master cylinder cap	M 4×0.7	2	0.2	1.4	
Front master cylinder and handlebar	M 6×1.0	7	0.7	5.1	
Cowling stay and cowling	M 6×1.0	7	0.7	5.1	
Horn and frame	M 6×1.0	7	0.7	5.1	
Main switch and handle crown	M 6×1.0	7	0.7	5.1	
Handlebar holder (under) and nut	M10×1.25	30	3.0	22	
Band (meter cables)	M 5×0.8	0.7	0.07	0.5	
Console panel and protector 1, 2	M 5×0.8	0.7	0.07	0.5	
Headlight and cowling stay	M 6×1.0	7	0.7	5.1	
Under bracket and inner tube	M 8×1.25	23	2.3	17	
Cowling stay and frame	M 8×1.25	15	1.5	11	
Cowling and fuel tank	M 6×1.0	7	0.7	5.1	
Protector 1, 2 and cowling	M 5×0.8	0.7	0.07	0.5	
Engine mount:					
Front engine stay and frame	M10×1.25	65	6.5	47	
Top engine stay and frame	M10×1.25	65	6.5	47	
Engine (rear under) and frame	M10×1.25	65	6.5	47	
Engine protector and frame	M 6×1.0	9	0.9	6.5	
Swingarm/Rear shock absorber:					
Pivot shaft and frame	M14×1.5	100	10.0	72	
Swingarm and relay arm	M12×1.25	80	8.0	58	
Relay arm and connecting rod	M10×1.25	48	4.8	35	
Connecting rod and frame	M10×1.25	48	4.8	35	
Rear shock absorber and frame	M12×1.25	58	5.8	42	
Chain tensioner securing bolt	M 8×1.25	23	2.3	17	
Chain case and swingarm	M 6×1.0	4	0.4	2.9	
Guard seal and swingarm	M 6×1.0	7	0.7	5.1	
Chain support and swingarm	M 6×1.0	7	0.7	5.1	
Fuel tank/Seat/Rear fender/Side cover:					
License bracket and number plate stay	M 6×1.0	7	0.7	5.1	
Rear reflector and stay	M 5×0.8	4	0.4	2.9	
Fuel tank and fuel cock	M 6×1.0	7	0.7	5.1	
License bracket and flap	M 4×0.7	3	0.3	2.2	
Helmet holder and carrier	M 6×1.0	7	0.7	5.1	
Fuel tank back stay and frame	M 6×1.0	7	0.7	5.1	
Clutch cable and engine	M 6×1.0	9	0.9	6.5	
Starter relay and lead	M 6×1.0	3	0.3	2.2	

MAINTENANCE SPECIFICATIONS

SPEC


Part to be tightened	Thread size	Tightening torque			Remarks
		Nm	m•kg	ft•lb	
License bracket and taillight	M 6×1.0	7	0.7	5.1	
Regulator and frame	M 6×1.0	7	0.7	5.1	
Fuel tank upper bracket and frame	M 8×1.25	15	1.5	11	
Fuel tank lower bracket and frame	M 8×1.25	15	1.5	11	
Fuel pump and frame	M 6×1.0	7	0.7	5.1	
Carrier and frame (front and rear)	M 8×1.25	15	1.5	11	
Fuel tank bracket and fuel tank	M 6×1.0	7	0.7	5.1	
Tool box and frame	M 8×1.0	7	0.7	5.1	
License bracket and frame	M 6×1.0	7	0.7	5.1	
Bracket 1 and frame	M 6×1.0	23	2.3	17	
Front wheel/Rear wheel:					
Front wheel and brake disc	M 8×1.25	20	2.0	14	
Front wheel axle and front fork	M14×1.5	58	5.8	42	
Rear wheel axle and nut	M16×1.5	100	10.0	72	
Front axle holder	M 6×1.0	9	0.9	6.5	
Front brake caliper and front fork	M10×1.25	35	3.5	25	
Union bolt	M10×1.25	26	2.6	19	
Front brake caliper and bleed screw	M 8×1.25	6	0.6	4.3	
Rear brake caliper and bleed screw	M 7×1.0	6	0.6	4.3	
Rear wheel and sprocket	M10×1.25	60	6.0	4.3	
Rear wheel and brake disc	M 6×1.0	10	1.0	7.2	
Footrest/Pedal:					
Sidestand securing bolt and nut	M12×1.25	45	4.5	32	
Sidestand securing bolt and frame	M12×1.25	45	4.5	32	
Rear brake switch and frame	M 6×1.0	4	0.4	2.9	
Footrest and frame	M10×1.25	50	5.0	36	
Rear footrest and frame	M 8×1.25	23	2.3	17	
Rear master cylinder and frame	M 8×1.25	23	2.3	17	
Rear brake reservoir tank and frame	M 6×1.0	4	0.4	2.9	
Rear brake pedal shaft and frame	M10×1.25	35	3.5	25	

NOTE:

1. First, tighten the ring nut (lower) approximately 43 Nm (4.3 m•kg, 31 ft•lb) by using the torque wrench. Turn the handlebar to the left and right making sure there is no binding and then fully loosen the ring nut.
2. Retighten the ring nut (lower) to specification.
3. Install the rubber washer on the ring nut (lower); then finger tighten the ring nut (upper) until it contacts the rubber washer. Align the grooves of the lower and upper nuts and install the stopper washer.


ELECTRICAL

Model	XTZ660
Voltage Ignition System: Ignition Timing (B.T.D.C.) Advanced Timing (B.T.D.C.) Advancer Type	12V 12° at 1,300 r/min 38° at 6,500 r/min Electrical type
<p style="text-align: center;">Ignition Timing (B.T.D.C.)</p> <p style="text-align: center;">Engine Speed ($\times 10^3$ r/min)</p>	
Ignitor: Pickup Coil Resistance (Color) Ignitor Unit/Manufacturer	184 ~ 276 Ω at 20°C (68°F) (Blue/Yellow—Green/White) TNDF13/NIPPONDENSO
Ignition Coil: Model/Manufacturer Minimum Spark Gap Primary Winding Resistance Secondary Winding Resistance Spark Plug Cap: Type Resistance	JO268/NIPPONDENSO 6 mm (0.24 in) 3.4 ~ 4.6 Ω at 20°C (68°F) 10.4 ~ 15.6 k Ω at 20°C (68°F) Resin type 10 k Ω at 20°C (68°F)
Charging System: Type	A.C. magneto generator

MAINTENANCE SPECIFICATIONS

SPEC



Model	XTZ660
A.C. Generator: Model/Manufacturer Nominal Output	TLMZ55/NIPPONDENSO 14V 24.5A at 5,000 r/min
<p style="text-align: center;">Output Current</p> <p style="text-align: center;">Engine Speed ($\times 10^3$ r/min)</p>	
Stator Coil Resistance (Color)	0.20 ~ 0.30 Ω at 20°C (68°F) (White—White)
Rectifier/Regulator: Model/Manufacturer Type Voltage Regulator No load Regulated Voltage Rectifier Capacity Withstand Voltage	SH569/SINDENGEN Semi conductor—Short circuit type 14.3 ~ 15.3V 25A 240V
Battery: Specific Gravity	1.320
Electrical Starter System: Type Starter Motor: Model/Manufacturer Output Brush—Overall Length < Limit > Commutator Dia. Wear Limit Mica Undercut Starter Relay: Model/Manufacturer Amperage Rating	Constant mesh type SM-13/MITSUBA 0.8 kW 12.5 mm (0.49 in) < 5 mm (0.20 in) > 28.0 mm (1.10 in) 27.0 mm (1.06 in) 0.7 mm (0.028 in) MS5D-191/HITACHI 100A
Horn: Type/Quantity Model/Manufacturer Maximum Amperage	Plane type/1 pc. YF-12/NIKKO 2.5A

MAINTENANCE SPECIFICATIONS

SPEC




Model	XTZ660
Flasher Relay (Relay Assembly): Type Model/Manufacturer Self Cancelling Device Flasher Frequency Wattage	Condenser type FB257M/NIPPONDENSO, G8A-101/OMRON No 60 ~ 120 cyl/min 21W × 4 + 3.4W
Starting Circuit Cut-Off Relay: Model/Manufacturer Coil Winding Resistance Diode	G8MS/OMRON 90 ~ 110 Ω Yes
Electric Fan: Model/Manufacturer	NAAF48/NIPPONDENSO
Thermostat Switch: Model/Manufacturer Function Temperature	VF105A/N. THERMOSTAT 102 ~ 108°C (215.6 ~ 226.4°F): ON 98°C (208.4°F): OFF
Thermo Unit: Model/Manufacturer Coil Winding Resistance	11H/NIPPON SEIKI 153.9 Ω at 50°C (122°F) 47.5 ~ 52.8 Ω at 80°C (176°F) 26.2 ~ 29.3 Ω at 100°C (212°F) 16.1 Ω at 120°C (248°F)
Circuit Breaker: Type Amperage for Individual Circuit × Quantity: MAIN RESERVE	Fuse 20A/1 pc. 20A/1 pc.



GENERAL TORQUE SPECIFICATIONS

This chart specifies torque for standard fasteners with standard I.S.O. pitch threads. Torque specifications for special components or assemblies are included in the applicable sections of this book. To avoid warpage, tighten multi-fastener assemblies in a crisscross fashion, in progressive stages, until full torque is reached. Unless otherwise specified, torque specifications call for clean, dry threads. Components should be at room temperature.

A (Nut)	B (Bolt)	General torque specifications		
		Nm	m·kg	ft·lb
10 mm	6 mm	6	0.6	4.3
12 mm	8 mm	15	1.5	11
14 mm	10 mm	30	3.0	22
17 mm	12 mm	55	5.5	40
19 mm	14 mm	85	8.5	61
22 mm	16 mm	130	13.0	94

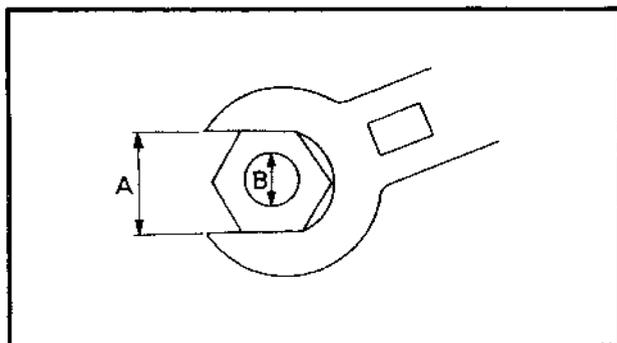

A: Distance across flats
B: Outside thread diameter

DEFINITION OF UNITS

Unit	Read	Definition	Measure
mm	millimeter	10^{-3} meter	Length
cm	centimeter	10^{-2} meter	Length
kg	kilogram	10^3 gram	Weight
N	Newton	$1 \text{ kg} \times \text{m}/\text{sec}^2$	Force
Nm	Newton meter	$\text{N} \times \text{m}$	Torque
m·kg	Meter kilogram	$\text{m} \times \text{kg}$	Torque
Pa	Pascal	N/m^2	Pressure
N/mm	Newton per millimeter	N/mm	Spring rate
L	Liter	—	Volume or capacity
cm^3	Cubic centimeter	—	Volume or capacity
r/min	Revolution per minute	—	Engine speed

LUBRICATION POINTS AND LUBRICANT TYPE

SPEC



LUBRICATION POINTS AND LUBRICANT TYPE

ENGINE

Lubrication points (part name)	Lubricant type
Oil seal lips (all)	
Bearing retainer	
Crank pin	
Connecting rod (big end)	
Piston and piston ring	
Boss (balancer drive gear)	
Piston pin	
Valve stem and valve guide	
Oil seal (valve stem end)	
Rocker arm shaft and rocker arm	
Cam and bearing (camshaft)	
Decomp cam and decomp shaft	
Rotor and rotor housing (oil pump)	
Push rod	
Primary driven gear and main axle	
Sliding gear (transmission)	
Free movement gear (transmission)	
Driven gear and drive gear (tachometer gear unit)	
Shift fork and guide bar	
Shift cam and bearing (shift cam)	
Shift shaft	
Crankcase mating surfaces	Sealant (quick gasket) [®] Yamaha Bond No. 1215
Mating surfaces (cylinder head and cylinder head cover)	Sealant (quick gasket) [®] Yamaha Bond No. 1215

LUBRICATION POINTS AND LUBRICANT TYPE

SPEC



CHASSIS


Lubrication points (part name)	Lubricant type
Gear unit (speedometer)	5LS
Oil seal lips (all)	5LS
Wheel axle (front wheel and rear wheel)	5LS
Rear wheel hub and clutch hub	5LS
Bush (swingarm) and thrust cover	5LS
Pivot shaft (swingarm)-	5LS
Bushes (rear shock absorber)	5LS
Bushes (relay arm and connecting rod)	5LS
Bearings (relay arm and connecting rod)	5LS
Pivoting points (brake pedal and change pedal)	5LS
Bearings (steering head)	5LS
Right handlebar end	5LS
Pivoting points (brake lever and clutch lever)	5LS
Clutch cable end	5LS
Pivoting point (sidestand)	5LS
Bushes (chain tensioner)	5LS
Grease nipple (swingarm)	5LS
Grease nipple (relay arm)	5LS
Grease nipple (connecting rod)	5LS



LUBRICATION DIAGRAM

- ① Oil tank
- ② Oil pump
- ③ Oil strainer (engine)

- A Feed
- B Scavenge

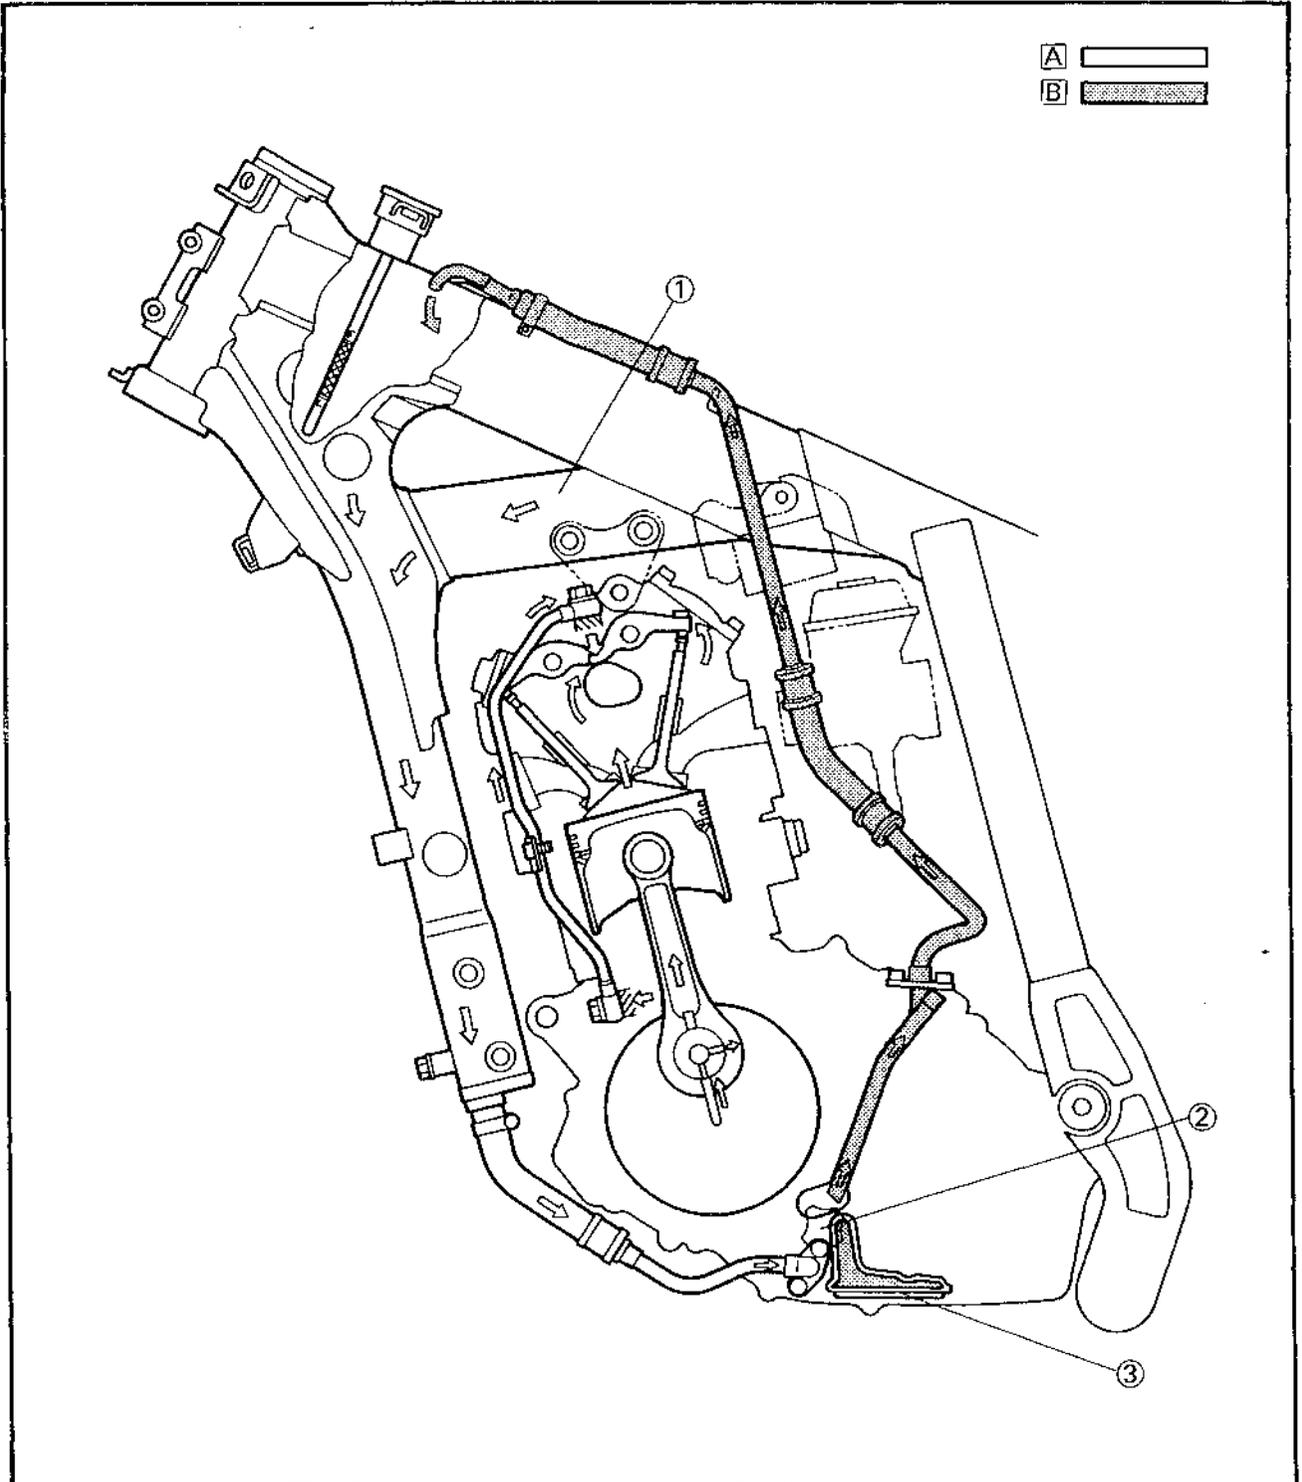



LUBRICATION DIAGRAM

SPEC



- ① Cam shaft
- ② Oil delivery pipe
- ③ Oil filter
- ④ Oil pump
- ⑤ Main axle
- ⑥ Drive axle
- ⑦ Oil hose
- ⑧ Oil delivery pipe

- A Feed
- B Scavenge

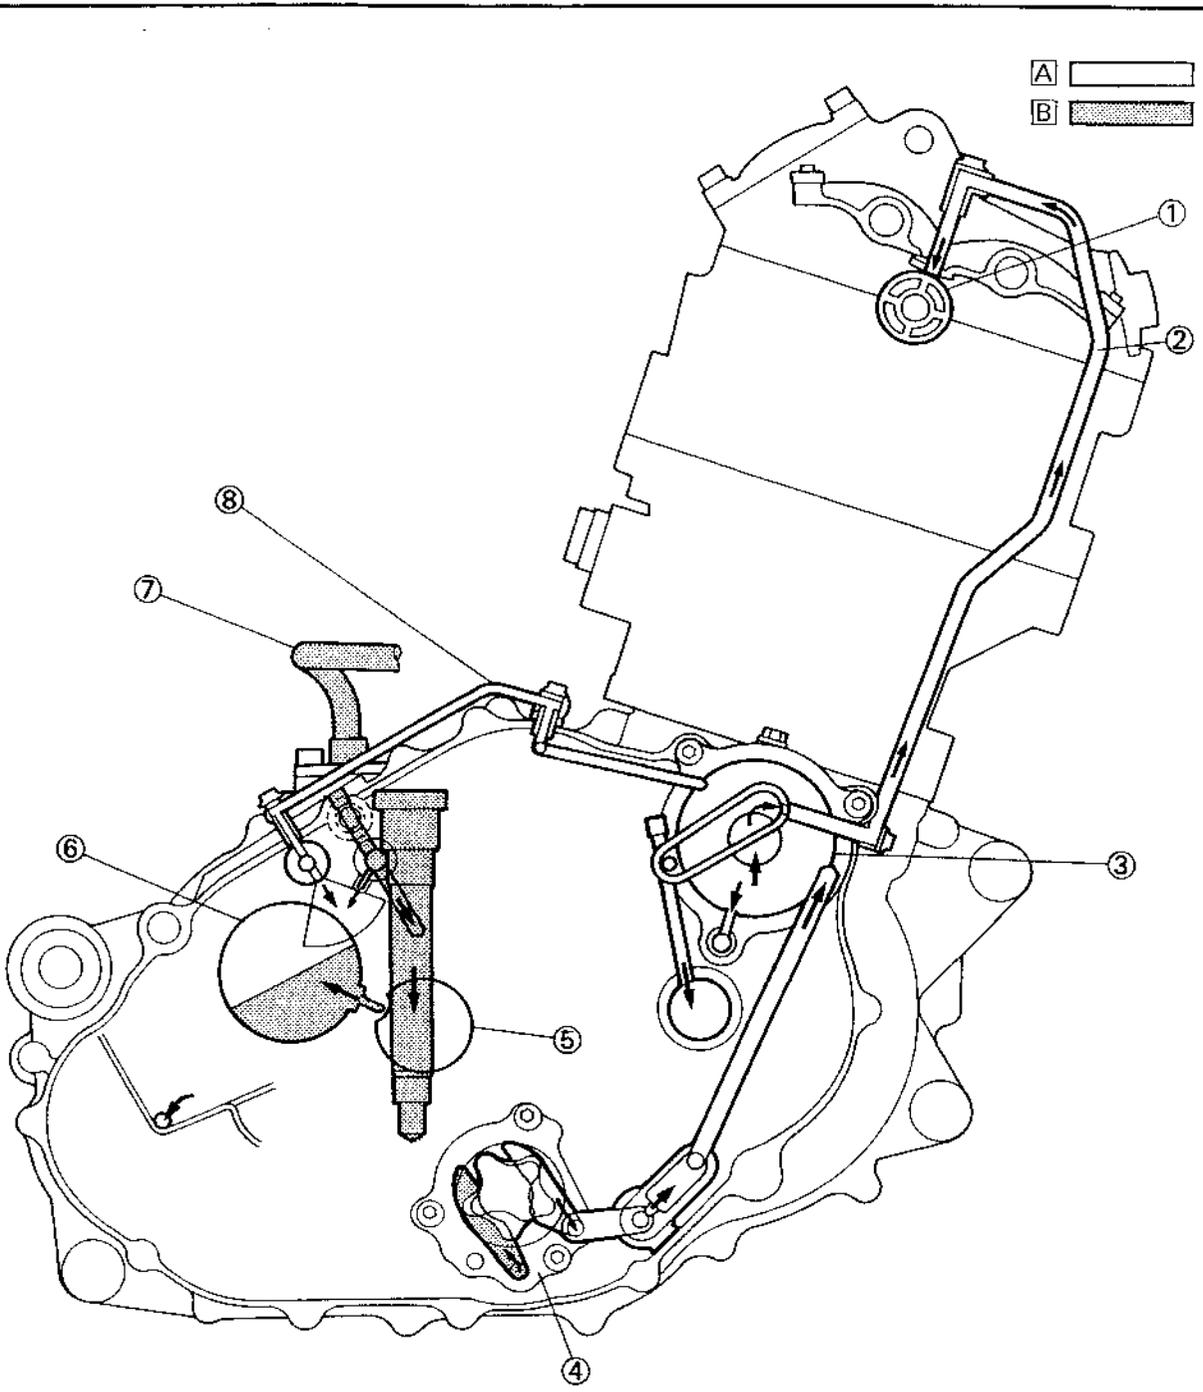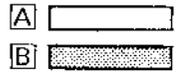


LUBRICATION DIAGRAM

SPEC



- ① Cam shaft
- ② Oil delivery pipe
- ③ Oil filter
- ④ Crank pin
- ⑤ Main axle
- ⑥ Drive axle
- ⑦ Drain bolt

- A Feed
- B Scavenge

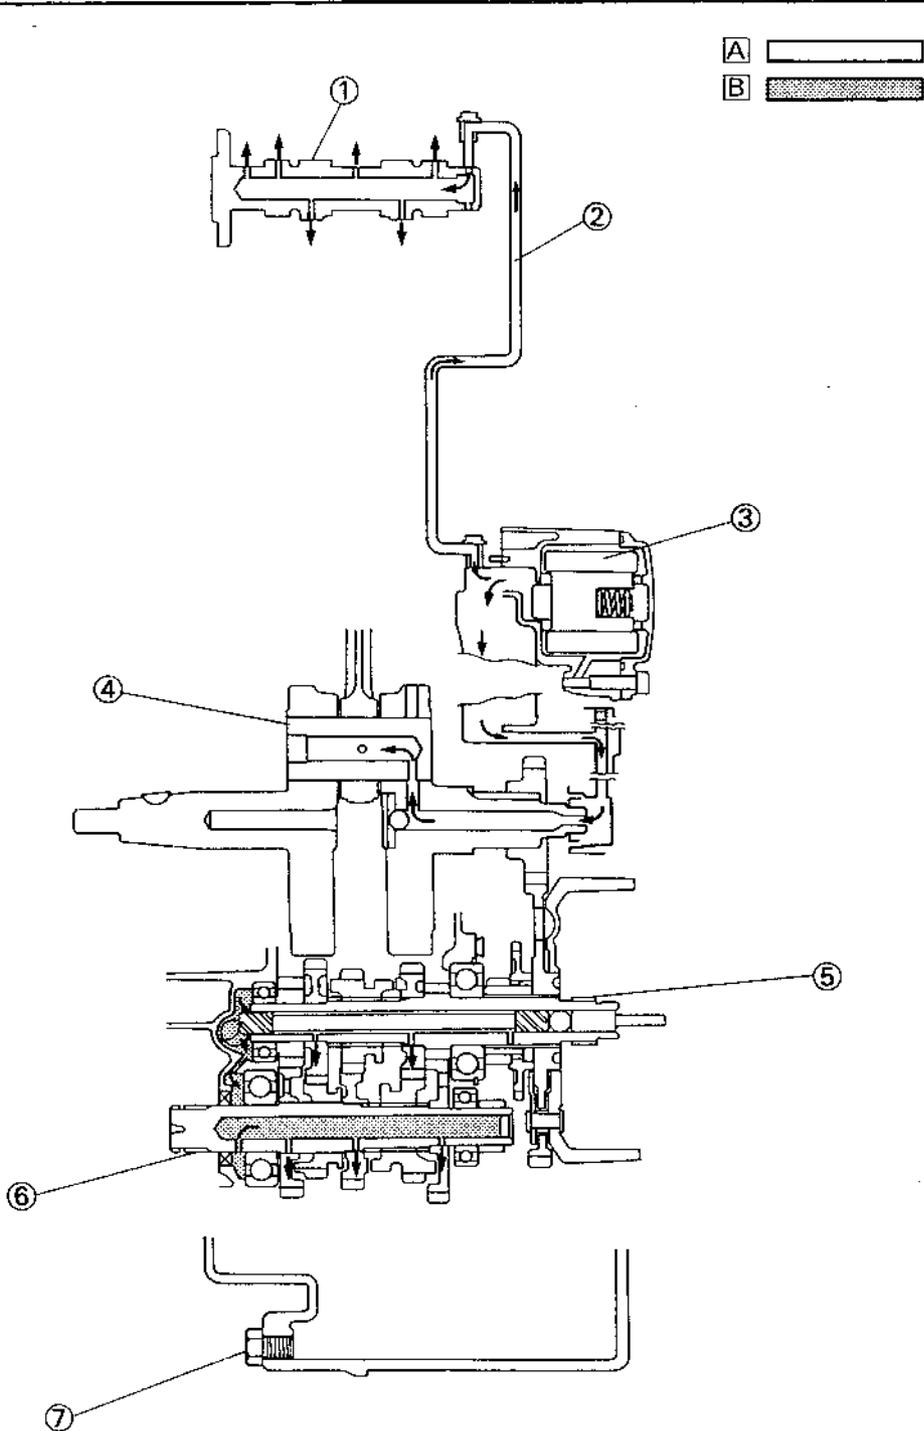


LUBRICATION DIAGRAM

SPEC



- ① Oil delivery pipe
- ② Oil filter
- ③ Oil pump
- ④ Transmission
- ⑤ Oil strainer


- ▭ A Feed
- ▭ B Scavenge

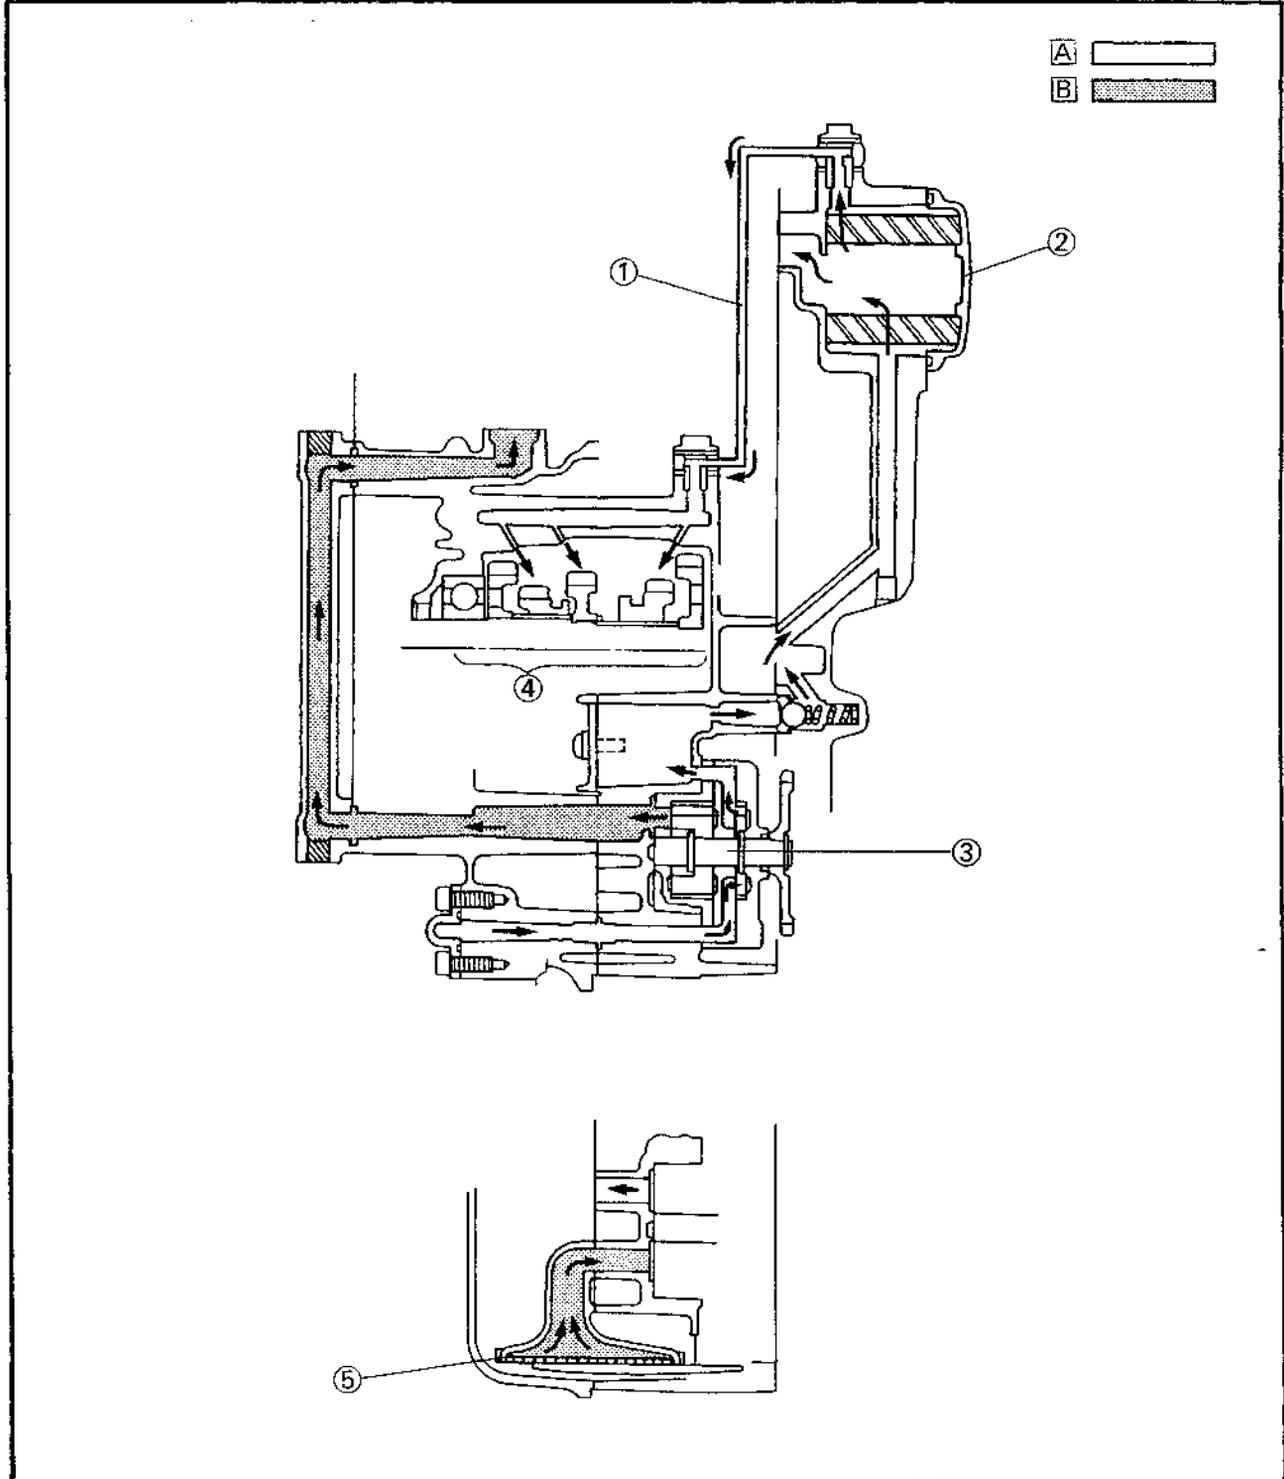



COOLANT DIAGRAM

- ① Radiator cap
- ② Thermostat
- ③ Thermostat housing
- ④ Radiator
- ⑤ Water pump


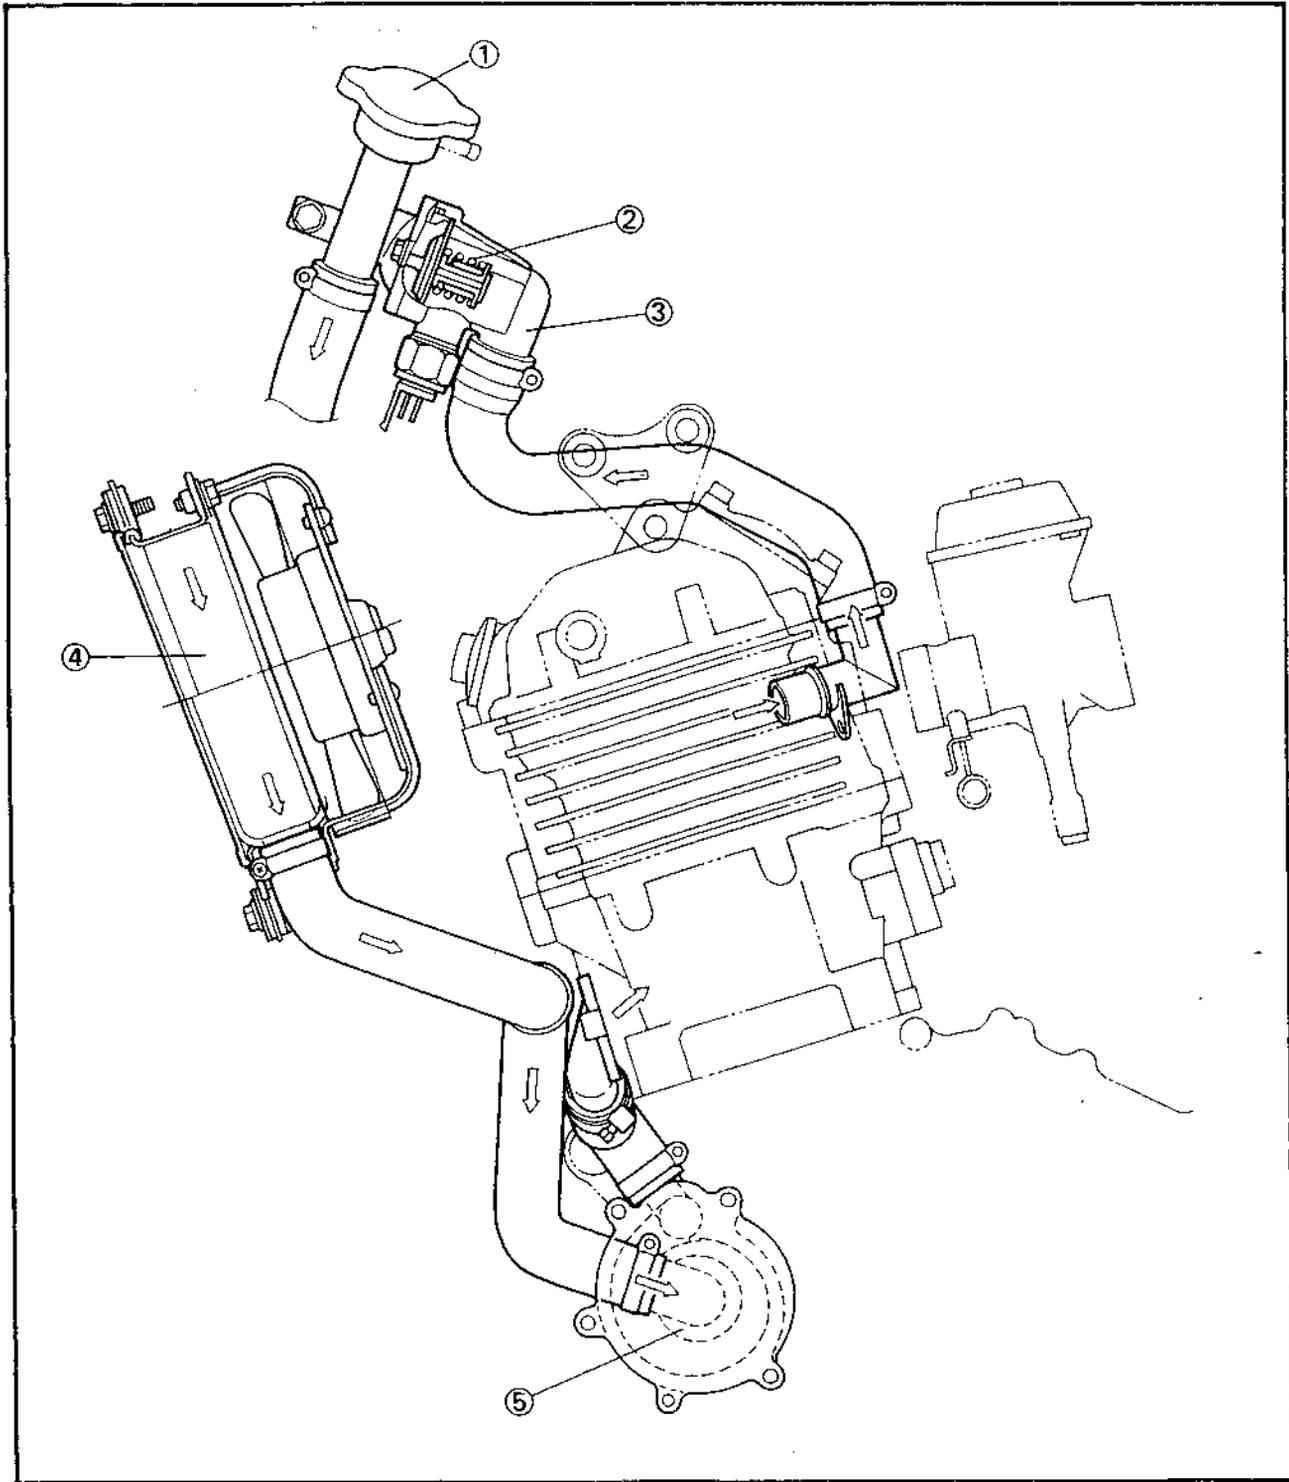




CABLE ROUTING

- ① Clutch cable
- ② Cable guide
- ③ Brake hose
- ④ Front brake switch lead
- ⑤ Throttle cable
- ⑥ Handlebar switch lead
- ⑦ Band
- ⑧ Clutch switch lead
- ⑨ Handlebar switch lead
- ⑩ Flasher light lead (Left)
- ⑪ Speedometer cable
- ⑫ Tachometer cable
- ⑬ Flasher light lead (Right)
- ⑭ Headlight lead (Auxiliary light)
- ⑮ Headlight lead


- A** Do not clamp the lead tightly when turning the handlebars.
- B** Pass the speedometer cable through the cable guide.

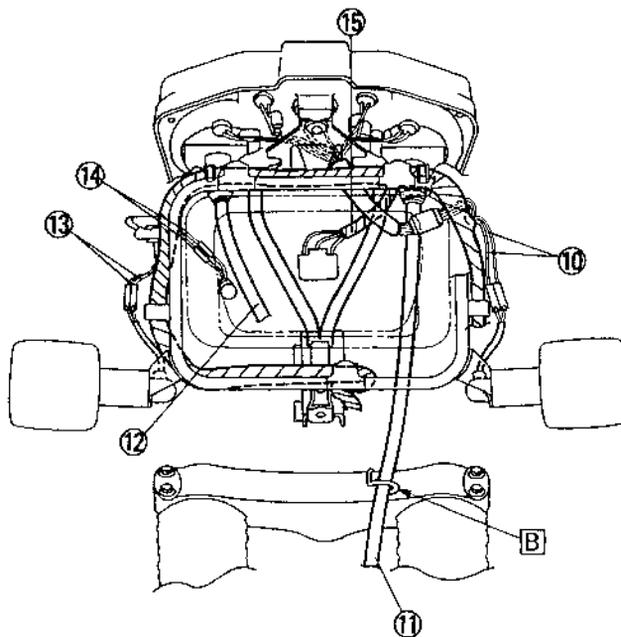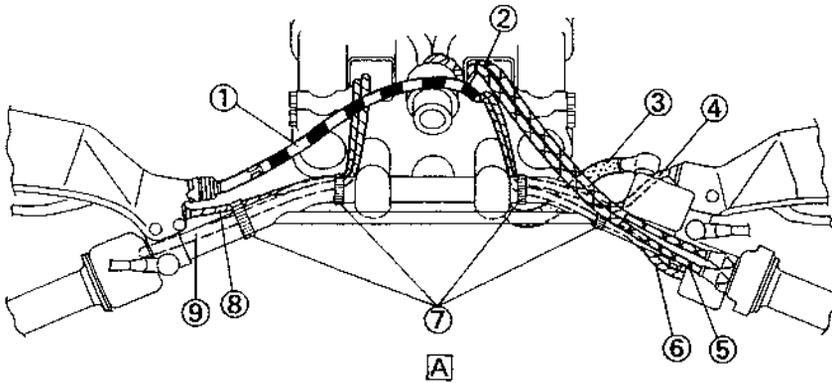



- | | |
|---------------------------------|------------------------|
| ① Handlebar switch lead (Right) | ②① Master cylinder |
| ② Front brake switch lead | ②② Reservoir tank |
| ③ Throttle cable | ②③ Clamp |
| ④ Main switch lead | ②④ Ignition coil |
| ⑤ Plate | ②⑤ Conduction |
| ⑥ Rectifier/regulator | ②⑥ Earth lead |
| ⑦ Band | ②⑦ Rectifier/regulator |
| ⑧ Horn | ②⑧ Plate |
| ⑨ High tension cord | ②⑨ Main harness |
| ⑩ Spark plug cap | ③⑩ Cowling stay |
| ⑪ Cable holder | |
| ⑫ Tachometer cable | |
| ⑬ Throttle cable | |
| ⑭ Clutch cable | |
| ⑮ Front brake switch lead | |
| ⑯ Main switch lead | |
| ⑰ Handlebar switch lead (Right) | |
| ⑱ Recovery tank breather hose | |
| ⑲ Recovery tank conduction hose | |
| ⑳ Rear brake switch | |


- | |
|--|
| A Connect to the rectifier/regulator |
| B Pass the tachometer cable inside of all the cables and harnesses. (Side of head pipe) |
| C Pass the tachometer cable through the cable guide. |
| D Pass the throttle cable through the cable guide. |
| E Pass through the cable guide (View B-B). |
| F Clamp the clutch cable to the holder. |
| G Clamp the rear brake switch lead. |
| H Insert the end of the air vent hose into the frame. |
| I Clip (Insert the recovery tank hose and clamp securely.) |
| J Cable guide (Pass all the cables and harnesses inside of it.) |
| K Cable guide (Pass the brake hose.) |
| L Pass the recovery tank breather hose through the frame bracket. |
| M Pass through the cable guide (View B-B). |
| N To conduction |

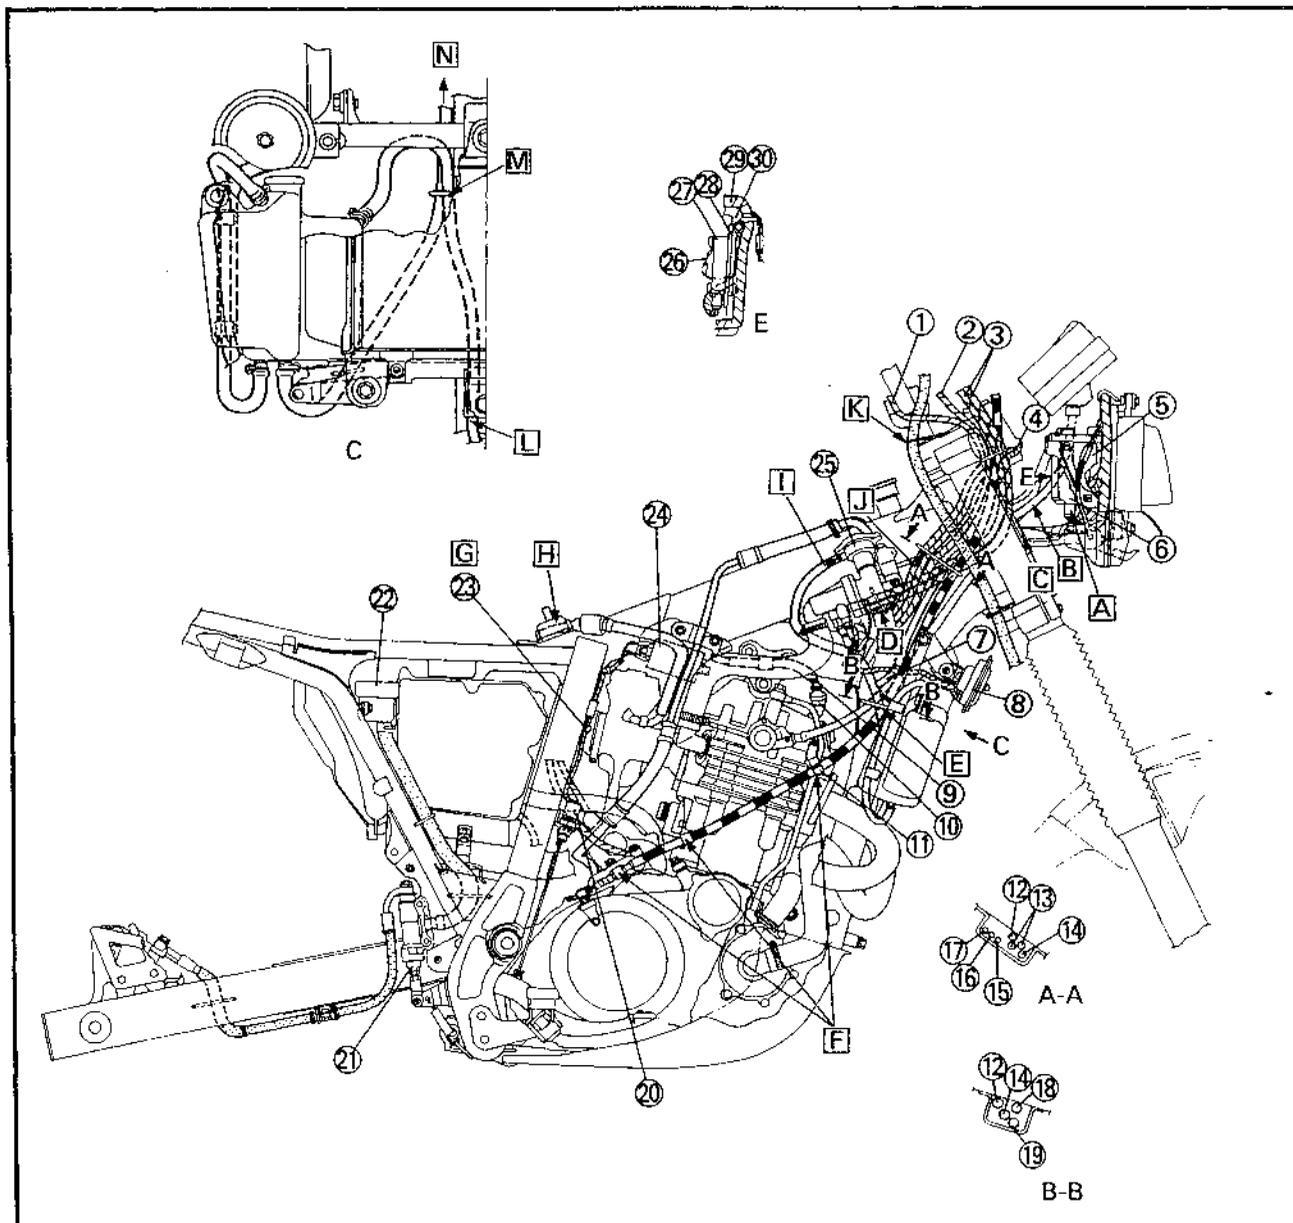



- ① Clamp
- ② Clutch switch lead
- ③ Handlebar switch lead (Left)
- ④ Starter cable
- ⑤ Clip
- ⑥ Clamp
- ⑦ Oil tank breather hose
- ⑧ Battery ⊕ lead
- ⑨ Battery ⊖ lead
- ⑩ Starter lead
- ⑪ Starter relay assembly
- ⑫ Sidestand switch lead
- ⑬ Clamp
- ⑭ Sidestand switch
- ⑮ Cable guide
- ⑯ Fan motor lead (Radiator)
- ⑰ Clamp
- ⑱ Speedometer cable
- ⑲ Brake hose
- ⑳ Relay

- A Clamp the main harness (Left and right)
- B Insert the hose until stops and clamp securely.
- C Clamp the main harness and the starter cable.
- D Clamp the main harness.
- E Pass the oil tank breather hose.
- F Connect the AC magneto lead and the wireharness.
- G Clamp the sidestand switch lead.
- H Clamp the sidestand switch lead securely.
- I Do not pinch the sidestand switch lead when installing the rear footrest.
- J Clamp the flywheel magneto lead and the overflow pipe.
- K Clamp the vacuum pipe.
- L Insert the radiator breather hose inside of the engine protector.
- M Pass the radiator breather hose.
- N Pass the radiator breather hose to the right side of the radiator bracket.
- O Clamp the fan motor lead.
- P Fit the locating hole of the band to the projection inside of the front fork.
- Q Clamp the main harness.
- R Connect to the relay.

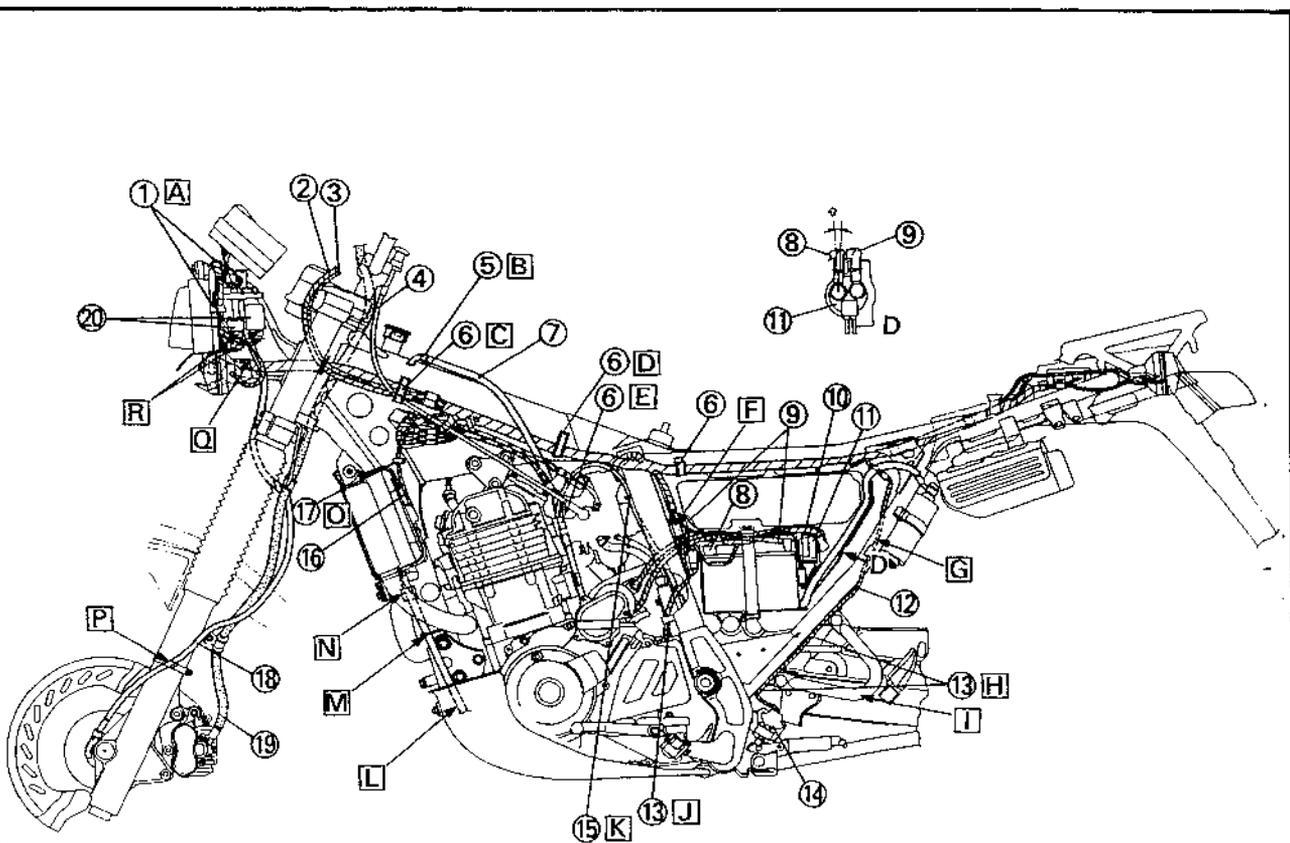


CABLE ROUTING

SPEC



- ① Ignitor unit
- ② Clamp

- A Clamp the rear flasher light lead (Right).
- B Connect the rearflasher light lead (Right) and the wireharness.
- C Pass through the rear fender hole (Left and right).
- D Connect the taillight lead and the wireharness.
- E Connect to the ignitor unit.
- F Pass the rear flasher light lead (Left) under the wire harness and clamp:
- G Connect the rear flasher light lead (Left) and the wireharness.
- H Clamp the main harness.

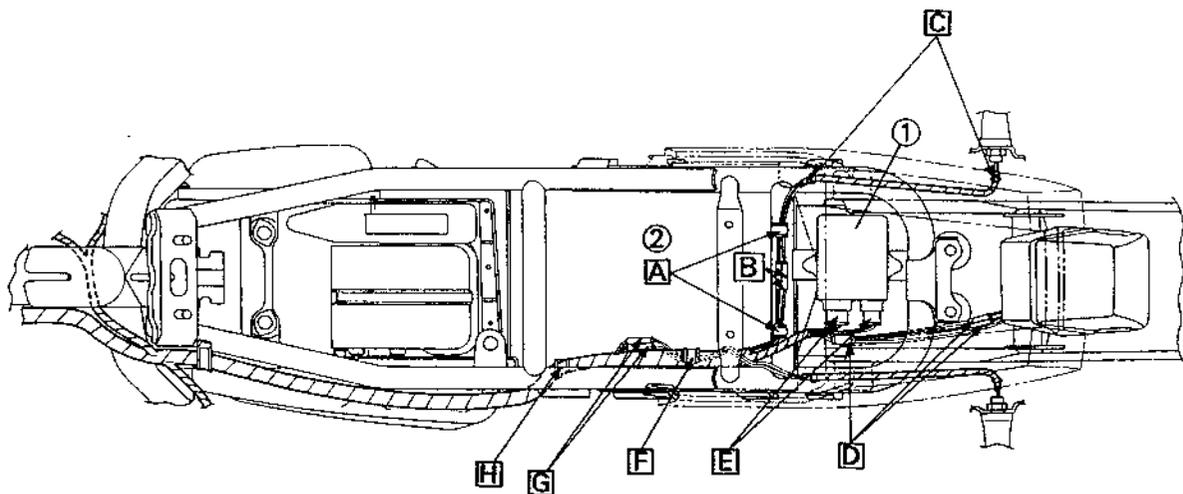



CHAPTER 3. PERIODIC INSPECTION AND ADJUSTMENT

INTRODUCTION	C-3
PERIODIC MAINTENANCE/LUBRICATION INTERVALS	C-3
SEAT, FUEL TANK AND COVER	C-4
REMOVAL	C-4
INSTALLATION	C-5
COWLING	C-5
REMOVAL	C-5
INSTALLATION	C-6
ENGINE	C-7
VALVE CLEARANCE ADJUSTMENT	C-7
CAM CHAIN ADJUSTMENT	C-8
IDLING SPEED ADJUSTMENT	C-8
THROTTLE CABLE FREE PLAY ADJUSTMENT	C-9
SPARK PLUG INSPECTION	C-10
IGNITION TIMING CHECK	C-10
COMPRESSION PRESSURE MEASUREMENT	C-11
ENGINE OIL LEVEL INSPECTION	C-12
ENGINE OIL REPLACEMENT	C-13
OIL PRESSURE INSPECTION	C-15
CLUTCH ADJUSTMENT	C-15
AIR FILTER CLEANING	C-16
CARBURETOR JOINT INSPECTION	C-16
FUEL LINE INSPECTION	D-1
CRANKCASE VENTILATION HOSE INSPECTION	D-1
EXHAUST SYSTEM INSPECTION	D-1
COOLANT LEVEL INSPECTION	D-1
COOLANT REPLACEMENT	D-2
COOLING SYSTEM INSPECTION	D-4
CHASSIS	D-4
FRONT BRAKE ADJUSTMENT	D-4
REAR BRAKE ADJUSTMENT	D-5
BRAKE FLUID LEVEL INSPECTION	D-5
BRAKE PAD INSPECTION	D-6
BRAKE LIGHT SWITCH ADJUSTMENT	D-6
BRAKE HOSE INSPECTION	D-6
AIR BLEEDING (HYDRAULIC BRAKE SYSTEM)	D-7
DRIVE CHAIN SLACK ADJUSTMENT	D-7
DRIVE CHAIN LUBRICATION	D-8
STEERING HEAD ADJUSTMENT	D-9
FRONT FORK INSPECTION	D-10
REAR SHOCK ABSORBER ADJUSTMENT	D-10

TIRE INSPECTION	D-11
WHEEL INSPECTION	D-13
SPOKES INSPECTION AND TIGHTENING.....	D-13
CABLE INSPECTION AND LUBRICATION.....	D-13
LEVER AND PEDAL LUBRICATION	D-13
SIDESTAND LUBRICATION	D-13
REAR SUSPENSION LUBRICATION	D-14
ELECTRICAL	D-14
BATTERY INSPECTION	D-14
FUSE INSPECTION	E-1
HEADLIGHT BEAM ADJUSTMENT	E-2
HEADLIGHT BULB REPLACEMENT	E-2

PERIODIC INSPECTION AND ADJUSTMENT

INTRODUCTION

This chapter includes all information necessary to perform recommended inspections and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable vehicle operation and a longer service life. The need for costly overhaul work will be greatly reduced. This information applies to vehicles already in service as well as new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

PERIODIC MAINTENANCE/LUBRICATION INTERVALS

Unit (miles)

ITEM	REMARKS	BREAK-IN 1,000 (600)	EVERY	
			6,000 (4,000) or 6 months	12,000 (8,000) or 12 months
Valvs(s)*	Check valve clearance. Adjust if necessary	○	○	○
Spark plug(s)	Check condition. Clean or replace if necessary.	○	○	○
Air filter	Clean. Replace if necessary.		○	○
Carburetor*	Check idle speed/starter operation. Adjust if necessary.	○	○	○
Fuel line*	Check fuel hose for cracks or damage. Replace if necessary.		○	○
Engine oil	Replace (Warm engine before draining).	○	○	○
Engine oil filter*	Replace.	○	○	○
Engine oil strainer*	Clean.	○	○	○
Brake*	Check operation/fluid leakage/See NOTE. Correct if necessary.		○	○
Clutch	Check operation. Adjust if necessary.		○	○
Rear arm pivot*	Check rear arm assembly for looseness. Correct if necessary. Moderately repack.***	○	○	○
Rear suspension link pivot*	Check operation. Modelately repack***	○	○	○
Wheels*	Check bearings/damage/runout/Spoke tightness. Repair if necessary.		○	○
Wheel bearings*	Check bearings assembly for looseness/damage. Replace if damaged.	○		○
Steering bearings*	Check bearings assembly for looseness. Correct if necessary. Modelately repack every 24,000 (16,000) or 24 months.**	○		○
Front forks*	Check operation/oil leakage. Repair if necessary.		○	○
Rear shock absorber*	Check operation/oil leakage. Repair if necessary.		○	○
Cooling system	Check coolant leakage. Repair if necessary. Replace coolant every 24,000 (16,000) or 24 months.		○	○

PERIODIC MAINTENANCE/ LUBRICATION INTERVALS



Unit: km (miles)

ITEM	REMARKS	BREAK-IN 1,000 (600)	EVERY	
			6,000 (4,000) or 6 months	12,000 (8,000) or 12 months
Drive chain	Check chain slack/alignment. Adjust if necessary. Chain and lube.		EVERY 500 (300)	
Fittings/Fasteners*	Check all chassis fitting and fasteners. Correct if necessary.	○	○	○
Sidestand*	Check operation. Repair if necessary.	○	○	○
Sidestand switch*	Check operation. Clean or replace if necessary.	○	○	○

*: It is recommended that these items be serviced by a Yamaha dealer.

** : Medium weight wheel bearing grease.

***: Molybdenum disulfide grease.

NOTE: _____

Brake system:

1. When disassembling the master cylinder or caliper cylinder, replace the brake fluid. Normally check the brake fluid level and add the fluid as required.
2. We recommended that, on the inner parts of the master cylinder and caliper cylinder, replace the oil seals every two years.
3. We recommended that replace the brake hoses every four years, or if cracked or damaged.



SEAT, FUEL TANK AND COVER REMOVAL

⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.

1. Remove:




- Seat

2. Remove:

- Side cover (left) ①

NOTE:

When removing the side cover (left), remove the bolt ②. Then pull the front and rear portion of the side cover outward to remove the projection ③ from the grommet.

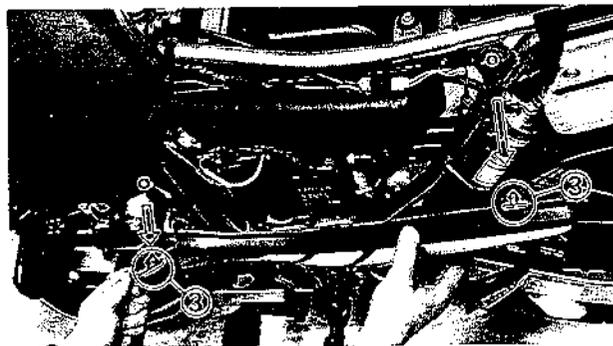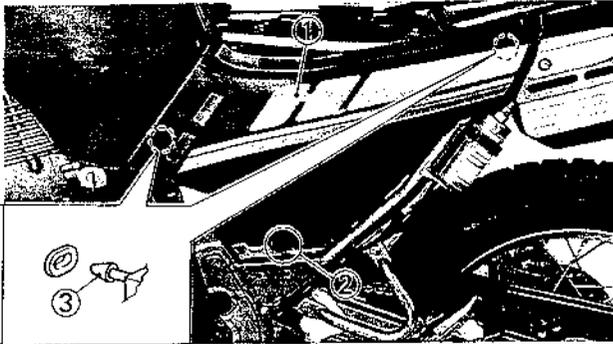
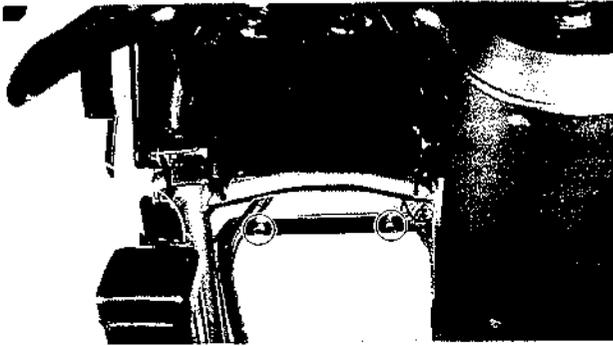


3. Remove:

- Side cover (right) ①


NOTE:

When removing the side cover (right), remove the bolt ②. Then pull the front portion of the side cover outward to remove the projection ③ from the grommet. Then remove the side cover by pulling the rear portion ④ upward.

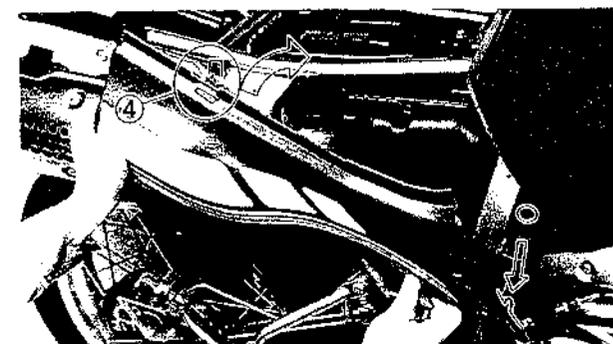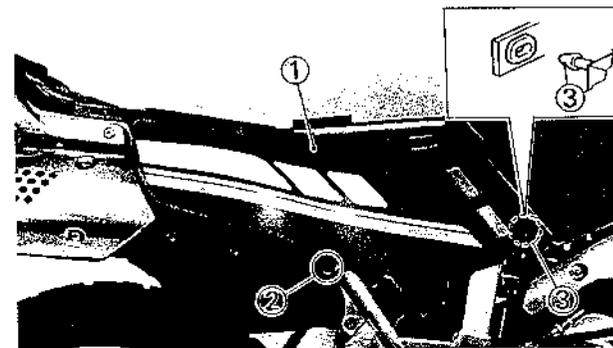

SEAT, FUEL TANK AND COVER

INSP
ADJ



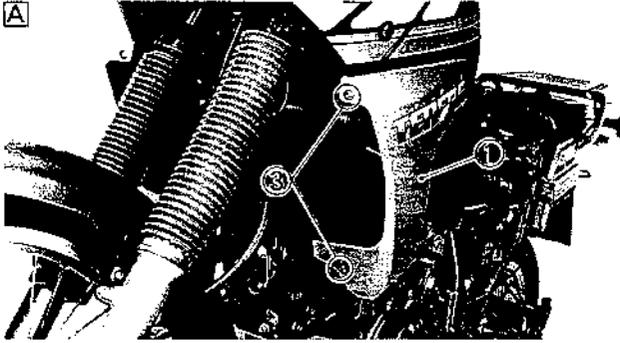


4. Remove:


- Air scoop (left) ①
- Air scoop (right) ②

NOTE: _____

When removing the air scoops, remove the bolt ③. Then pull the rear portion ④ of the air scoop forward to remove the air scoop from the fuel tank.

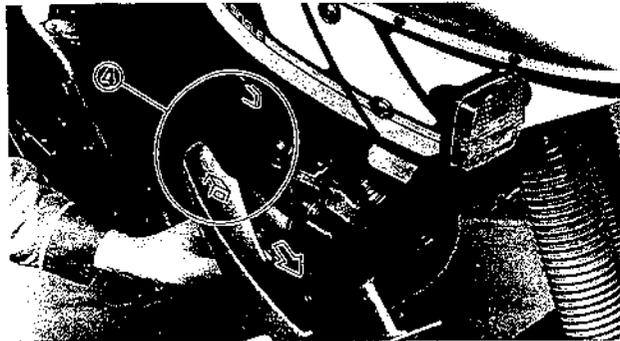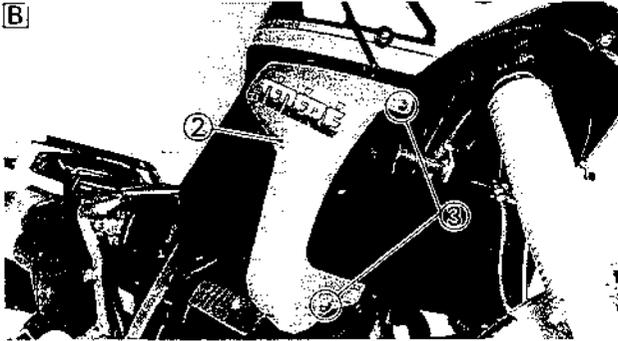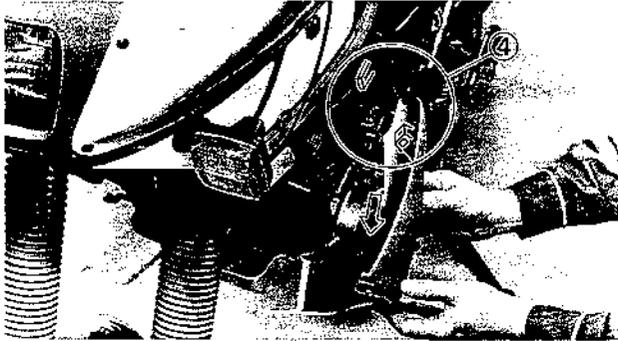


- A** Air scoop (left)
B Air scoop (right)

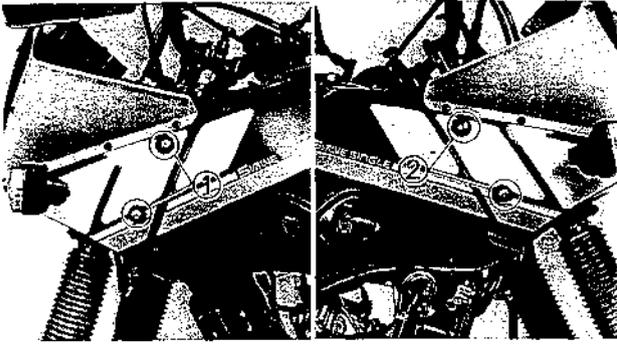

5. Remove:

- Bolt ① (cowling and fuel tank)
- Bolt ② (cowling and fuel tank)

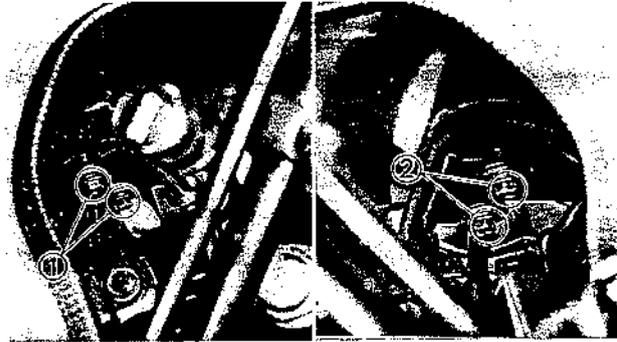


6. Remove:

- Bolt ① (fuel tank)
- Bolt ② (fuel tank)



7. Turn the fuel cock to "OFF".

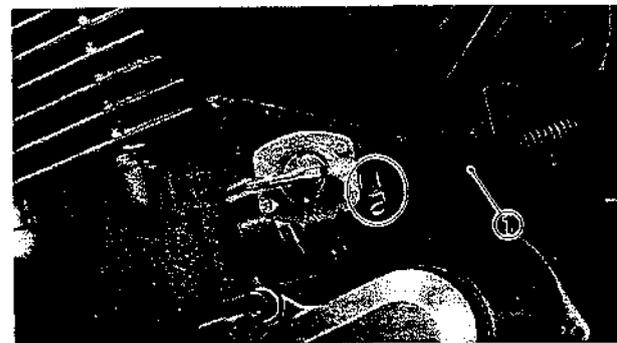

8. Disconnect:

- Fuel hose ①


NOTE: _____

Place a rag on the engine to absorb a spilt fuel.

⚠ WARNING _____

Gasoline is highly flammable.

Avoid spilling fuel on the hot engine.

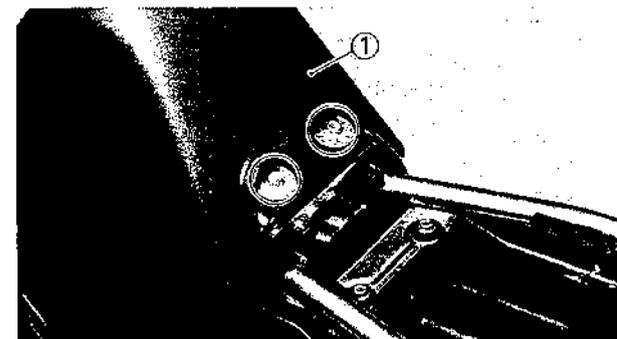

9. Remove:

- Fuel tank ①



INSTALLATION

Reverse the "REMOVAL" procedure. Note the following points.

1. Install:
 - Fuel tank
 - Bolts (cowling and fuel tank)
 - Air scoops







Bolts (fuel tank):
7 Nm (0.7 m•kg, 5.1 ft•lb)
Bolts (cowling and fuel tank):
7 Nm (0.7 m•kg, 5.1 ft•lb)

2. Install:
 - Side covers
 - Seat



Bolt (side cover):
7 Nm (0.7 m•kg, 5.1 ft•lb)
Bolt (seat):
10 Nm (1.0 m•kg, 7.2 ft•lb)

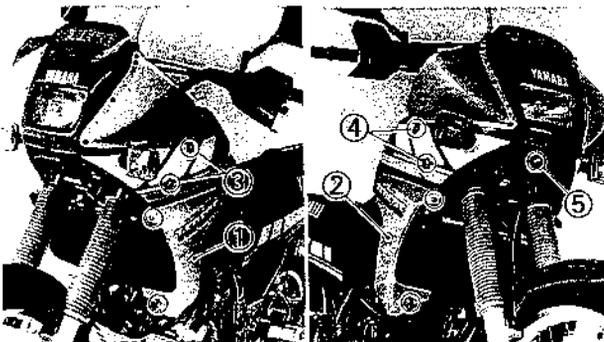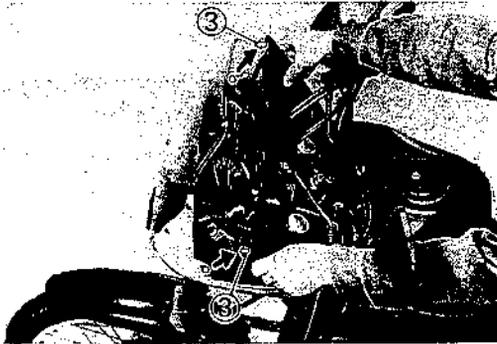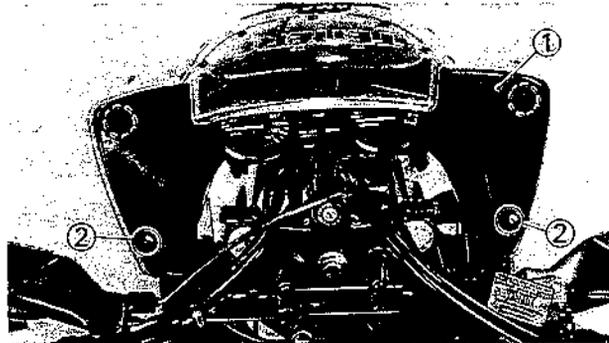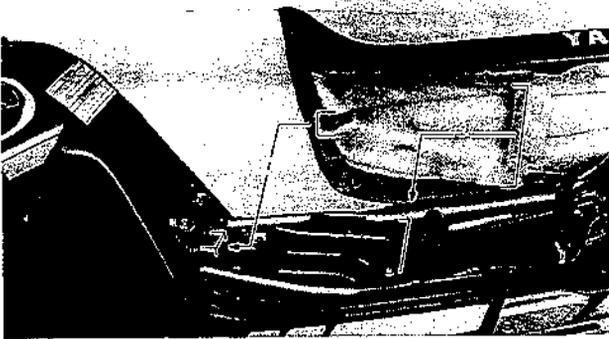


COWLING REMOVAL

1. Remove:
 - Inner panel ①


NOTE:

When removing the inner panel ①, remove the bolts ②. Then pull the projections ③ from the grommets.


2. Remove:
 - Air scoop (left) ①
 - Air scoop (right) ②
 - Bolt ③ (cowling and fuel tank)
 - Bolt ④ (cowling and fuel tank)
 - Refer to the "SEAT, FUEL TANK AND COVER" section.
 - Bolt ⑤ (cowling and cowling stay)

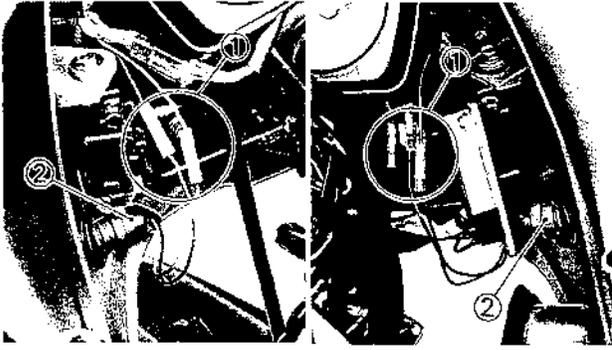


3. Disconnect:
- Front flasher light leads ①
 - Rubber covers ②

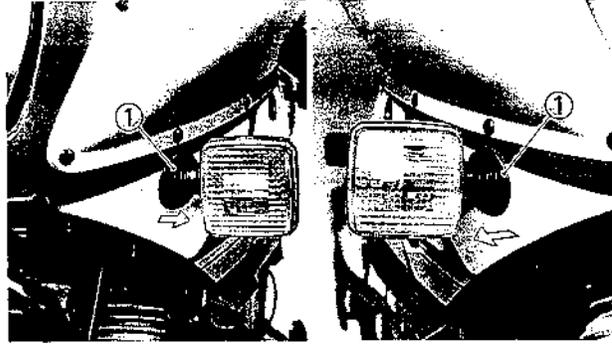


4. Remove:
- Rubber dampers ①

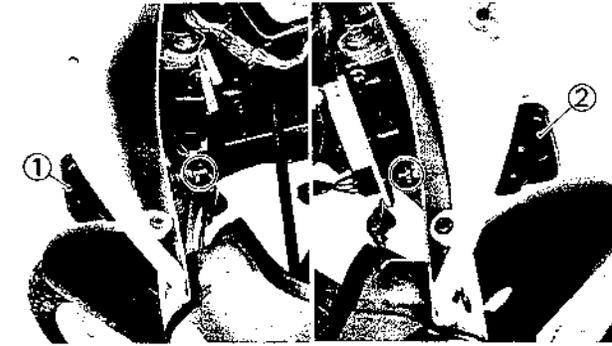


5. Remove:
- Front flasher light (left) ①
 - Front flasher light (right) ②

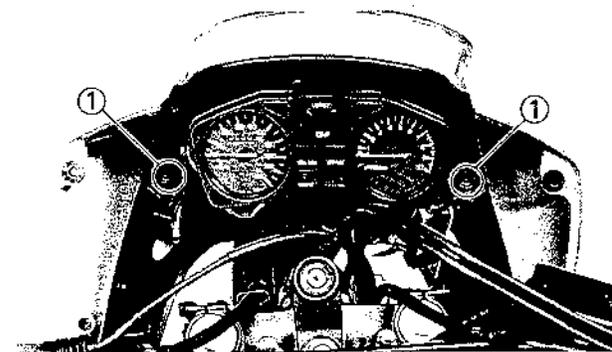

6. Remove:
- Bolt ① (cowling and cowling stay)

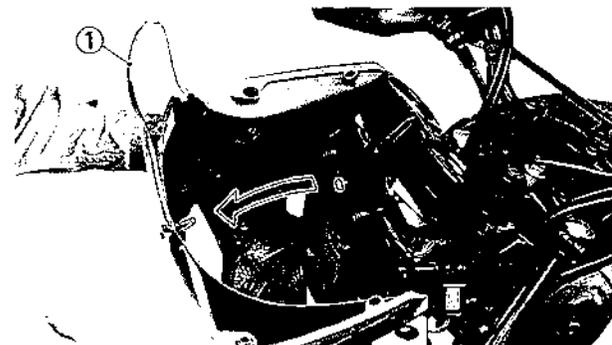

7. Remove:
- Cowling ①

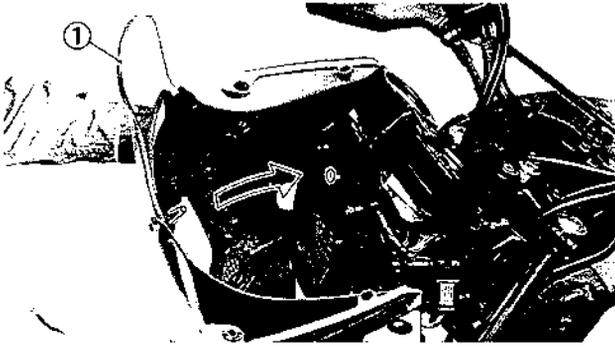**INSTALLATION**

Reverse the "REMOVAL" procedure.
Note the following points.

1. Install:
 - Cowling ①

2. Install:
 - Bolts (cowling and cowling stay)
 - Front flasher lights
 - Rubber damper

3. Connect:
 - Rubber covers (front flasher light)
 - Front flasher light leads

4. Install:
 - Air scoops
 - Bolts (cowling and fuel tank)
 - Inner panel



Bolts (cowling and cowling stay):

7 Nm (0.7 m•kg, 5.1 ft•lb)

Bolts (cowling and fuel tank):

7 Nm (0.7 m•kg, 5.1 ft•lb)



ENGINE

VALVE CLEARANCE ADJUSTMENT

NOTE:

- The valve clearance must be adjusted when the engine is cool to the touch.
- Adjust the valve clearance when the piston is at the Top Dead Center (T.D.C.) on compression stroke.

⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.


1. Remove:

- Seat
- Side covers
- Air scoops
- Fuel tank

Refer to the "SEAT, FUEL TANK AND COVER" section.


2. Remove:

- Bolt ① (radiator stay)
- Bolt ② (radiator)

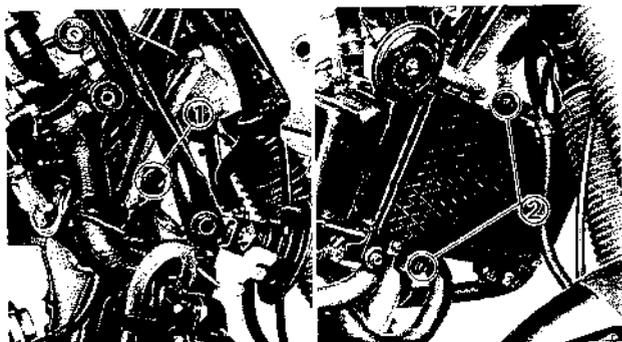


3. Disconnect:

- Leads (ignition coil) ①
- Plug cap ②

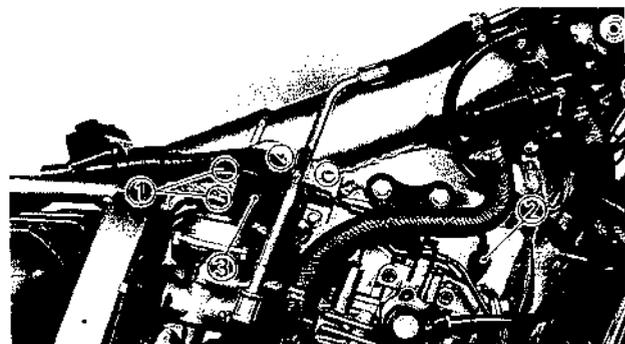

4. Remove:

- Ignition coil ③

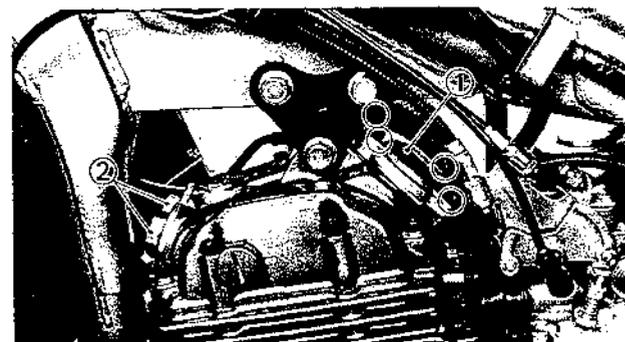


5. Remove:


- Tappet cover ① (intake)
- Tappet cover ② (exhaust)

VALVE CLEARANCE ADJUSTMENT


INSP
ADJ

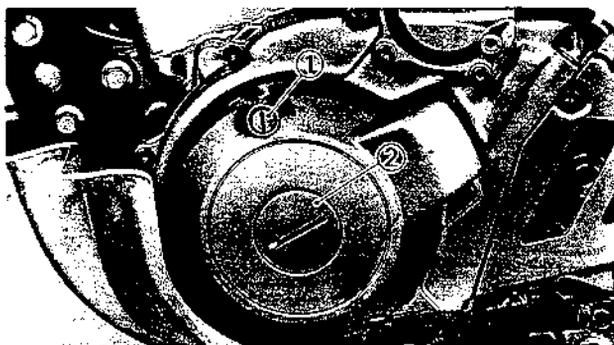

6. Remove:
- Plug ①
 - Plug ②

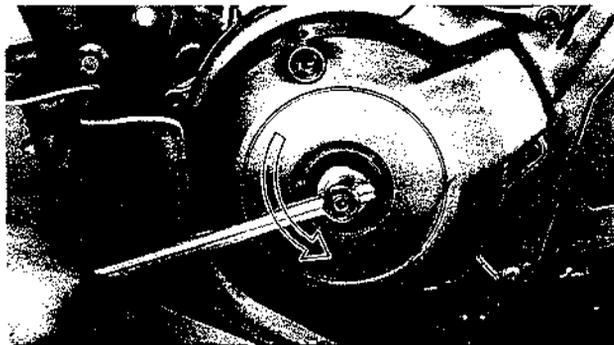


7. Turn the crankshaft counterclockwise with a wrench.

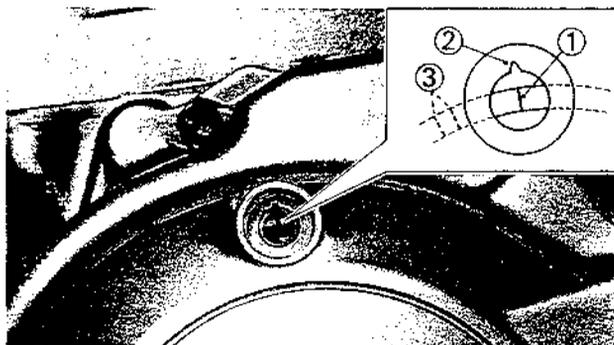

8. Align:
- "T" mark ①
- With stationary pointer ②.

NOTE: _____
Make sure the piston is at the T.D.C. on compression stroke.

③ Ignition timing mark

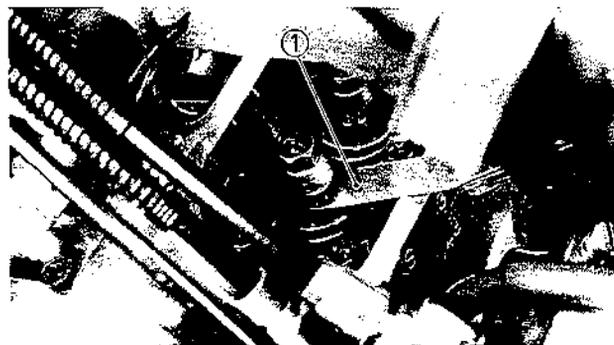

9. Check:
- Valve clearance
- Measure the valve clearance by using a feeler gauge ①.
Out of specification → Adjust.



Valve clearance (cold):

Intake:



0.10 ~ 0.15 mm (0.004 ~ 0.006 in)

Exhaust:

0.15 ~ 0.20 mm (0.006 ~ 0.008 in)

VALVE CLEARANCE ADJUSTMENT

INSP
ADJ

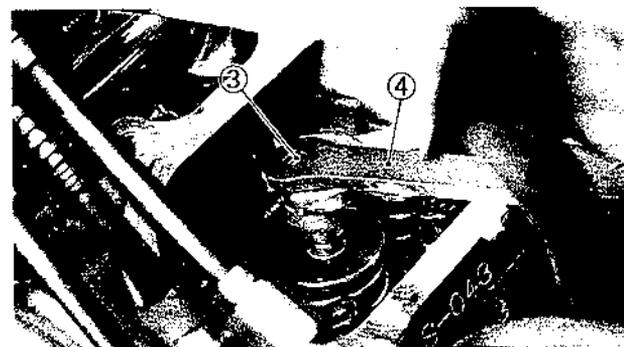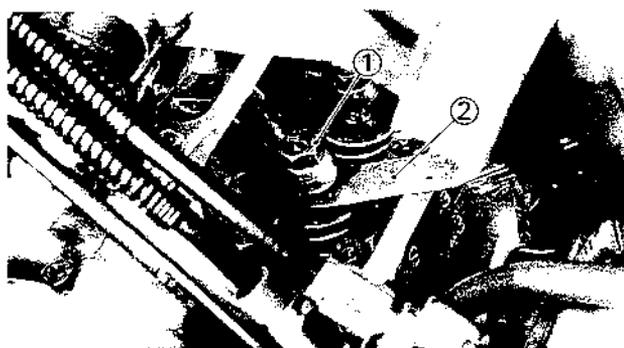

10. Adjust:

- Valve clearance

Adjustment steps:

- Loosen the locknut (1).
- Insert a Feeler Gauge (2) between the adjuster end and the valve end.
- Turn the adjuster (3) clockwise or counter-clockwise with the valve adjusting tool (4) until proper clearance is obtained.



Valve adjusting tool:

P/N. YM-08035

P/N. 90890-01311

- Hold the adjuster to prevent it from moving and thoroughly tighten the locknut.



Locknut:

14 Nm (1.4 m•kg, 10 ft•lb)

- Measure the valve clearance.
- If the clearance is incorrect, repeat above steps until the proper clearance is obtained.

11. Install:

Reverse removal steps.

- Plugs
- Tappet cover (intake)
- Tappet cover (exhaust)



Tappet cover (exhaust):

12 Nm (1.2 m•kg, 8.7 ft•lb)

Bolt (tappet cover-intake):

10 Nm (1.0 m•kg, 7.2 ft•lb)

12. Install:

- Ignition coil

13. Connect:

- Leads (ignition coil)
- Spark plug cap

14. Install:

- Bolts (radiator)
- Bolt (radiator stay)



15. Install:

- Fuel tank
- Air scoops
- Side covers
- Seat

Refer to the "SEAT, FUEL TANK AND COVER" section.




Bolts (fuel tank, cowling and fuel tank, side cover):

7 Nm (0.7 m•kg, 5.1 ft•lb)


Bolt (seat):

10 Nm (1.0 m•kg, 7.2 ft•lb)

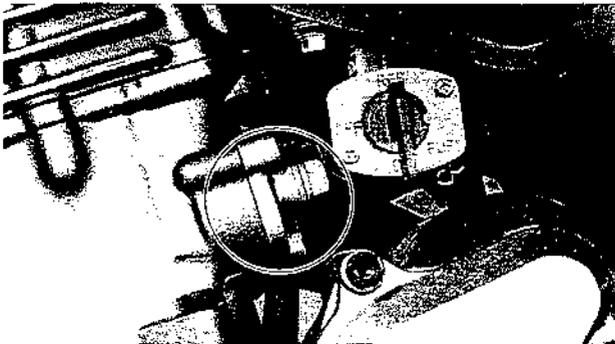

CAM CHAIN ADJUSTMENT

Adjustment free.

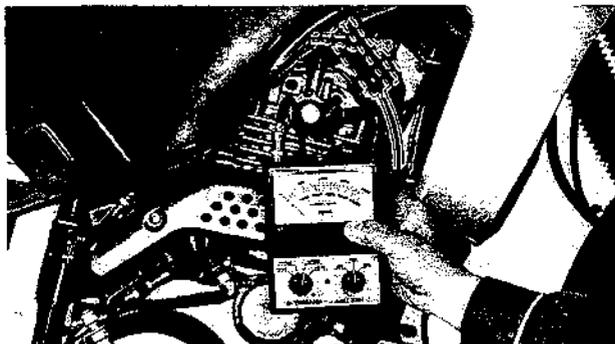

IDLING SPEED ADJUSTMENT

1. Start the engine and let it warm up for several minutes.
2. Attach:
 - Inductive tachometer to the spark plug lead.



Inductive tachometer

P/N. YU-08036-A

P/N. 90890-03113

3. Check:


- Engine idling speed
Out of specification → Adjust.



Engine idling speed:

1,250 ~ 1,350 r/min

THROTTLE CABLE FREE PLAY ADJUSTMENT

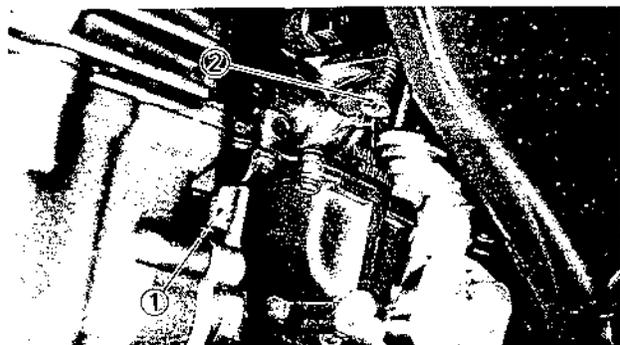

4. Adjust:
- Engine idling speed

Adjustment steps:

- Turn in the pilot screw (1) until it is lightly seated.
- Turn out the pilot screw for the specified number of turns.

Pilot screw:
2 and 1/2 turns out

- Turn the throttle stop screw (2) in or out until specified idling speed is obtained.

Turn in → Idling speed becomes higher.

Turn out → Idling speed becomes lower.

5. Remove:
- Inductive tachometer


6. Adjust:
- Throttle cable free play
- Refer to the "THROTTLE CABLE FREE PLAY ADJUSTMENT" section.

 **Free play:**
3~5 mm (0.12~0.20 in)

THROTTLE CABLE FREE PLAY ADJUSTMENT

NOTE:

Before adjusting the throttle cable free play, the engine idle speed should be adjusted.

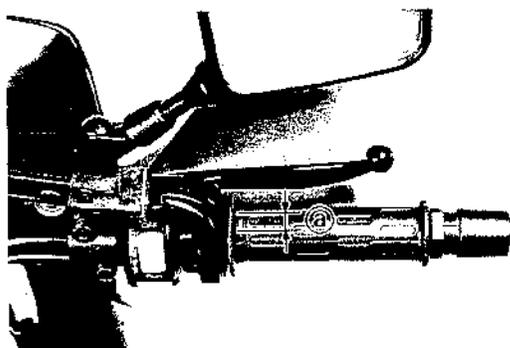

1. Check:
- Throttle cable free play (a)
- Out of specification → Adjust.

 **Throttle cable free play:**
3~5 mm (0.12~0.20 in)

THROTTLE CABLE FREE PLAY ADJUSTMENT


2. Remove:

- Seat
- Side covers
- Air scoops
- Fuel tank

Refer to the "SEAT, FUEL TANK AND COVER" section.

3. Adjust:

- Throttle cable free play

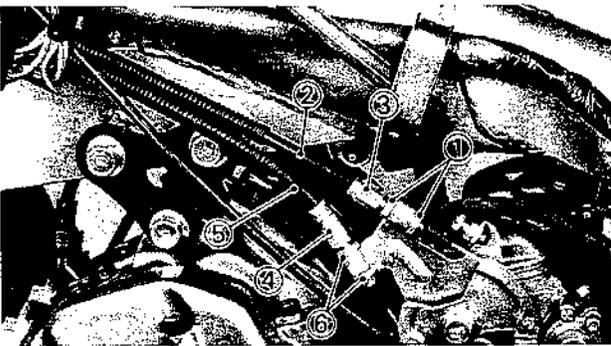

Adjustment steps:


- Loosen the locknuts ① on the throttle cable 1 ②.
- Turn the adjuster ③ clockwise or counter-clockwise until proper free play is obtained.
- If the play is still incorrect after the adjuster is loosened 5 mm (0.2 in), make an adjustment with the adjuster ④ on the throttle cable 2 ⑤.
- Tighten the locknuts.

①, ⑥ Locknuts

4. Install:

- Fuel tank
- Air scoops
- Side covers
- Seat

	Bolts (fuel tank, cowling and fuel tank, side cover): 7 Nm (0.7 m•kg, 5.1 ft•lb)
	Bolt (seat): 10 Nm (1.0 m•kg, 7.2 ft•lb)

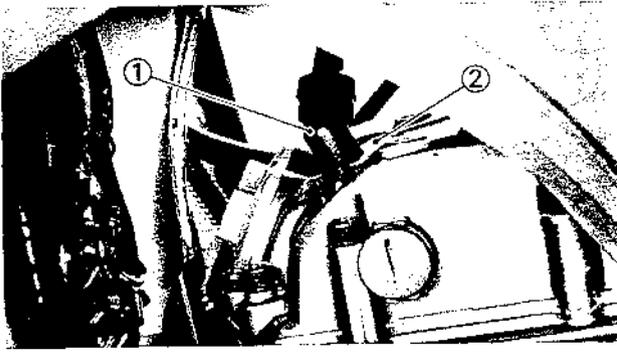

SPARK PLUG INSPECTION

1. Disconnect:
 - Spark plug cap ①
 - Rubber cover ②


2. Remove:
 - Spark plug

CAUTION:


When removing the spark plug, use caution to prevent an object from falling into the engine.

3. Inspect:
 - Spark plug type
Incorrect → Replace.

Standard spark plug:
DPR8EA-9 (N.G.K.), DPR9EA-9 (N.G.K.)

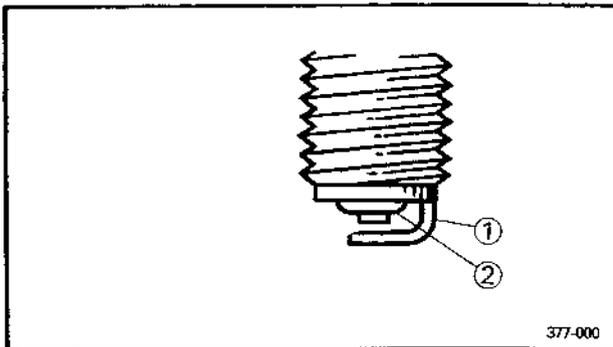

4. Inspect:
 - Electrode ①
Wear/Damage → Replace.
 - Insulator ②
Abnormal color → Replace.
Normal color is a medium-to-light tan color.

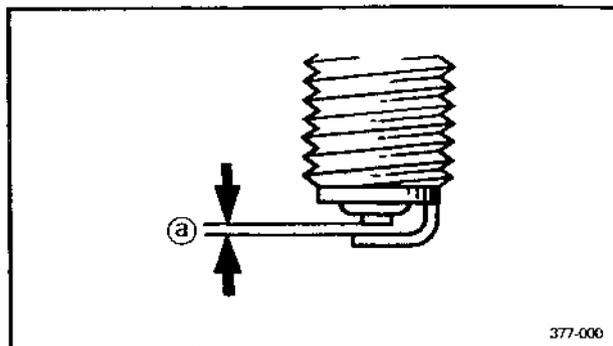

5. Clean the spark plug with a spark plug cleaner or wire brush.
6. Measure:
 - Plug gap ①
Use a wire gauge or feeler gauge.
Out of specification → Regap.

Spark plug gap:
0.8 ~ 0.9 mm (0.031 ~ 0.035 in)

IGNITION TIMING CHECK

INSP
ADJ



7. Tighten:

- Spark plug(s)



Spark plug:

17.5 Nm (1.75 m•kg, 12.5 ft•lb)

NOTE:

- Before installing a spark plug, clean the gasket surface and plug surface.
- If a torque wrench is not available when you are installing a spark plug, a good estimate of the correct torque is 1/4 to 1/2 turns part finger tight. Have the spark plug torqued to the correct value as soon as possible with a torque wrench.

8. Connect:

- Spark plug cap
- Rubber cover

IGNITION TIMING CHECK

NOTE:

Engine idling speed and throttle cable free play should be adjusted properly before checking the ignition timing.

1. Start the engine and let it warm up for several minutes.
2. Attach:
 - Inductive tachometer
 - Timing light to spark plug lead.



Inductive tachometer:

P/N. YU-08036-A

P/N. 90890-03113

Timing light:

P/N. YM-33277-A


P/N. 90890-03109

3. Remove:


- Plug ①

CAUTION:

Under extreme conditions, the oil may spurt out when removing the plug. Therefore care should be used when removing.

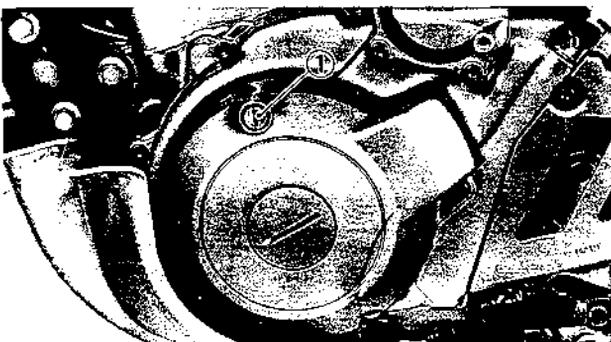

COMPRESSION PRESSURE MEASUREMENT

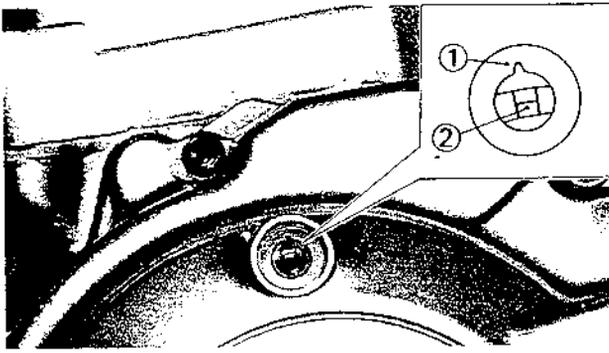

4. Check:
- Ignition timing

Checking steps:

- Warm up the engine and let it run at the specified speed.

	Engine speed: 1,300 r/min
--	-------------------------------------

- Visually check the stationary pointer (1) to verify it is within the required firing range (2) indicated on the flywheel.

Incorrect firing range → Check pickup assembly.

NOTE: _____

Ignition timing is not adjustable.

5. Install:
- Plug
6. Detach:
- Timing light
 - Inductive tachometer

COMPRESSION PRESSURE MEASUREMENT

NOTE: _____


Insufficient compression pressure will result in performance loss.

1. Remove:
- Seat
 - Side covers
 - Air scoops
 - Fuel tank
- Refer to the "SEAT, FUEL TANK AND COVER" section.
2. Check:
- Valve clearance
- Out of specification → Adjust.
Refer to the "VALVE CLEARANCE ADJUSTMENT" section.

COMPRESSION PRESSURE MEASUREMENT



3. Install:
 - Sub tank (fuel)
4. Start the engine and let it warm up for several minutes.
5. Stop the engine.
6. Disconnect:
 - Spark plug cap
 - Rubber cover
7. Remove:
 - Spark plugRefer to the "SPARK PLUG INSPECTION" section.

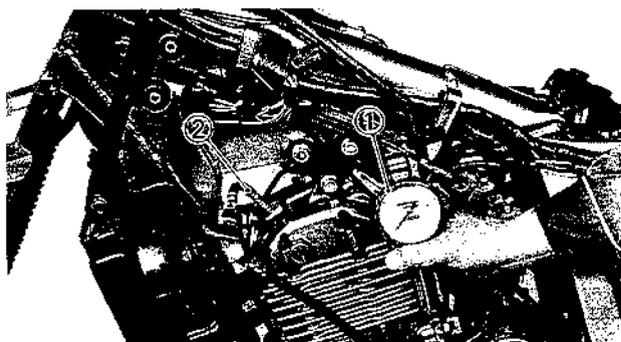

8. Attach:
 - Compression gauge ①
 - Adapter ②

	Compression gauge: P/N. YU-33223 P/N. 90890-03081
	Adapter: P/N. YU-33223-3 P/N. 90890-04082

9. Check:
 - Compression pressure

Checking steps:

- Crank over the engine with the electric starter (be sure the battery is fully charged) with the throttle wide-open until the compression reading on the gauge stabilizes.

⚠ WARNING

When cranking the engine, ground the spark plug lead to prevent sparking.

- Check reading with specified levels (see chart).

Compression pressure (at sea level):
Standard:
 1,100 kPa (11 kg/cm², 156 psi)
Minimum:
 900 kPa (9 kg/cm², 128 psi)
Maximum:
 1,200 kPa (12 kg/cm², 171 psi)

- If pressure falls below the minimum level:
 - 1) Squirt a few drops of oil into the affected cylinder.
 - 2) Measure the compression again.

Compression pressure (with oil introduced into cylinder)	
Reading	Diagnosis
Higher than without oil	Worn or damaged pistons
Same as without oil	Defective ring(s), valves, cylinder head gasket or piston is possible.
Above maximum level	Inspect cylinder head, valve surfaces, or piston crown for carbon deposits.

10. Remove:
 - Sub tank (fuel)
 - Compression gauge (with an adapter)
11. Install:
 - Spark plug

	Spark plug: 17.5 Nm (1.75 m•kg, 12.5 ft•lb) -
---	---

Refer to the "SPARK PLUG INSPECTION" section.

12. Connect:
 - Spark plug cap
 - Rubber cover
13. Install:
 - Fuel tank
 - Air scoops
 - Side covers
 - Seat

ENGINE OIL LEVEL INSPECTION

INSP
ADJ



Bolts (fuel tank, cowling and fuel tank, side cover):

7 Nm (0.7 m•kg, 5.1 ft•lb)

Bolt (seat):

10 Nm (1.0 m•kg, 7.2 ft•lb)



ENGINE OIL LEVEL INSPECTION

CAUTION:

Do not add any chemical additives. Engine oil also lubricates the clutch and additives could cause clutch slippage.

WARNING

Never remove the oil tank cap just after high speed operation. The heated oil could spurt out, causing danger. Wait until the oil cools down to approximately 70°C (158°F).

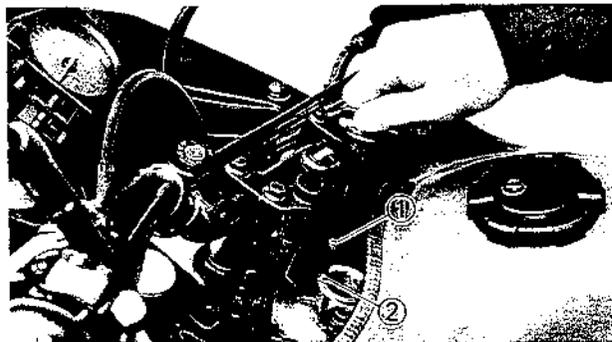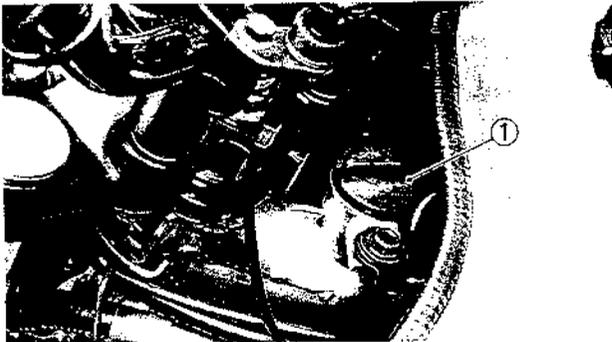

1. Place the motorcycle on a level place.

2. Remove:

- Oil tank cap ①

3. Inspect:

- Oil level

Oil level should be between the maximum level ① and minimum level ②.

NOTE:

- Be sure the motorcycle is positioned straight up when checking the oil level.
- When inspecting the oil level, do not screw the oil level gauge into the oil tank. Insert the gauge lightly.

Oil level is incorrect → Add the oil up to the minimum level.



Recommended oil:

SAE 20W40 type SE motor oil or
SAE 10W30 type SE motor oil

ENGINE OIL REPLACEMENT

INSP
ADJ



4. Install:
 - Oil tank cap
5. Start the engine and warm up until the oil temperature rises to approximately 70°C (158°F).

CAUTION:

When the oil tank is empty, never start the engine.

6. Idle the engine more than 10 seconds while keeping the motorcycle upright. Then stop the engine and add the oil to the maximum level.
7. Install:
 - Oil tank cap



Oil quantity:

Periodic oil change

2.6 L (2.3 Imp qt, 2.7 US qt)

With oil filter replacement

2.7 L (2.4 Imp qt, 2.9 US qt)

Total amount

3.0 L (2.6 Imp qt, 3.2 US qt)

ENGINE OIL REPLACEMENT

CAUTION:




Do not add any chemical additives. Engine oil also lubricates the clutch and additives could cause clutch slippage.

⚠ WARNING

Never remove the oil tank cap just after high speed operation. The heated oil could spurt out, causing danger. Wait until the oil cools down to approximately 70°C (158°F).

ENGINE OIL REPLACEMENT

INSP
ADJ

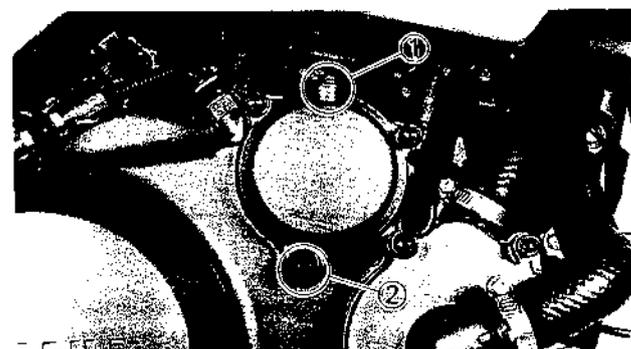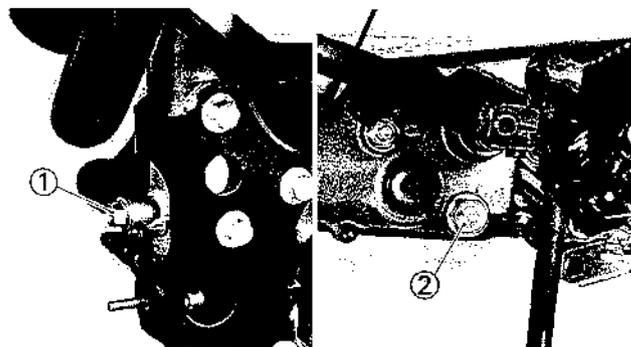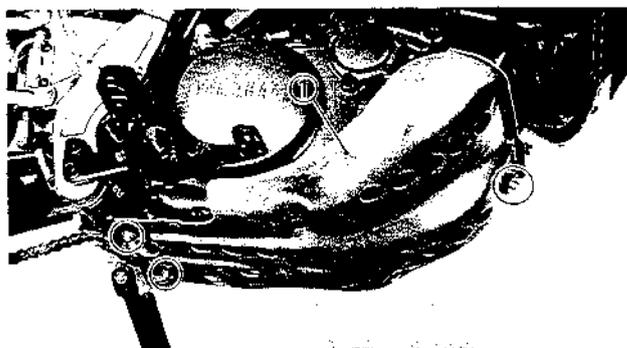

Engine oil replacement (without oil filter)

1. Place the motorcycle on a level place.
2. Remove:
 - Engine guard ①
3. Warm up the engine for several minutes, then stop the engine. Then place a receptacle under the drain bolt.
4. Remove:
 - Oil tank cap
 - Drain bolt (oil tank) ①
 - Drain bolt (crankcase) ②
5. Drain:
 - Engine oil

NOTE: _____

When the drain bolt ① is removed, the oil will not drain directly downward. Therefore a receptacle should be placed slightly in front of the drain bolt.

6. Remove:
 - Air bleed screw ①
 - Bolt ② (oil filter cover)

NOTE: _____

The oil filter cover is secured by three screws. The lower one should be removed so that the filter cavity will drain.

7. Inspect:
 - Gasket (each)
Damage → Replace.
8. Install:
 - Bolt (oil filter cover)
 - Drain bolt (oil tank)
 - Drain bolt (crankcase)



Bolt (oil filter cover):
10 Nm (1.0 m•kg, 7.2 ft•lb)
Drain bolt (oil tank):
18 Nm (1.8 m•kg, 13 ft•lb)
Drain bolt (crankcase):
30 Nm (3.0 m•kg, 22 ft•lb)

9. Fill:

- Oil tank (to frame)
- Oil filter chamber



Recommended oil:
SAE 20W40 type SE motor oil or
SAE 10W30 type SE motor oil
Oil quantity:
Oil tank
2.6 L (2.3 Imp qt, 2.7 US qt)
Oil filter chamber
0.06 L (0.05 Imp qt, 0.06 US qt)

CAUTION:

- Do not allow foreign material to enter the crankcase.
- Do not add any chemical additives. Engine oil also lubricates the clutch and additives could cause clutch slippage.

10. Install:

- Air bleed screw



Air bleed screw:
5 Nm (0.5 m•kg, 3.6 ft•lb)

11. Inspect:

- Oil level
Refer to the "ENGINE OIL LEVEL INSPECTION" section.
- Oil pressure
Refer to the "OIL PRESSURE INSPECTION" section.
- Oil leaks

12. Install:

- Oil tank cap
- Engine guard



Nut (engine guard):
7 Nm (0.7 m•kg, 5.1 ft•lb)
Bolt (engine guard):
7 Nm (0.7 m•kg, 5.1 ft•lb)


Engine oil replacement (with oil filter)

1. Place the motorcycle on a level place.
2. Remove:
 - Engine guard

Refer to the "ENGINE OIL REPLACEMENT (without oil filter)" section.
3. Warm up the engine for several minutes, then stop the engine. Then place a receptacle under the drain bolts.
4. Remove:
 - Oil tank cap
 - Drain bolt ① (oil tank)
 - Drain bolt ② (crankcase)
5. Drain:
 - Engine oil

NOTE: _____


When the drain bolt ① is removed, the oil will not drain directly downward. Therefore a receptacle should be placed slightly in front of the drain bolt.

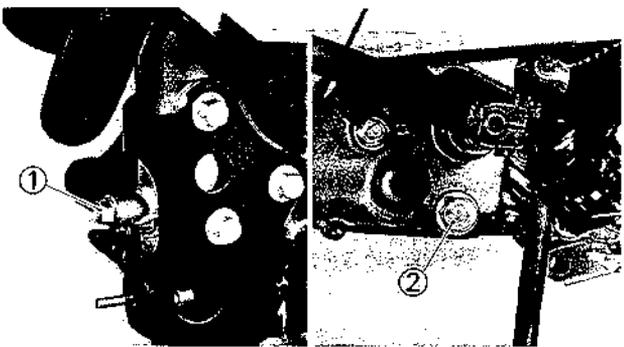


6. Remove:
 - Air bleed screw ①
 - Bolt ②

NOTE: _____

The oil filter cover is secured by three screws. The lower one should be removed so that the filter cavity will drain.

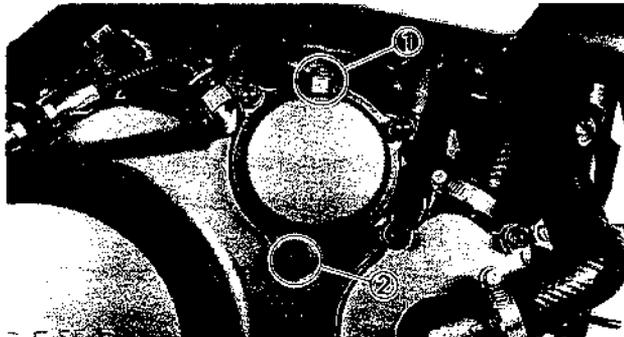




7. Remove:
 - Oil filter cover ①
 - Oil filter ②

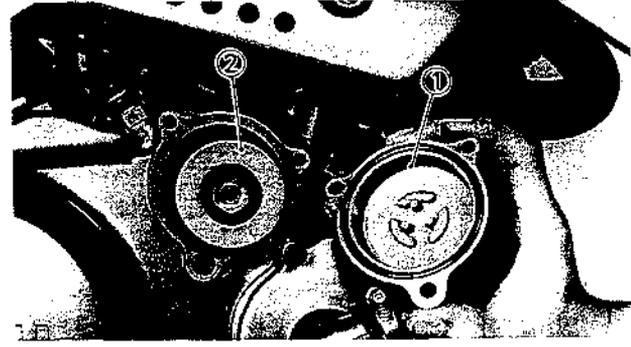

8. Inspect:
 - Gasket (each)
 - O-ring ①

Damage → Replace.

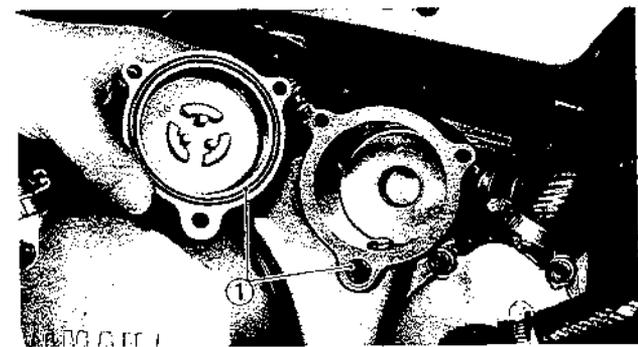

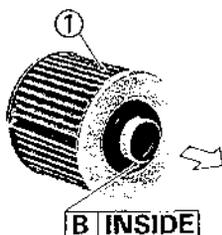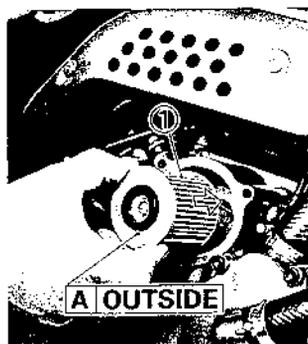

9. Install:
- Oil filter (new) ①

CAUTION:

Install the oil filter as shown.

- Oil filter cover
- Drain bolt (crankcase)
- Drain bolt (oil tank)



Bolt (oil filter cover):
10 Nm (1.0 m·kg, 7.2 ft·lb)
Drain bolt (oil tank):
18 Nm (1.8 m·kg, 13 ft·lb)
Drain bolt (crankcase):
30 Nm (3.0 m·kg, 22 ft·lb)

10. Fill:
- Oil tank (to frame)
 - Oil filter chamber



Recommended oil:
SAE 20W40 type SE motor oil or
SAE 10W30 type SE motor oil
Oil quantity:
Oil tank
2.7 L (2.4 Imp qt, 2.9 US qt)
Oil filter chamber
0.06 L (0.05 Imp qt, 0.06 US qt)

CAUTION:

- Do not allow foreign material to enter the crankcase.
- Do not add any chemical additives. Engine oil also lubricates the clutch and additives could cause clutch slippage.

11. Install:
- Air bleed screw




Air bleed screw:
5 Nm (0.5 m·kg, 3.6 ft·lb)

12. Inspect:
- Oil level
Refer to the "ENGINE OIL LEVEL INSPECTION" section.
 - Oil pressure
Refer to the "OIL PRESSURE INSPECTION" section.
 - Oil leaks

13. Install:
- Oil tank cap
 - Engine guard

	Nut (engine guard): 7 Nm (0.7 m•kg, 5.1 ft•lb) Bolt (engine guard): 7 Nm (0.7 m•kg, 5.1 ft•lb)
---	---

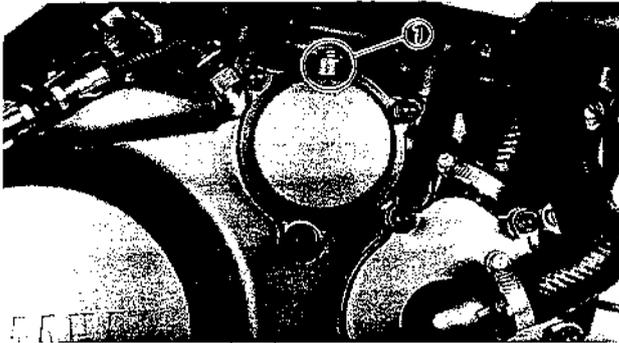

OIL PRESSURE INSPECTION

1. Remove:
 - Air bleed screw ①
2. Start the engine and keep it idling for several minutes.
3. Inspect:
 - Oil condition of the bleed hole
Oil flows out → Oil pressure is good.
No oil comes out → Oil pressure is bad.

CAUTION:

If no oil comes out after a lapse of one minute, turn off the engine immediately so it will not seize.

4. Tighten:
 - Air bleed screw

	Air bleed screw: 5 Nm (0.5 m•kg, 3.6 ft•lb)
---	---

YB2AF000

CLUTCH ADJUSTMENT



1. Check:
 - Clutch cable free play ①
Out of specification → Adjust.


	Free play: 10~15 mm (0.4~0.6 in) at clutch lever end
---	---

2. Adjust:
 - Clutch cable free play

Adjustment steps:


- Loosen the locknut(s) ①.
- Turn the adjuster(s) ② in or out until the specified free play is obtained.

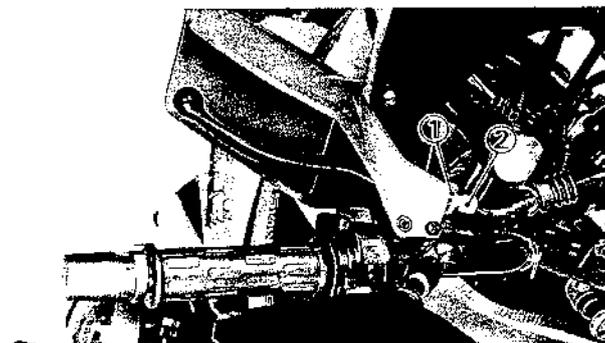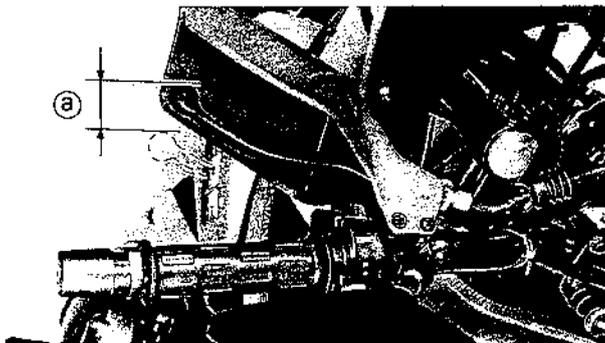

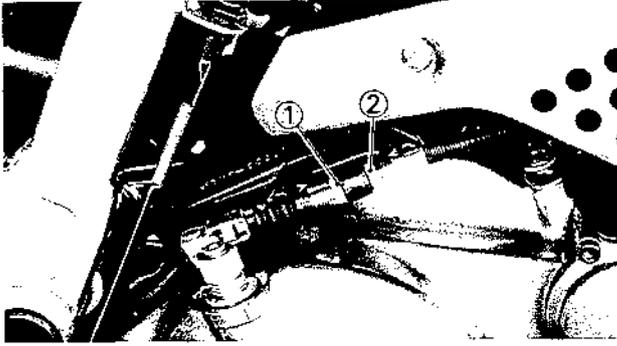

Turning in → Free play is increased.
Turning out → Free play is decreased.

● Tighten the locknut(s).

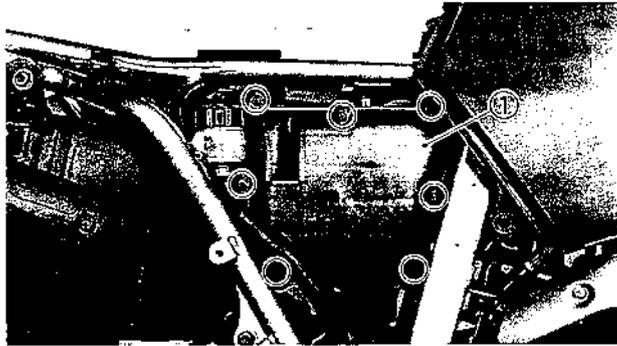

AIR FILTER CLEANING


- Remove:
 - Seat
 - Side cover (right)
Refer to the "SEAT, FUEL TANK AND COVER" section.
 - Air filter case cover ①




- Remove:
 - Air filter element ①

CAUTION:

Never operate the engine with the air filter element removed. This will allow unfiltered air to enter, causing rapid wear and possible engine damage. Additionally, operation without the filter element will affect carburetor tuning with subsequent poor performance and possible engine overheating.

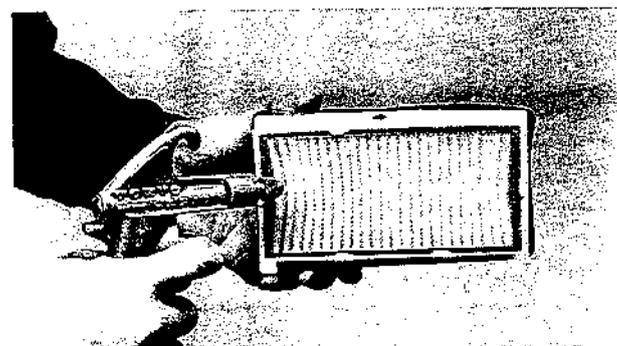

- Inspect:
 - Air filter element
Damage → Replace.

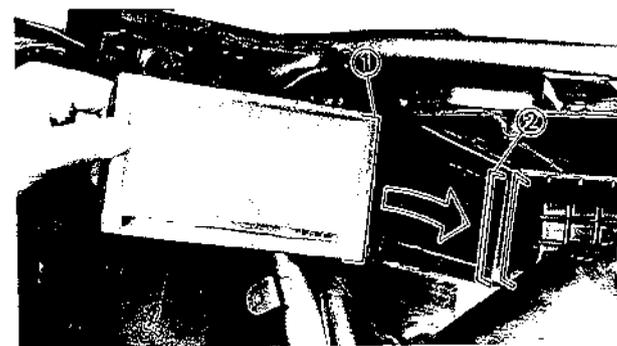

- Clean:
 - Air filter element
Blow out dust in the element from the outer surface using compressed air.

- Install:
 - Air filter element


NOTE:

- Install the air filter element with the arrow mark on the top pointing inward.
- When installing the air filter element in its case, fit section ① into the slot ② of air filter case.

6. Install:

- Air filter case cover
- Side cover (right)
- Seat

	Bolt (side cover):
	7 Nm (0.7 m•kg, 5.1 ft•lb)
	Bolt (seat):
	10 Nm (1.0 m•kg, 7.2 ft•lb)

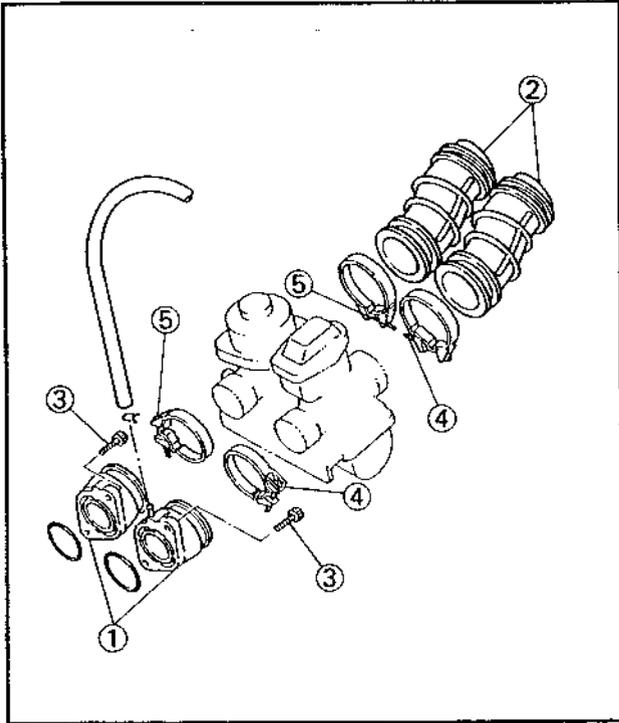

CARBURETOR JOINT INSPECTION

1. Remove:

- Seat
- Side covers
- Air scoops
- Fuel tank

Refer to the "SEAT, FUEL TANK AND COVER" section.

2. Inspect:

- Carburetor joint ①, ②
- Crack/Damage → Replace.

	Bolt ③ (carburetor joint):
	10 Nm (1.0 m•kg, 7.2 ft•lb)
	Screw ④ (left):
	2 Nm (0.2 m•kg, 1.4 ft•lb)
	Screw ⑤ (right):
	5 Nm (0.5 m•kg, 3.6 ft•lb)

3. Install:

- Fuel tank
- Air scoops
- Side cover
- Seat

	Bolts (fuel tank, cowling and fuel tank, side cover):
	7 Nm (0.7 m•kg, 5.1 ft•lb)
	Bolt (seat):
	10 Nm (1.0 m•kg, 7.2 ft•lb)

FUEL LINE INSPECTION / CRANKCASE VENTILATION HOSE INSPECTION




FUEL LINE INSPECTION

1. Remove:

- Seat
- Side covers
- Air scoops
- Fuel tank

Refer to the "SEAT, FUEL TANK AND COVER" section.

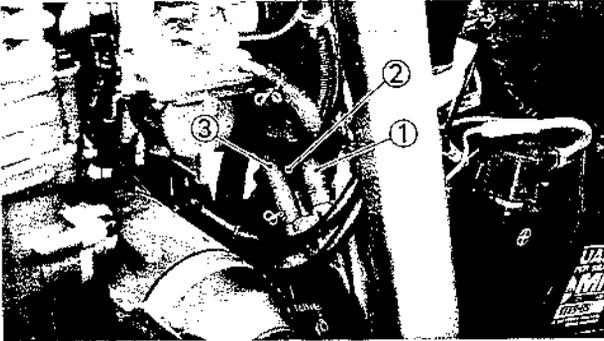


2. Inspect:

- Fuel hose ①
 - Vacuum hose ②
 - Delivery hose ③
- Crack/Damage → Replace.

3. Install:

- Air scoops
- Side covers
- Seat

	Bolts (fuel tank, cowling and fuel tank, side cover): 7 Nm (0.7 m•kg, 5.1 ft•lb)
	Bolt (seat): 10 Nm (1.0 m•kg, 7.2 ft•lb)

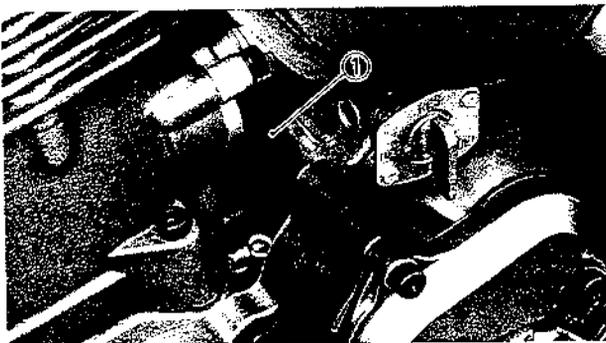


CRANKCASE VENTILATION HOSE INSPECTION

1. Inspect:

- Crankcase ventilation hose ①
- Crack/Damage → Replace.

EXHAUST SYSTEM INSPECTION/ COOLANT LEVEL INSPECTION

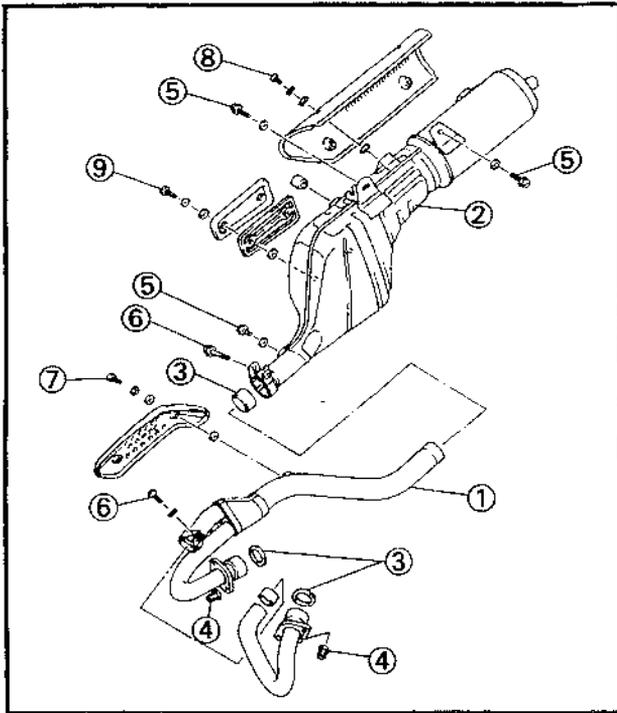

EXHAUST SYSTEM INSPECTION

1. Inspect:

- Exhaust pipe ①
- Muffler ②
- Crack/Damage → Replace.
- Gasket ③
- Exhaust gas leaks → Replace.



Nut ④ (exhaust pipe):

10 Nm (1.0 m·kg, 7.2 ft·lb)

Bolt ⑤ (muffler):

40 Nm (4.0 m·kg, 29 ft·lb)

Bolt ⑥ (clamp):

20 Nm (2.0 m·kg, 14 ft·lb)

Screw ⑦ (protector):

7 Nm (0.7 m·kg, 5.1 ft·lb)

Use LOCTITE®.

Screw ⑧ (protector):

7 Nm (0.7 m·kg, 5.1 ft·lb)

Use LOCTITE®.

Screw ⑨ (protector):

7 Nm (0.7 m·kg, 5.1 ft·lb)

Use LOCTITE®.

YB2AD000

COOLANT LEVEL INSPECTION

1. Place the motorcycle on a level place.

NOTE:

Position the motorcycle straight up when inspecting the coolant level.

2. Remove:


- Air scoop (right)

3. Inspect:

- Coolant level

Coolant level should be between maximum ① and minimum ② marks.

Coolant level low → Add soft water (tap water) to proper level.

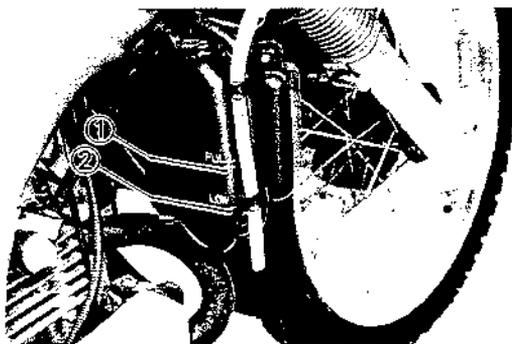

CAUTION:

Hard water or salt water is harmful to the engine parts; use boiled or distilled water if you can't get soft water.

4. Start the engine and let it warm up for several minutes.
5. Stop the engine and inspect the coolant level once again.

NOTE:

Wait a few minutes until level settles before inspecting the coolant level.

6. Install:
 - Air scoop (right)

YB2AD001



COOLANT REPLACEMENT


1. Remove:
 - Seat
 - Side covers
 - Air scoops
 - Fuel tankRefer to the "SEAT, FUEL TANK AND COVER" section.

2. Remove:
 - Engine guard ①

3. Place a drain pan under the reservoir tank and drain bolts.

4. Disconnect:
 - Hose ① (reservoir tank)Drain the reservoir tank of its coolant.

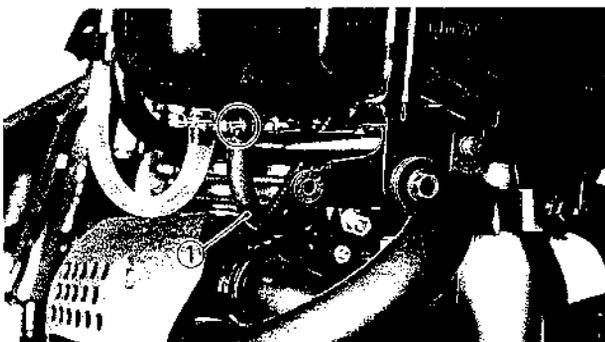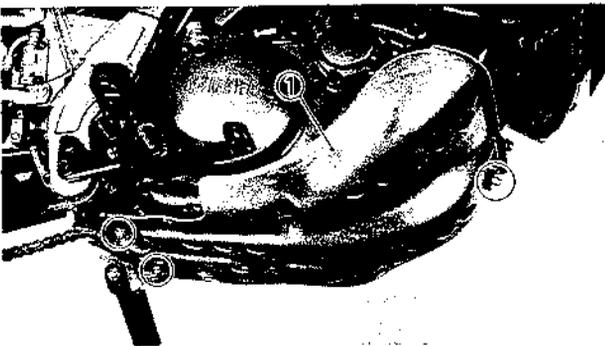

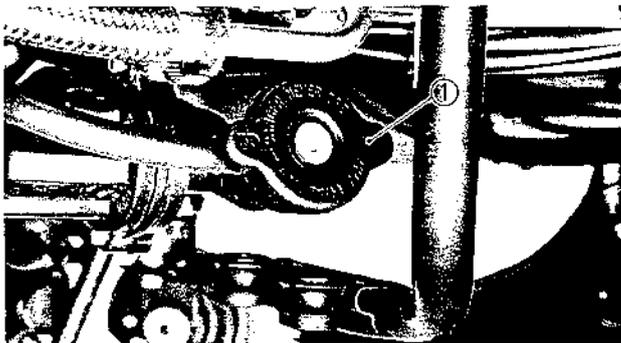


5. Remove:
- Radiator cap ①

⚠ WARNING

Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. When the engine has cooled, open the radiator cap by the following procedure:

Place a thick rag, like a towel, over the radiator cap, slowly rotate the cap counterclockwise to the detente. This procedure allows any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning counterclockwise and remove it.

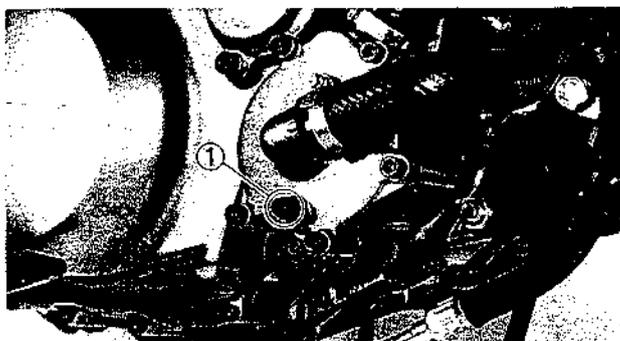

6. Remove:
- Drain bolt ① (water pump)
 - Gasket (drain bolt)
- Drain the radiator and engine of its coolant.

7. Inspect:
- Gasket (drain bolt)
- Damage → Replace.


8. Install:
- Gasket (drain bolt)
 - Drain bolt (water pump)
 - Engine guard



Drain bolt (water pump):
10 Nm (1.0 m•kg, 7.2 ft•lb)
Nut (engine guard):
7 Nm (0.7 m•kg, 5.1 ft•lb)
Bolt (engine guard):
7 Nm (0.7 m•kg, 5.1 ft•lb)

9. Connect:
- Hose (reservoir tank)

COOLANT REPLACEMENT

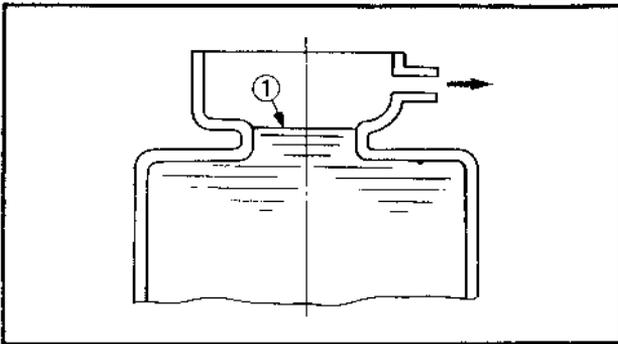

10. Fill:
- Radiator
 - Engine
- (to specified level ①)



Recommended coolant:
High quality ethylene glycol anti-freeze containing anti-corrosion for aluminum engine inhibitors

Coolant and water (soft water)
Mixed ratio: 50%/50%
Total amount:
1.2 L (1.1 Imp qt, 1.3 US qt)
Reservoir tank capacity:
0.29 L (0.26 Imp qt, 0.31 US qt)

Handling notes of coolant:

- The coolant is harmful so it should be handled with special care.

⚠ WARNING


- When coolant splashes in your eye.
Thoroughly wash your eye with water and see your doctor.
- When coolant splashes on your clothes.
Quickly wash it away with water and then with soap.
- When coolant is swallowed.
Quickly make him vomit and take him to a doctor.

CAUTION:

- Hard water or salt water is harmful to the engine parts; use boiled or distilled water if you can't get soft water.
- Do not use water containing impurities or oil.
- Take care so that coolant does not splash on painted surfaces. If it splashes, wash it away with water.
- Do not mix more than one type of ethylene glycol anti-freeze containing corrosion inhibitors for aluminum engines.

11. Install:

- Radiator cap

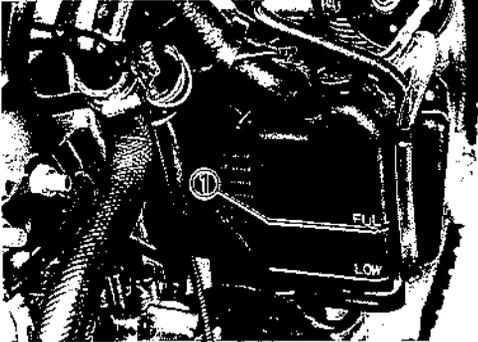

12. Fill:

- Reservoir tank
(to maximum level ①)

13. Start the engine and let it warm up for several minutes.

14. Stop the engine and inspect the level.
Refer to the "COOLANT LEVEL INSPECTION" section.

NOTE: _____

Wait a few minutes until level settles before inspecting the coolant level.

15. Install:

- Fuel tank
- Air scoops
- Side covers
- Seat



Bolt (fuel tank, cowling and fuel tank, side cover):

7 Nm (0.7 m•kg, 5.1 ft•lb)

Bolt (seat):

10 Nm (1.0 m•kg, 7.2 ft•lb)



YB2AD002


COOLING SYSTEM INSPECTION



1. Inspect:

- Radiator ①
- Hose ② (thermostat—radiator)
- Hose ③ (radiator—water pump)
- Pipe ④ (water pump—cylinder)
- Hose ⑤ (cylinder head—thermostat housing)

Cracks/Damage → Replace.

Refer to the "COOLING SYSTEM" section in the CHAPTER 5.

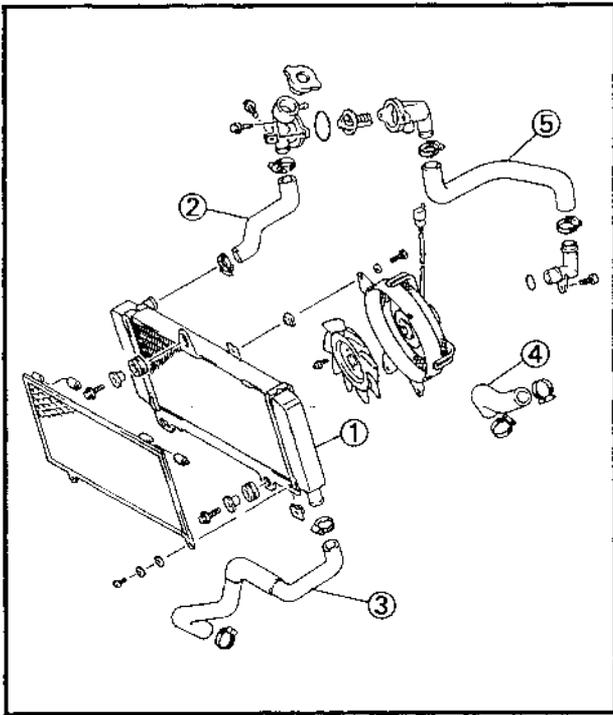

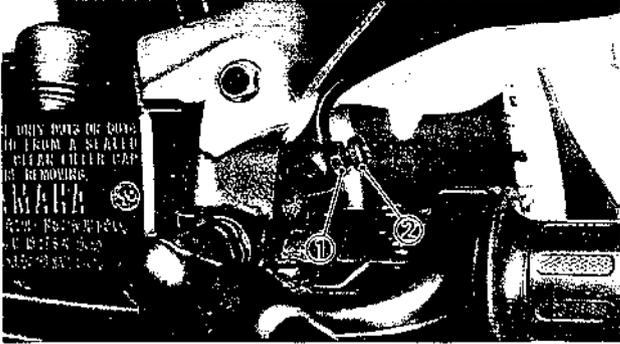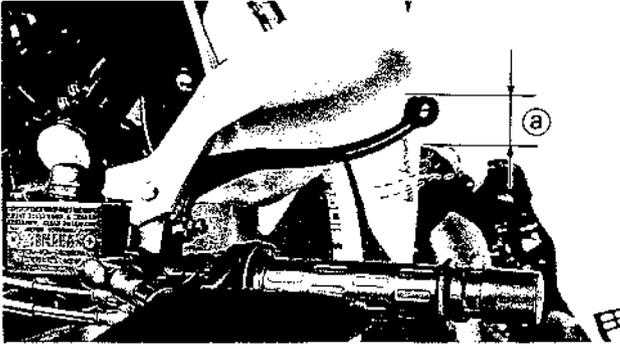

CHASSIS

FRONT BRAKE ADJUSTMENT

1. Check:
 - Brake lever free play (a)
 Out of specification → Adjust.

	Free play: 2~5 mm (0.08~0.20 in)
---	-------------------------------------

2. Adjust:
 - Brake lever free play

Adjustment steps:

- Loosen the locknut (1).
- Turn the adjuster (2) in or out until the specified free play is obtained.

Turn in →	Free play is decreased.
Turn out →	Free play is increased.

- Tighten the locknut.

CAUTION:


Proper lever free play is essential to avoid excessive brake drag.

⚠ WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the brake system. This air must be removed by bleeding the brake system before the motorcycle is operated. Air in the system will cause greatly diminished braking capability and can result in loss of control and an accident. Inspect and bleed the system if necessary.

REAR BRAKE ADJUSTMENT

INSP
ADJ

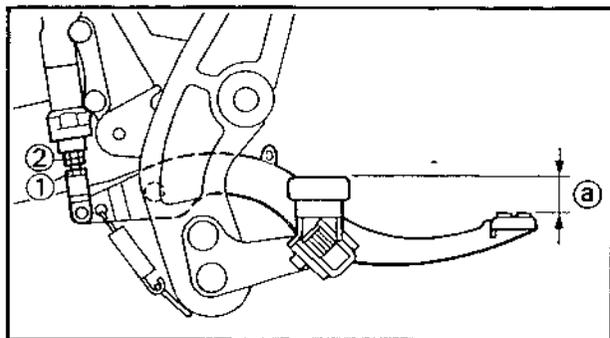

YB2A3004

REAR BRAKE ADJUSTMENT

1. Check:
 - Brake pedal height (a)Out of specification → Adjust.



Brake pedal height:
25 mm (0.98 in)
below top of footrest

2. Adjust:
 - Brake pedal height

Adjustment steps:

- Loosen the locknut (1).
- Turn the adjuster (2) in or out until the specified pedal height is obtained.

Turning in → Pedal height is increased.

Turning out → Pedal height is decreased.

⚠ WARNING

After adjusting the brake pedal height, visually check the adjuster end. The adjuster end must appear within 4.0 mm (0.16 in).

- Tighten the locknut.




Locknut:
18 Nm (1.8 m·kg, 13 ft·lb)

CAUTION:

Make sure that the brake does not drag after adjusting it.

⚠ WARNING

A soft or spongy feeling in the brake pedal can indicate the presence of air in the brake system. This air must be removed by bleeding the brake system before the motorcycle is operated. Air in the system will cause greatly diminished braking capability and can result in loss of control and an accident. Inspect and bleed the system if necessary.

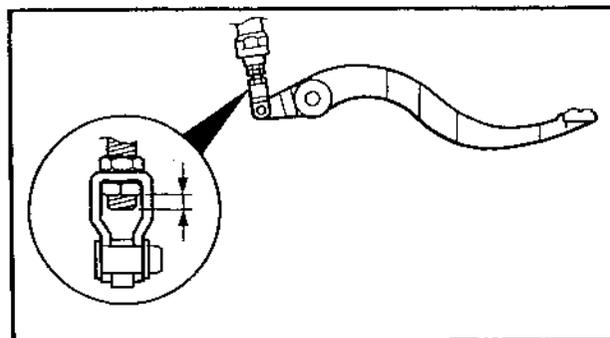



3. Adjust:

- Brake light switch

Refer to the "BRAKE LIGHT SWITCH ADJUSTMENT" section.

BRAKE FLUID LEVEL INSPECTION

1. Place the motorcycle on a level place.

NOTE:

- Position the motorcycle straight up when inspecting the brake fluid level.
- When inspecting the front brake fluid level, make sure the master cylinder top is horizontal by turning the handlebars.

2. Remove:

- Seat
- Side cover (right)


Refer to the "SEAT, FUEL TANK AND COVER" section.

3. Inspect:

- Brake fluid level

Fluid level is under "LOWER" level line

① → Fill up.

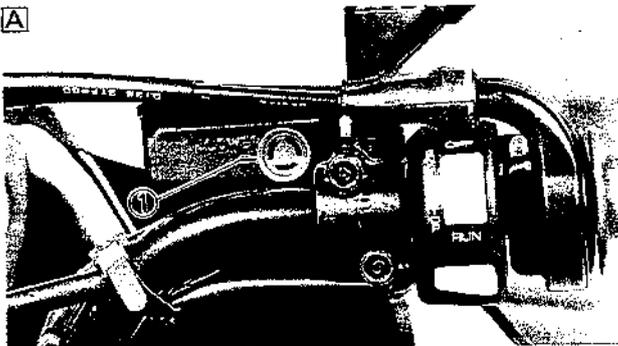

Recommended brake fluid:

Front: DOT No. 4

Rear: DOT No. 4

A Front

B Rear

CAUTION:

Brake fluid may erode painted surfaces or plastic parts. Always clean up spilled fluid immediately.



⚠ WARNING

- Use only the designated quality brake fluid; otherwise, the rubber seals may deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid; mixing fluids may result in a harmful chemical reaction and lead to poor performance.
- Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.

4. Install:

- Side cover (right)
- Seat



Bolt (side cover (right)):

7 Nm (0.7 m•kg, 5.1 ft•lb)

Bolt (seat):

10 Nm (1.0 m•kg, 7.2 ft•lb)



BRAKE PAD INSPECTION

1. Activate the brake lever or brake pedal.
2. Inspect:
 - Brake pad (front)
Wear indicator ① almost contacts brake disc → Replace brake pad as a set.
3. Check:
 - Pad thickness (rear)
Out of specification → Replace.



Wear limit:

Front: 1.0 mm (0.04 in)

Rear ②: 0.8 mm (0.03 in)

Refer to the "BRAKE PAD REPLACEMENT" section in the CHAPTER 7.

- A Front brake
B Rear brake



BRAKE LIGHT SWITCH ADJUSTMENT

NOTE:

The brake light switch is operated by movement of the brake pedal.

Proper adjustment is achieved when the brake light comes on just before the brake begins to take effect.

1. Check:

- Brake light operating timing
Incorrect → Adjust.

2. Adjust:

- Brake light operating timing

Adjustment steps:

Hold the switch body ① with your hand so that it does not rotate and turn the adjusting nut ②.

BRAKE HOSE INSPECTION

1. Inspect:




- Brake hose

Crack/Damage → Replace.

Refer to the "FRONT AND REAR BRAKE" section in the CHAPTER 7.

A Front

B Rear

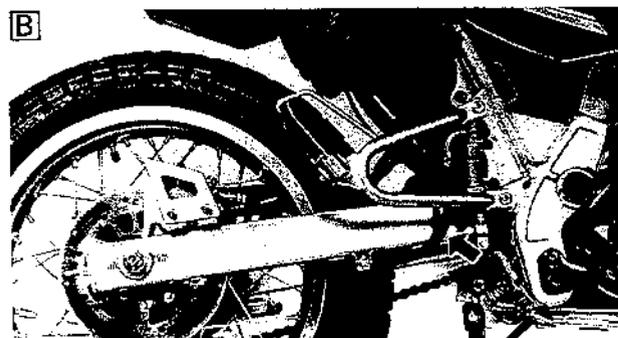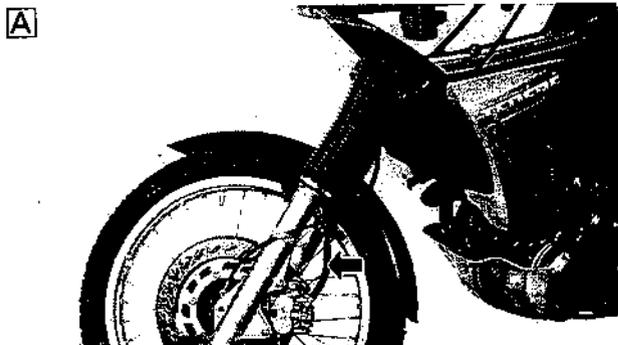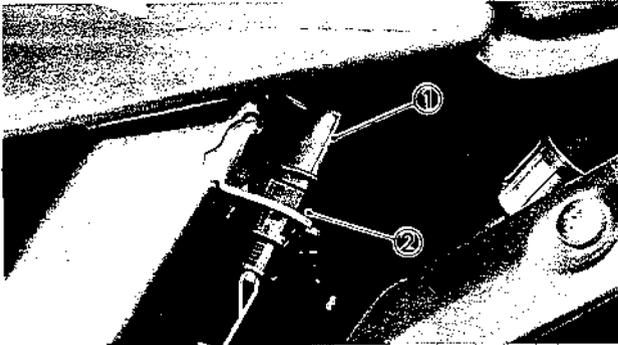


AIR BLEEDING (HYDRAULIC BRAKE SYSTEM)

⚠ WARNING

Bleed the brake system if:

- The system has been disassembled.
- A brake hose has been loosened or removed.
- The brake fluid is very low.
- The brake operation is faulty.

A dangerous loss of braking performance may occur if the brake system is not properly bled.

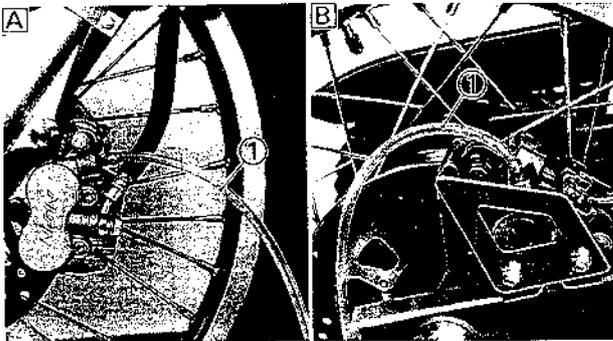

1. Bleed:

- Brake system

Air bleeding steps:

- Add proper brake fluid to the reservoir.
- Install the diaphragm. Be careful not to spill any fluid or allow the reservoir to overflow.
- Connect the clear plastic tube ① tightly to the caliper bleed screw.

- A** Front
- B** Rear

- Place the other end of the tube into a container.
- Slowly apply the brake lever or pedal several times.
- Pull the lever in or push down on the pedal. Hold the lever or pedal in position.
- Loosen the bleed screw and allow the lever or pedal to travel towards its limit.
- Tighten the bleed screw when the lever or pedal limit has been reached; then release the lever or pedal.

	Bleed screw: 6 Nm (0.6 m•kg, 4.3 ft•lb)
---	--

- Repeat steps (e) to (h) until all of the air bubbles have been removed from the system.

DRIVE CHAIN SLACK ADJUSTMENT



NOTE: _____

If the bleeding is difficult, it may be necessary to let the brake fluid system stabilize for a few hours. Repeat the bleeding procedure when the tiny bubbles in the system have disappeared.

- j. Add brake fluid to proper level.

⚠ WARNING _____

Check the operation of the brake after bleeding brake system.

YB2A4008

DRIVE CHAIN SLACK ADJUSTMENT

NOTE: _____

Before checking and/or adjusting, rotate the rear wheel several revolutions and check slack at several points to find the tightest point. Check and/or adjust the chain slack with the rear wheel in this "tightest" position.

CAUTION: _____

Too little of chain slack will overload the engine and other vital parts; keep the slack within the specified limits.

⚠ WARNING _____


Securely support the motorcycle so there is no danger of it falling over.

1. Place the motorcycle on a level place, and hold it in an upright position.

NOTE: _____


Both wheels should be on the ground without the rider on it.

DRIVE CHAIN SLACK ADJUSTMENT

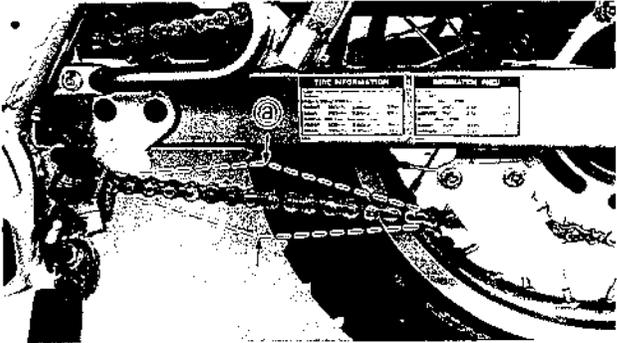

2. Check:
- Drive chain slack **a**
- Out of specification → Adjust.

 **Drive chain slack:**
 20 ~ 45 mm (0.79 ~ 1.77 in)
 at both wheels on ground
 without rider

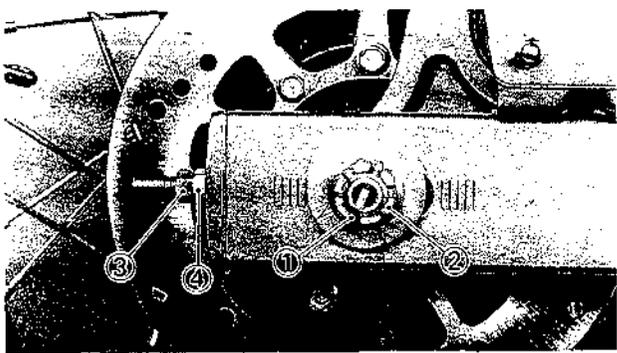

3. Adjust:
- Drive chain slack

Adjustment steps:

- Remove the cotter pin **1** and loosen the axle nut **2**.
- Loosen the locknut **3**.
- Turn the adjuster **4** in or out until the specified slack is obtained.

Turning in → Slack is increased.
 Turning out → Slack is decreased.

NOTE: _____


Turn each adjuster exactly the same amount to maintain correct axle alignment. (There are marks on each side of swingarm and on each chain puller; use them to check for proper alignment.)

- Tighten the axle nut to specification, while pushing up or down on the chain to zero slack.

 **Axle nut:**
 100 Nm (10.0 m•kg, 72 ft•lb)

- Tighten the locknut.

 **Locknut:**
 15 Nm (1.5 m•kg, 11 ft•lb)

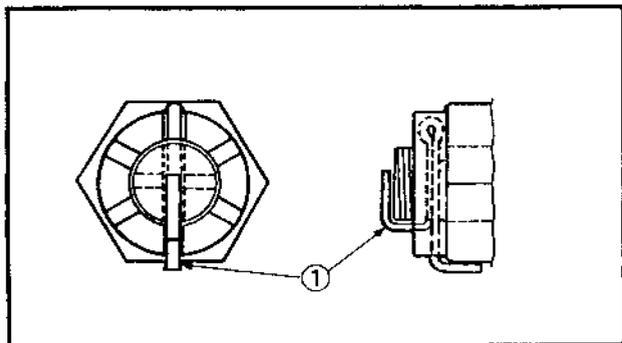

4. Install:

- Cotter pin ①

CAUTION:

Do not loosen the axle nut after torque tightening. If the axle nut groove is not aligned with the cotter pin hole, align groove with the hole by tightening up on the axle nut.

⚠ WARNING

Always use a new cotter pin.


YB2A4025

DRIVE CHAIN LUBRICATION

The chain consists of many parts which work against each other. If the chain is not maintained properly, it will wear out rapidly, therefore, form the habit of periodically servicing the chain. This service is especially necessary when riding in dusty conditions.

This motorcycle has a drive chain with small rubber O-rings between the chain plates.

Steam cleaning, high-pressure washes, and certain solvents can damage these O-rings. Use only kerosene to clean the drive chain. Wipe it dry, and thoroughly lubricate it with SAE 30~50W motor oil. Do not use any other lubricants on the drive chain. They may contain solvents that could damage the O-rings ①.

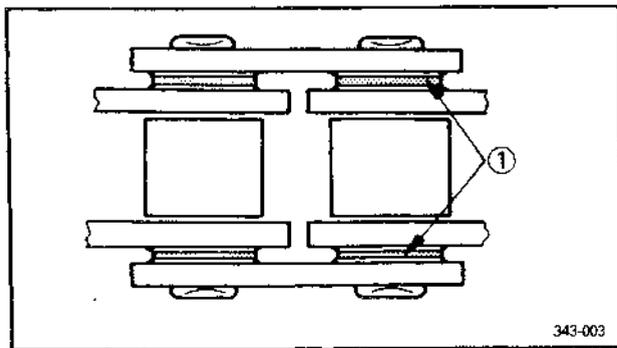

343-003



Recommended lubricant:
SAE 30~50W Motor Oil

STEERING HEAD ADJUSTMENT

INSP
ADJ




YB3A1000

STEERING HEAD ADJUSTMENT

⚠ WARNING





Securely support the motorcycle so there is no danger of it falling over.

1. Place the motorcycle on a level place.
2. Elevate the front wheel by placing a suitable stand under the frame and engine.

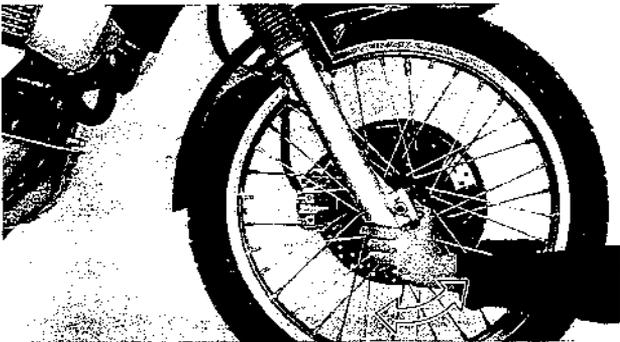

3. Check:
 - Steering assembly bearings
Grasp the bottom of the forks and gently rock the fork assembly back and forth.
Looseness→Adjust steering head.
4. Remove:
 - Seat
 - Side covers
 - Air scoops
 - Fuel tank
5. Adjust:
 - Steering head

STEERING HEAD ADJUSTMENT

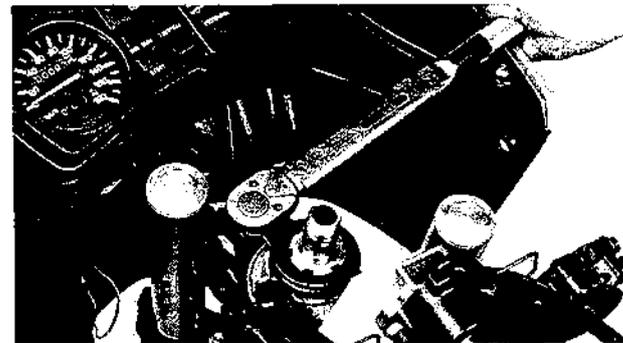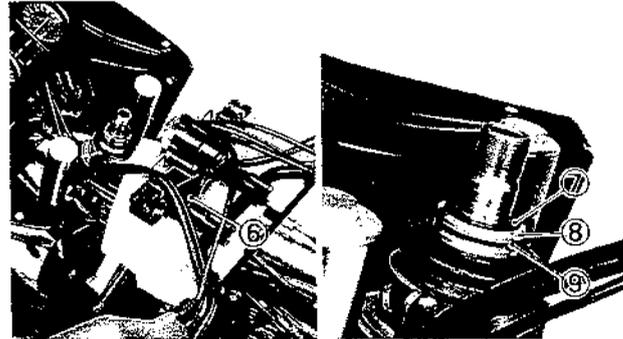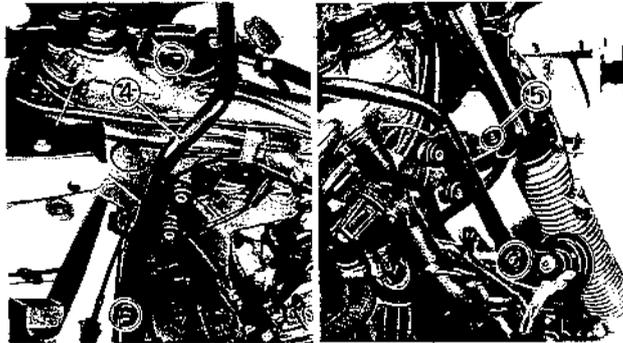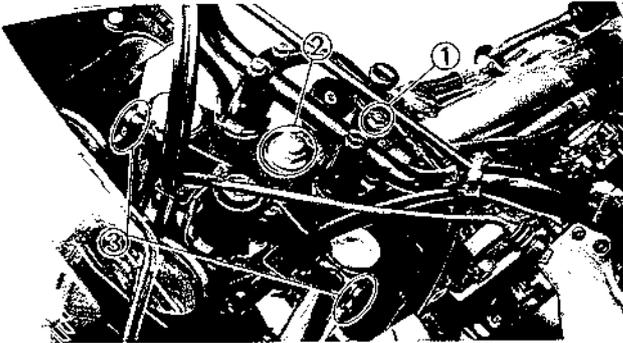

Adjustment steps:

- Remove the bolt ① ("CHOKE" knob assembly).
- Remove the nut ② (steering shaft) and loosen the bolt ③ (handlebar crown).
- Remove the fuel tank stay ④ and bolt (brake hose guide) ⑤.
- Put the rag around on the oil tank cap.
- Remove the handlebar crown ⑥ (with the handlebar) on the rug.
- Remove the stopper washer ⑦, second ring nut ⑧ and rubber washer. ⑨.
- Tighten the ring nut (lower) using the ring nut wrench.

NOTE: _____
Set the torque wrench to the ring nut wrench so that they form a right angle.

	Ring nut wrench: P/N. YU-33975 P/N. 90890-01403
---	--

	Ring nut (lower) (initial tightening): 43 Nm (4.3 m·kg, 31 ft·lb)
---	---

- Reset the handlebar crown (with the handlebar) on the front fork.
- Turn the handlebar to the left and right making sure there is no binding and then fully loosen the ring nut.
- Retighten the ring nut using the ring nut wrench.

⚠ WARNING _____
Avoid over-tightening.



Ring nut (final tightening):
7 Nm (0.7 m•kg, 5.1 ft•lb)

NOTE:

Recheck the steering head by turning the steering from lock to lock, after adjusting steering head.

If steering is binded, loosen the ring nut but not to the extent of free play in bearing.

If steering is loosened, repeat the adjustment steps.

- Install the rubber washer on the ring nut (lower); then finger tighten the ring nut (upper) until it contacts the rubber washer. Align the grooves of the lower and upper nuts and install the stopper washer.
- Tighten the nut (steering shaft) and bolt (handlebar crown).



Nut (steering shaft):
110 Nm (11 m•kg, 80 ft•lb)
Bolt (handlebar crown):
23 Nm (2.3 m•kg, 17 ft•lb)

- Tighten the bolt (brake hose guide), temporary tighten the bolt (fuel tank stay) and tighten the bolt ("CHOKE" knob assembly).



Bolt (brake hose guide):
7 Nm (0.7 m•kg, 5.1 ft•lb)
Bolt ("CHOKE" knob assembly):
23 Nm (2.3 m•kg, 17 ft•lb)

6. Install:
 - Fuel tank
7. Tighten:
 - Bolt (fuel tank stay)
 - Air scoops
 - Side covers
 - Seat



Bolt (fuel tank, cowling and fuel tank, side cover):
7 Nm (0.7 m•kg, 5.1 ft•lb)
Bolt (fuel tank stay):
15 Nm (1.5 m•kg, 11 ft•lb)
Bolt (seat):
10 Nm (0.7 m•kg, 7.2 ft•lb)

FRONT FORK INSPECTION/ REAR SHOCK ABSORBER ADJUSTMENT

INSP
ADJ




YB2A1001

FRONT FORK INSPECTION

⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.

1. Place the motorcycle on a level place.
2. Check:
 - Inner tube
Scratch/Damage → Replace.
 - Oil seal
Excessive oil leakage → Replace.
3. Hold the motorcycle on upright position and apply the front brake.
4. Check:
 - Operation
Pump the front fork up and down for several times.
Unsmooth operation → Repair.
Refer to the "FRONT FORK" section in the CHAPTER 7.

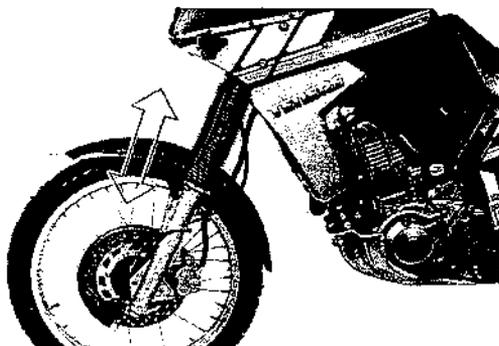

YB2A2002

REAR SHOCK ABSORBER ADJUSTMENT


⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.

1. Adjust:
 - Spring preload
 - Damping

REAR SHOCK ABSORBER ADJUSTMENT

INSP
ADJ

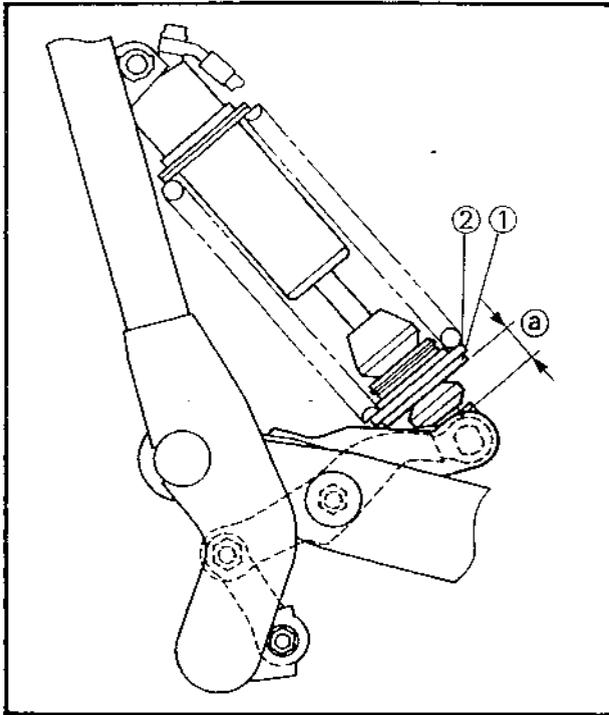

Adjustment steps:

Spring preload

- Loosen the locknut (1) using the ring nut wrench.



Ring nut wrench:
P/N. YM-38520
P/N. 90890-01443

- Turn the adjuster (2) in or out.

Turning in → Spring preload is increased.

Turning out → Spring preload is decreased.

NOTE:

The length of the spring (installed) changes 1.0 mm (0.04 in) per turn of the adjuster.



Measurement length (a):

Standard:

25.5 mm (1.0 in)

Minimum:

22.5 mm (0.89 in)

Maximum:

32.5 mm (1.28 in)

CAUTION:

Never attempt to turn the adjuster beyond the maximum or minimum setting.

- Tighten the locknut.



Locknut:
42 Nm (4.2 m•kg, 30 ft•lb)

CAUTION:

Always tighten the locknut against the spring adjuster and torque the locknut to specification.
